

[Manuals.plus](#) /

> [Epson](#) /

> Epson PowerLite S39 SVGA 3LCD Projector Instruction Manual (Model V11H854020)

## Epson V11H854020

# Epson PowerLite S39 SVGA 3LCD Projector Instruction Manual

Model: V11H854020

## INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Epson PowerLite S39 SVGA 3LCD Projector. Please read this manual thoroughly before operating the projector and retain it for future reference. Adhering to these instructions will ensure optimal performance and longevity of your device.

## SETUP

### 1. Unpacking and Placement

Carefully remove the projector and all accessories from the packaging. Ensure all components are present. Place the projector on a stable, flat surface, such as a table, ensuring adequate ventilation around the unit. Avoid placing it near heat sources or in direct sunlight.



Image: Front view of the Epson PowerLite S39 projector, highlighting the projection lens and front ventilation.

## 2. Connecting Power

1. Connect the supplied power cable to the AC inlet on the projector.
2. Plug the other end of the power cable into a grounded electrical outlet.

## 3. Connecting Input Sources

The projector supports various input sources. Connect your device (laptop, smartphone, tablet, gaming console) to the appropriate port on the projector's rear panel.



Image: Rear panel of the Epson PowerLite S39 projector, displaying available connectivity ports.

- **HDMI:** For high-definition digital video and audio. Connect an HDMI cable from your device to the HDMI port on the projector.
- **Computer (VGA):** For analog video input. Connect a VGA cable from your computer to the Computer 1 or Computer 2 port.
- **Video (RCA):** For standard definition analog video. Connect an RCA video cable to the yellow 'Video' port.
- **Audio In (RCA/Mini-jack):** For analog audio input. Connect audio cables to the L-Audio-R (RCA) or Audio1/Audio2 (mini-jack) ports as needed.
- **USB-A:** For connecting USB devices or a wireless display module.
- **USB-B:** For USB display or control.
- **Ethernet:** For network connectivity and control.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off

1. **To Power On:** Press the power button on the projector's control panel or remote control. The power light will turn blue.
2. **To Power Off:** Press the power button again. A confirmation message may appear; press the power button once more to confirm shutdown. The power light will flash and then turn off.



Image: Top view of the Epson PowerLite S39 projector, illustrating the control panel layout.

## 2. Adjusting Image Focus and Zoom

Rotate the focus ring on the projector lens until the image appears sharp and clear. Use the zoom ring (if available on your model) to adjust the image size without moving the projector.

## 3. Keystone Correction

If the projected image appears trapezoidal (wider at the top or bottom), use the keystone correction slider or buttons on the projector or remote control to square the image. The PowerLite S39 supports vertical keystone correction.

## 4. Selecting Input Source

Press the **Source Search** button on the control panel or remote control to cycle through available input sources (HDMI, Computer 1, Computer 2, Video, USB). The projector will automatically detect an active signal.

## 5. Menu Navigation

Use the **Menu** button to access projector settings. Navigate through options using the arrow buttons and confirm selections with the **Enter** button. Press **Esc** to exit menus.

## 6. Audio Output

The projector features a built-in speaker. For external audio, connect speakers to the Audio Out port on the rear panel.

# MAINTENANCE

---

## 1. Lamp Care

The projector lamp has a specified operating life (approximately 6000 hours). When the lamp life is nearing its end, a warning message may appear, or the lamp indicator light may illuminate. Refer to the full user guide for detailed lamp replacement procedures.

## 2. Air Filter Cleaning

Regularly clean the air filter to prevent dust buildup, which can lead to overheating and reduced performance. The frequency of cleaning depends on the operating environment. Consult the full user guide for instructions on how to access and clean the air filter.

## 3. General Cleaning

Wipe the projector's exterior with a soft, dry, lint-free cloth. Do not use liquid or abrasive cleaners. For the lens, use a lens cleaning cloth specifically designed for optical surfaces.

# TROUBLESHOOTING

---

If you encounter issues with your projector, refer to the following common solutions:

- **No Image Projected:**
  - Ensure the power cable is securely connected and the projector is powered on.
  - Verify that the input source is correctly connected and selected (press **Source Search**).
  - Check if the lens cap is removed.
  - Confirm the lamp is functioning; if the lamp indicator is red or flashing, the lamp may need replacement.
- **Image is Blurry:**
  - Adjust the focus ring on the projector lens.
  - Ensure the projection surface is flat and the projector is at an appropriate distance.
- **Image is Trapezoidal:**
  - Use the keystone correction feature to square the image.
- **No Sound:**
  - Check audio cable connections from your source device.
  - Adjust the volume on the projector and the source device.
  - Ensure the projector's audio output is not muted.
- **Projector Overheating:**
  - Ensure ventilation openings are not blocked.
  - Clean the air filter regularly.
  - Operate the projector in an environment with adequate airflow.

# SPECIFICATIONS

---

Feature	Specification
Brand	Epson
Model Name	V11H854020
Display Type	3LCD
Native Resolution	800 x 600 (SVGA)
Brightness	3300 ANSI Lumens
Contrast Ratio	15000:1
Light Source Operating Life	6000 Hours
Connectivity Technology	Ethernet, HDMI, USB
Compatible Devices	Laptop, Smartphone, Tablet, Gaming Console
Item Dimensions (L x W x H)	14.8" x 13.94" x 6.14"
Item Weight	2.7 Kilograms
Built-In Media	Wireless Display Module, Built-in Speaker

## WARRANTY AND SUPPORT

Your Epson PowerLite S39 Projector is covered by a manufacturer's warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included with your product or visit the official Epson support website. For technical assistance, product registration, or to download the complete user manual, please visit [Epson's official support website](#).