

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Whirlpool](#) /

› [Whirlpool W7739P122-60 Cooktop Fan Control Knob Instruction Manual](#)

Whirlpool WP7739P122-60

Whirlpool W7739P122-60 Cooktop Fan Control Knob Instruction Manual

Genuine Original Equipment Manufacturer (OEM) Part

1. Introduction

This document provides essential instructions for the installation, operation, and maintenance of your new Whirlpool W7739P122-60 Cooktop Fan Control Knob. This is a genuine Original Equipment Manufacturer (OEM) part designed for specific Jenn-Air cooktop models. It allows you to select the speed of your cooktop's ventilation fan.

Please read this manual thoroughly before attempting any installation or use to ensure proper function and safety.

2. Important Safety Information

- **Always disconnect power** to the cooktop at the circuit breaker or fuse box before attempting any repairs or installation. Failure to do so can result in electrical shock, injury, or death.
- Wear appropriate personal protective equipment (PPE), such as gloves, during installation.
- If you are unsure about any step, consult a qualified appliance technician.
- This part is a manufacturer substitution. While functionally equivalent, its appearance may differ slightly from the original part.
- Ensure the replacement part is compatible with your specific cooktop model before installation.

3. Product Compatibility

The Whirlpool W7739P122-60 Fan Control Knob is compatible with various Jenn-Air cooktop models. It replaces prior parts including 7739P122-60 and 71003548.

Compatible models include:

- CVE3401B
- JED8430BDB
- JED8430ADB

- JED8430ADW
- JED8430BDS18
- CVE3401W
- CVE3401Q
- JED8430BDN
- JED8430BDF18
- JED8430BDS
- JED8430ADQ
- JED8430BDB18
- JED8430BDF

Image: Important reminder to verify part compatibility with your appliance model.

It is crucial to verify your cooktop's model number to ensure this knob is the correct replacement part. Refer to your appliance's original manual or the model number label on the appliance itself.

4. Installation Instructions

This section outlines the general steps for replacing the fan control knob. For detailed, model-specific instructions, always refer to your cooktop's service manual.

1. **Disconnect Power:** Before beginning, ensure the cooktop's power supply is completely disconnected at the circuit breaker.
2. **Remove Old Knob:** Gently pull the old fan control knob straight off the control shaft. It should slide off with moderate force. Avoid twisting or prying forcefully, which could damage the shaft.
3. **Inspect Shaft:** Examine the control shaft for any damage or debris. Clean if necessary.
4. **Install New Knob:** Align the new Whirlpool W7739P122-60 knob with the control shaft. Push the knob firmly onto the shaft until it is fully seated. Ensure it rotates smoothly and engages correctly.
5. **Restore Power:** Once the new knob is securely in place, restore power to the cooktop at the circuit breaker.
6. **Test Functionality:** Test the fan control knob to ensure it operates correctly and allows you to select different fan speeds.



Image: Front view of the Whirlpool W7739P122-60 Cooktop Fan Control Knob.

Does your part fit?



Many replacement parts
look the same
but won't fit your model.

Don't be fooled!

Check your
model number
before you buy.

Image: Side view of the Whirlpool W7739P122-60 Cooktop Fan Control Knob, illustrating the shaft connection point.

5. Operation

The fan control knob is used to adjust the speed of your cooktop's ventilation fan. To operate:

1. Locate the fan control knob on your cooktop's control panel.
2. Rotate the knob to the desired fan speed setting (e.g., Low, Medium, High, Off). The specific markings may vary by cooktop model.
3. Ensure the fan responds to the selected setting.

6. Care and Maintenance

- **Cleaning:** To clean the knob, gently pull it off the shaft. Wash with mild soap and water, then dry thoroughly before reattaching. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically inspect the knob for any signs of wear, cracks, or damage. Replace if necessary to maintain proper function and appearance.
- **Proper Handling:** Avoid excessive force when turning the knob to prevent damage to the internal mechanism or the control shaft.

7. Troubleshooting

Problem	Possible Cause	Solution
Knob does not fit onto the shaft.	Incorrect part for your model; shaft sleeve not wide enough.	Double-check your cooktop's model number against the compatible list. Ensure the shaft type matches the knob's receptacle. Contact Whirlpool support if you believe you have the correct part but it still doesn't fit.
Knob feels loose or falls off.	Knob not fully seated; damaged control shaft; internal damage to knob.	Ensure the knob is pushed firmly onto the shaft. Inspect the control shaft for damage. If the shaft is damaged, it may require professional repair. If the knob itself is damaged, it needs replacement.
Fan does not respond when knob is turned.	Electrical issue with cooktop; damaged control switch; knob not engaging shaft.	Verify power to the cooktop. Ensure the knob is correctly installed and engaging the shaft. If the issue persists, the problem may lie with the cooktop's internal components, requiring professional diagnosis and repair.

8. Specifications

- **Part Number:** WP7739P122-60
- **Brand:** Whirlpool
- **Color:** Black
- **Exterior Finish:** Black
- **Compatible Device:** Jenn-Air Cooktops
- **Included Components:** 1 x Knob
- **Special Features:** Easy to Install, Sturdy
- **Manufacturer:** Whirlpool

9. Warranty and Support

As a genuine Original Equipment Manufacturer (OEM) part, this Whirlpool knob is manufactured to high-quality standards. For specific warranty information, please refer to the documentation provided with your original Jenn-Air cooktop or visit the official Whirlpool website.

For further assistance or technical support, please contact Whirlpool customer service or a certified appliance technician.



Image: Whirlpool official brand logo.

