

Geemarc TV-5_BLK

Geemarc TV5 Universal Remote Control User Manual

INTRODUCTION

The Geemarc TV5 is a simplified universal remote control designed for ease of use, particularly for individuals who prefer straightforward operation. It features 7 large, programmable buttons and an ergonomic design, allowing it to control up to two different infrared-compatible devices, such as a television and a DVD player.

PRODUCT OVERVIEW

The Geemarc TV5 remote control is engineered for simplicity and comfort. Its design focuses on essential functions, making it an ideal choice for users seeking an uncluttered control experience.

Key Features

- 7 large, programmable buttons for essential functions.
- Ergonomic design for comfortable single-hand operation.
- Ability to control two different infrared devices simultaneously.
- Requires an original remote control for initial programming.
- Powered by two AAA batteries (not included).

Components

- **Power Button:** Turns devices on or off.
- **Volume Up/Down Buttons:** Adjusts the audio volume.
- **Channel Up/Down Buttons:** Changes television channels.
- **AV Button:** Switches between video input sources (e.g., TV, HDMI, AV).
- **1-2 Button:** Selects which of the two programmed devices the remote will control.



This image displays the front of the Geemarc TV5 remote control, highlighting its seven large, clearly labeled buttons for power, volume, channel, AV input, and device selection (1-2).





A side view of the Geemarc TV5 remote, illustrating its contoured, ergonomic shape designed for comfortable single-hand

SETUP

1. Battery Installation


1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery cover securely.

2. Programming the Remote

The Geemarc TV5 remote learns commands from your original device remote controls. An original remote is required for this process.

1. Place the Geemarc TV5 remote and your original remote control face-to-face, with their infrared emitters aligned, approximately 1-3 cm apart.
2. Press and hold the **1-2** button on the Geemarc TV5 remote for approximately 5 seconds until the LED indicator light illuminates steadily.
3. Press the button on the Geemarc TV5 remote that you wish to program (e.g., Power button). The LED will flash slowly.
4. Press the corresponding button on your original remote control (e.g., Power button). The LED on the Geemarc TV5 remote will flash rapidly three times, then remain steady, indicating successful programming.
5. Repeat this process for all desired buttons (Volume Up/Down, Channel Up/Down, AV).
6. To program for a second device, press the **1-2** button again to switch to the second device mode. Repeat the programming steps with the second original remote.
7. Once all buttons are programmed, press the **1-2** button again to exit programming mode. The LED will turn off.
8. Test the programmed functions with your devices.

OPERATING INSTRUCTIONS

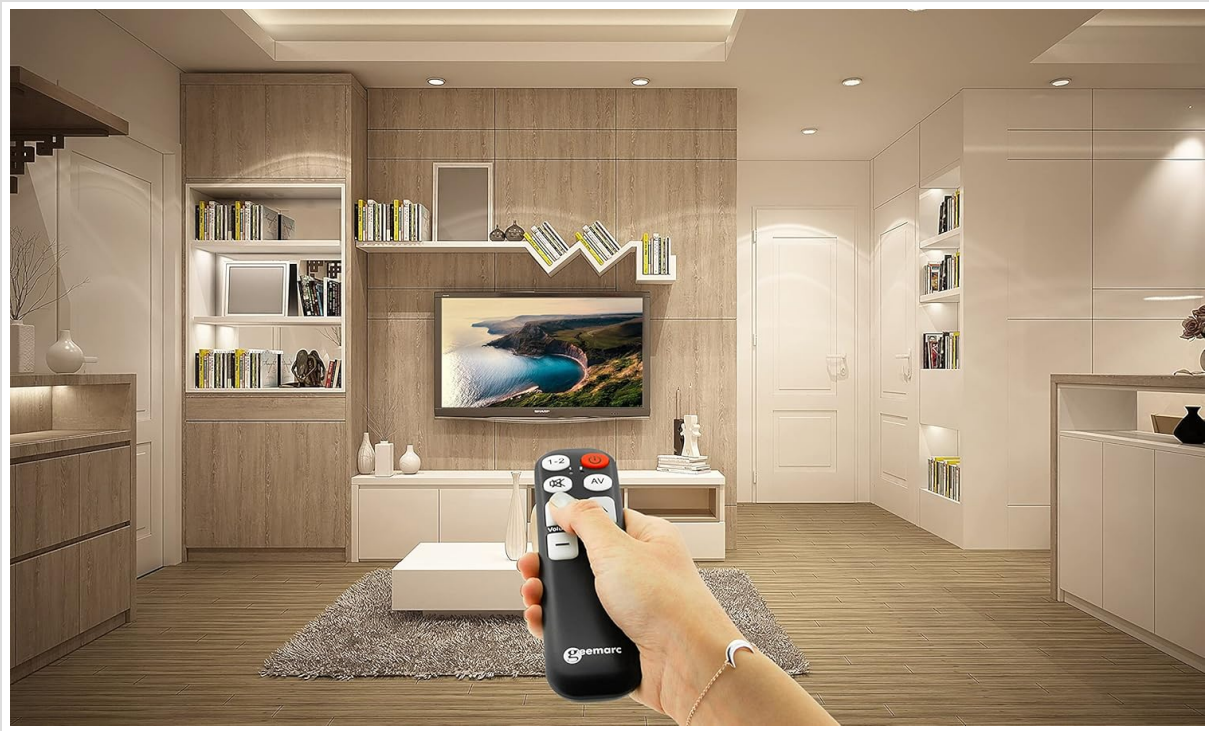

This image shows the Geemarc TV5 remote control comfortably held in a hand, demonstrating its practical use in a typical home environment.

- **Selecting a Device:** Press the **1-2** button to toggle between controlling the first programmed device (e.g., TV) and the second programmed device (e.g., DVD player).
- **Power On/Off:** Press the **Power** button to turn the selected device on or off.
- **Adjusting Volume:** Use the **Volume Up (+)** and **Volume Down (-)** buttons to control the audio level.
- **Changing Channels:** Use the **Channel Up (^)** and **Channel Down (v)** buttons to navigate through channels.
- **Changing Input Source:** Press the **AV** button to switch between different video input sources on your television.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's performance diminishes or the LED indicator does not light up during use. Always replace both batteries simultaneously with new AAA batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
 - Ensure there are no obstructions between the remote and the device's infrared receiver.
 - Verify that the remote is pointed directly at the device.
- **Buttons not working after programming:**
 - Reprogram the specific button. Ensure the original remote's infrared emitter is properly aligned with the Geemarc TV5's receiver during programming.

- Confirm that the original remote control is functioning correctly.
- **Remote controls the wrong device:**
 - Ensure you have selected the correct device mode using the **1-2** button.
 - If programming for two devices, ensure you programmed the correct commands for each device mode.

SPECIFICATIONS

Feature	Detail
Model Name	TV5
Model Number	TV-5_BLK
Brand	Geemarc
Connectivity Technology	Infrared
Number of Buttons	7
Compatible Devices	Up to 2 (simultaneously)
Power Source	2 x AAA batteries (not included)
Maximum Range	10 Meters
Special Feature	Ergonomic Design
Color	Black
Country of Origin	China

WARRANTY AND SUPPORT

- **Spare Parts Availability:** Spare parts for the Geemarc TV5 remote control are available for 1 year from the date of purchase.
- For further assistance or technical support, please refer to the Geemarc official website or contact their customer service.