

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Goodmans](#) /

› [Goodmans Canvas DAB/FM Portable Stereo Radio User Manual \(Model CANVAS2COP\)](#)

Goodmans CANVAS2COP

Goodmans Canvas DAB/FM Portable Stereo Radio

MODEL: CANVAS2COP

INTRODUCTION

Thank you for purchasing the Goodmans Canvas DAB/FM Portable Stereo Radio. This manual provides essential information for the safe and efficient operation of your device. Please read these instructions carefully before use and retain them for future reference.

The Goodmans Canvas radio features DAB+ and FM reception, a 2.4-inch color TFT display, and can be powered by mains or batteries, offering portability and versatility. It also includes a 3.5mm headphone jack, station presets, an alarm function, and a kitchen timer.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Goodmans Canvas radio.



Front view of the Goodmans Canvas radio, showcasing the speaker grille, color display, and extended telescopic antenna.



A close-up view of the top panel controls, including Volume, Select, Channel, Preset, Info/Menu, DAB/FM, and Power buttons.

Controls and Display

- **Power Button:** Turns the radio on or off.
- **DAB/FM Button:** Switches between DAB+ and FM radio modes.
- **Info/Menu Button:** Displays station information or accesses the menu settings.
- **Preset Button:** Accesses and saves favorite radio stations.
- **Channel +/- Buttons:** Navigates through stations or menu options.
- **Select Button:** Confirms selections in the menu.
- **Volume +/- Buttons:** Adjusts the audio output level.
- **2.4" Color TFT Display:** Shows station information, menu options, and slideshow content.
- **Telescopic Antenna:** Extends for optimal radio signal reception.
- **3.5mm Headphone Jack:** For private listening.

SETUP

Powering the Radio

The Goodman Canvas radio can be powered using the included mains adapter or by batteries for portable use.

1. **Mains Power:** Connect the mains adapter to the DC IN socket on the radio and then plug it into a wall outlet.
2. **Battery Power:** Open the battery compartment cover on the rear of the radio. Insert the required batteries (not supplied) according to the polarity markings. Close the compartment cover securely.

Initial Setup and Station Scan

1. **Extend Antenna:** Fully extend the telescopic antenna for best reception.
2. **Power On:** Press the **Power** button to turn on the radio.
3. **DAB Scan (First Use):** Upon first power-on, the radio will automatically perform a full scan for DAB+ stations. This may take a few minutes. The display will show the scanning progress.
4. **FM Scan:** If in FM mode, press and hold the **Info/Menu** button to access the menu, then navigate to 'Scan' and press **Select** to initiate an automatic scan for FM stations.

OPERATING

Switching Modes (DAB/FM)

Press the **DAB/FM** button to toggle between Digital Audio Broadcasting (DAB+) and Frequency Modulation (FM) radio modes.

DAB+ Radio Operation

1. Ensure the radio is in DAB+ mode.
2. Use the **Channel +/-** buttons to scroll through the list of available DAB+ stations.
3. Press the **Select** button to tune into the desired station.
4. Press the **Info/Menu** button repeatedly to cycle through different information displays, such as program type, signal strength, and text messages (DLS).

FM Radio Operation

1. Ensure the radio is in FM mode.
2. Use the **Channel +/-** buttons to manually tune the frequency.
3. Alternatively, press and hold **Channel +/-** to automatically scan for the next available station.
4. Press the **Info/Menu** button repeatedly to cycle through different information displays, such as RDS (Radio Data System) information.

Saving and Recalling Presets

You can save your favorite stations for quick access.

1. **To Save:** Tune to the desired station. Press and hold the **Preset** button. Use **Channel +/-** to select a preset number (1-10). Press **Select** to confirm.
2. **To Recall:** Press the **Preset** button briefly. Use **Channel +/-** to scroll through saved presets. Press **Select** to tune to the desired preset.

Alarm Function

Set an alarm to wake up to your favorite radio station or a buzzer.

1. Press and hold the **Info/Menu** button to enter the main menu.
2. Navigate to 'Alarm' using **Channel +/-** and press **Select**.
3. Follow the on-screen prompts to set the alarm time, source (DAB, FM, or Buzzer), and volume.
4. Press **Select** to confirm each setting.

Kitchen Timer

The radio includes a convenient kitchen timer function.

1. Press and hold the **Info/Menu** button to enter the main menu.
2. Navigate to 'Kitchen Timer' using **Channel +/-** and press **Select**.
3. Use **Channel +/-** to set the desired countdown time.
4. Press **Select** to start the timer. An audible alert will sound when the time expires.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the radio's surface. Do not use abrasive cleaners or solvents.
- **Antenna Care:** Handle the telescopic antenna gently to avoid damage.
- **Battery Replacement:** If using batteries, replace them when the low battery indicator appears on the display or when performance degrades. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** If storing the radio for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Solution
No power	Check if the mains adapter is securely connected. If using batteries, ensure they are inserted correctly and are not depleted.
Poor radio reception	Fully extend the telescopic antenna. Try repositioning the radio. Perform a full scan for stations again. Check for local interference sources.
No sound	Increase the volume. Ensure headphones are not connected if you expect sound from the speaker.
Display shows 'No DAB Service'	You may be in an area with poor DAB+ coverage. Try moving the radio or performing a full scan.

SPECIFICATIONS

Feature	Detail
Brand	Goodmans
Model Number	CANVAS2COP
Radio Bands	DAB+, FM with RDS
Display	2.4" Color TFT with slideshow function
Connectivity	3.5mm Headphone Jack, Auxiliary (implied by 'Connexions: Auxiliaire' but not explicitly stated as input)
Power Source	Mains (AC adapter) or Battery powered

Feature	Detail
Special Features	Digital Tick certification, Alarm function, Kitchen timer
Color	Copper

WARRANTY AND SUPPORT

Goodmans products are designed to meet high-quality standards. For warranty information or technical support, please refer to the documentation provided with your purchase or visit the official Goodmans website. Keep your proof of purchase for any warranty claims.