

Best Choice Products SKY4227

Best Choice Products 6ft Artificial Flocked Christmas Tree
Instruction Manual

Model: SKY4227 | Brand: Best Choice Products

INTRODUCTION

Thank you for choosing the Best Choice Products 6ft Artificial Flocked Christmas Tree. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your new holiday décor. Please read all instructions carefully before setup and retain this manual for future reference.

Safety Warning: Keep all parts away from open flames and heat sources. Ensure the tree is assembled on a stable, level surface to prevent tipping. This tree is unlit; use only approved indoor Christmas lights.

PACKAGE CONTENTS

- Christmas Tree Sections (typically 3 sections for a 6ft tree)
- Foldable Metal Stand
- Assembly Hardware (e.g., screws for stand)

SETUP

- 1. Assemble the Stand:** Unfold the metal stand and ensure it is stable. Insert the provided screws to secure the legs if necessary.
- 2. Insert Bottom Section:** Place the largest tree section (bottom) into the assembled metal stand. Tighten the screw on the stand to firmly hold the tree trunk.
- 3. Attach Middle Section:** Insert the middle tree section into the top of the bottom section.
- 4. Attach Top Section:** Insert the smallest tree section (top) into the top of the middle section.
- 5. Fluff the Branches:** Starting from the bottom, gently pull apart and shape each branch to create a full, natural appearance. Work your way up to the top. This process may take some time to achieve the desired fullness.





Image: Tree dimensions (6ft height, 45in diameter).



Image: Family decorating the tree, illustrating the fluffing process.

Your browser does not support the video tag.

Video: A user demonstrating the assembly and initial fluffing of a similar flocked Christmas tree, highlighting the ease of setup.

OPERATING (DECORATING)

Your Best Choice Products Christmas tree is designed as an unlit canvas for your personal holiday style. Once assembled and fluffed, you can begin decorating:

- **Add Lights:** Wrap your preferred string lights around the branches, starting from the bottom and working your way up. Ensure all lights are rated for indoor use and follow manufacturer safety guidelines.
- **Hang Ornaments:** Distribute ornaments evenly across the tree, placing larger ornaments deeper within the branches and smaller ones towards the tips.

- **Add Garland/Ribbon:** Drape garland or ribbon around the tree to add texture and color.
- **Place Tree Topper:** Secure your chosen tree topper to the top-most branch.



Image: A fully decorated flocked Christmas tree, showcasing its potential.



Handwoven tree collars
complete your holiday display
**sold separately*

Image: A child adding string lights to the tree.

MAINTENANCE

- **Cleaning:** Dust the tree gently with a soft cloth or duster. Avoid using harsh chemicals or excessive water, as this may damage the flocking.
- **Storage:** When not in use, disassemble the tree by reversing the setup steps. Store the tree in its original box or a dedicated tree storage bag in a cool, dry environment. Avoid storing in attics or garages where extreme temperature fluctuations can affect the flocking and material integrity.

TROUBLESHOOTING

- **Flocking Shedding:** Some shedding of the artificial snow flocking is normal during initial setup and handling. This can be minimized by gentle handling during assembly and decorating. For long-term maintenance, flocking can be reapplied if desired.
- **Tree Instability:** Ensure the metal stand is fully unfolded and the tree sections are securely inserted. Tighten all screws on

the stand to provide maximum stability.

- **Branches Not Full:** After assembly, take ample time to individually shape and spread out each branch tip. This 'fluffing' process is crucial for achieving the tree's intended full appearance.

Your browser does not support the video tag.

Video: A user demonstrating the fluffing process of a flocked Christmas tree, showing how to achieve a full look.

SPECIFICATIONS

Feature	Detail
Brand	Best Choice Products
Model Number	SKY4227
Product Dimensions	42"D x 42"W x 72"H (6ft)
Color	Green (Flocked)
Material	100% PVC tips, metal stand
Item Weight	17.4 Pounds
Tip Count (for 6ft)	928
Built-in Light	No
Included Components	Christmas tree, Foldable stand
UPC	842957105298

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact Best Choice Products directly through their official website or customer service channels. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B077BXZBBJ>

More documents and user manuals: <https://manuals.plus/>