

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Invicta](#) /
- › [Invicta Men's Bolt Quartz Watch Model 25513 Instruction Manual](#)

## Invicta 25513

# Invicta Men's Bolt Quartz Watch Model 25513 Instruction Manual

Model: 25513

## PRODUCT OVERVIEW

---

This manual provides instructions for the Invicta Men's Bolt Quartz Watch, Model 25513. This timepiece features a quartz movement, analog display, and a stainless steel band. It includes chronograph functions and is water-resistant up to 330 feet (100 meters), suitable for swimming and snorkeling. The watch is powered by an LR44 battery and features a durable Synthetic Sapphire crystal.



Figure 1: Front view of the Invicta Men's Bolt Quartz Watch, Model 25513, showcasing its blue dial and stainless steel band.

## SETUP AND INITIAL USE

### Setting the Time

1. **Pull the crown out to position 2.** The crown is the small knob on the side of the watch case.
2. **Rotate the crown** to move the hour and minute hands to the desired time.
3. **Push the crown back into position 1** to start the watch.

### Setting the Date

1. **Pull the crown out to position 1.**
2. **Rotate the crown clockwise** to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
3. **Push the crown back into its original position** once the correct date is set.



Figure 2: Side view illustrating the crown and chronograph pushers on the watch case.

## OPERATING THE CHRONOGRAPH

The Invicta Bolt Model 25513 features a chronograph function for measuring elapsed time.

1. **Starting the Chronograph:** Press the top pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stopping the Chronograph:** Press the top pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Resetting the Chronograph:** After stopping, press the bottom pusher (B) to reset all chronograph hands to their zero positions.

## Split Time Measurement

This function allows you to measure intermediate times without stopping the main timing.

1. **Start:** Press pusher (A) to start the chronograph.
2. **Split:** Press pusher (B) to measure a split time. The chronograph hands will stop, indicating the intermediate time, while the internal timing continues.

3. **Resume:** Press pusher (B) again to release the split time. The chronograph hands will instantly catch up to the ongoing elapsed time.
4. **Stop:** Press pusher (A) to stop the chronograph.
5. **Reset:** Press pusher (B) to reset the chronograph to zero.



Figure 3: Detailed view of the watch face, highlighting the chronograph subdials and their indicators.

## WATER RESISTANCE

The Invicta Bolt Model 25513 is water-resistant up to 330 feet (100 meters). This rating makes it suitable for swimming and snorkeling. However, it is **not recommended for scuba diving**.

- Ensure the crown is fully pushed in before any contact with water.
- Do not operate the crown or pushers while the watch is wet or submerged.
- Avoid exposing the watch to hot water, steam, or extreme temperature changes, as this can compromise the water seals.

Your browser does not support the video tag.

Video 1: An official product video showcasing the Invicta Men's Bolt Quartz Watch, Model 25513, in various settings, including water activities, demonstrating its design and water resistance.

## MAINTENANCE

---

### Cleaning

To maintain the appearance of your watch, wipe the case and band regularly with a soft, dry cloth. For stainless steel bands, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or abrasive materials.

### Battery Replacement

The watch is powered by one LR44 battery. When the watch stops or the second hand begins to jump in irregular intervals (indicating low battery), the battery needs to be replaced. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

### Water Resistance Check

For watches frequently exposed to water, it is advisable to have the water resistance checked annually by an authorized service center. This ensures the integrity of the gaskets and seals.

## TROUBLESHOOTING

---

- **Watch Not Running:**

- Check if the crown is fully pushed in.
- The battery may need replacement. Consult a professional watch technician.

- **Date Not Changing:**

- Ensure the time is set correctly (AM/PM). The date typically changes around midnight.
- Avoid setting the date manually between 9 PM and 3 AM.

- **Chronograph Hands Not Resetting to Zero:**

- This may require a chronograph hand calibration. Refer to a professional watch technician or the detailed movement manual if available.

## SPECIFICATIONS

---

Feature	Detail
Model Number	25513
Movement Type	Quartz
Display Type	Analog
Case Material	Stainless Steel
Band Material	Stainless Steel
Crystal Type	Synthetic Sapphire
Case Diameter	52 Millimeters

Case Thickness	18.5 Millimeters
Band Width	26 Millimeters
Band Length	9 Inches
Water Resistance Depth	330 Feet (100 Meters)
Additional Features	Chronograph
Battery Type	1 LR44 (included)
Item Weight	10.8 Ounces



Figure 4: The Invicta watch is typically presented in a distinctive yellow and black box.

## WARRANTY AND SUPPORT

This Invicta watch comes with a manufacturer's warranty. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your purchase or visit the official Invicta website.

For technical support, service, or warranty claims, please contact Invicta customer service through their

official channels. Keep your proof of purchase and model number (25513) readily available when seeking support.

You can find more information and support resources on the official Invicta website: [Invicta Official Store](#)