

RCA RTS7113WS

RCA RTS7113WS Bluetooth 37" Home Theater Sound Bar with Wireless Subwoofer User Manual

INTRODUCTION

The RCA RTS7113WS is a 37-inch home theater sound bar system designed to enhance audio output for televisions and other compatible devices. This system includes a sound bar and a wireless subwoofer, providing a 2.1 channel audio experience with extended bass response. It features Bluetooth connectivity for wireless audio streaming from various devices, along with multiple wired input options for versatile integration into your home entertainment setup.

PACKAGE CONTENTS

Please check the package carefully to ensure all items are present and in good condition.

- RCA RTS7113WS Sound Bar Unit
- Wireless Subwoofer
- Remote Control (with battery)
- Power Adapter for Sound Bar (not explicitly listed but implied for operation)
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your sound bar system.



Image: The RCA RTS7113WS sound bar and its accompanying wireless subwoofer, shown together. The sound bar is long and slender, designed to sit horizontally, while the subwoofer is a compact, cube-shaped unit. This image provides an overall view of the system components.



Image: A view of the RCA RTS7113WS sound bar and wireless subwoofer from a slightly elevated and angled perspective. This image highlights the sleek design of both units and their relative sizes, with the sound bar positioned in front of the subwoofer.



Image: A close-up shot of the end cap of the RCA RTS7113WS sound bar. This detail shows the textured grille fabric covering the speaker drivers and the glossy black finish of the end cap, indicating the aesthetic design of the unit.

Sound Bar Front Panel

- **LED Indicators:** Four blue LED indicators display power status, input mode, and volume levels.

Sound Bar Top Panel Controls

- **Power Button:** Turns the sound bar on or off.
- **Input Button:** Cycles through available audio input sources (Bluetooth, Optical, Coaxial, AUX, Line-in).
- **Volume Up/Down Buttons:** Adjusts the master volume level.

Sound Bar Rear Panel Connections

- **Optical Input:** For connecting to devices with an optical digital audio output.
- **Coaxial Digital Input:** For connecting to devices with a coaxial digital audio output.
- **AUX Audio Inputs (L/R):** For connecting analog audio devices using RCA cables.
- **Line-in Jack (3.5mm):** For connecting portable audio devices like MP3 players.
- **DC IN:** Power input for the sound bar.

Wireless Subwoofer

- **Power Indicator:** Shows the power status and pairing status.
- **Power Cord:** Connects to an AC power outlet.

Remote Control

The included remote control provides full functionality for the sound bar system.

- **Power:** On/Off.
- **Input Select:** Choose audio source.
- **Volume +/-:** Adjust volume.
- **Treble +/-:** Adjust high-frequency sound.
- **Bass +/-:** Adjust low-frequency sound.
- **Mute:** Mute/unmute audio.

SETUP

1. Placement

1. **Sound Bar:** Place the sound bar on a stable, flat surface in front of your television, or mount it on the wall below your TV. Ensure no objects obstruct the front of the sound bar.
2. **Wireless Subwoofer:** Position the subwoofer on the floor near the sound bar. For optimal bass performance, experiment with different locations within the room.

2. Power Connection

1. Connect the power adapter to the DC IN port on the sound bar, then plug the adapter into a wall outlet.
2. Plug the subwoofer's power cord into a wall outlet.

3. Audio Connection (Choose One)

Select the best audio connection method for your television or audio source.

1. **Optical (Recommended):** Connect an optical cable (not included) from your TV's Optical Digital Audio Out

port to the OPTICAL IN port on the sound bar.

2. **Coaxial:** Connect a coaxial digital audio cable (not included) from your TV's Coaxial Digital Audio Out port to the COAXIAL IN port on the sound bar.
3. **AUX:** Connect an RCA audio cable (not included) from your TV's Audio Out (L/R) ports to the AUX IN (L/R) ports on the sound bar.
4. **Line-in:** Connect a 3.5mm audio cable (not included) from your device's headphone jack or Line Out to the LINE-IN jack on the sound bar.

4. Wireless Subwoofer Pairing

The wireless subwoofer should automatically pair with the sound bar upon powering on both units. If pairing does not occur automatically, or if the connection is lost:

- Ensure both the sound bar and subwoofer are powered on.
- The subwoofer's power indicator will flash when searching for a connection and turn solid when successfully paired.
- If manual pairing is required (refer to specific instructions in the full product manual if provided), typically there is a 'Pair' button on the subwoofer to initiate pairing mode.

OPERATING INSTRUCTIONS

Power On/Off

- Press the **Power** button on the sound bar or remote control to turn the unit on or off.

Selecting an Input Source

- Press the **Input** button on the sound bar or remote control repeatedly to cycle through the available input sources: Bluetooth, Optical, Coaxial, AUX, and Line-in. The LED indicators on the sound bar will change to reflect the selected input.

Adjusting Volume

- Press the **Volume +** or **Volume -** buttons on the sound bar or remote control to increase or decrease the master volume.
- Press the **Mute** button on the remote control to temporarily silence the audio. Press again to restore sound.

Adjusting Treble and Bass

- Use the **Treble +/-** and **Bass +/-** buttons on the remote control to fine-tune the high and low frequencies of the audio output.

BLUETOOTH PAIRING

To stream audio wirelessly from a Bluetooth-enabled device:

1. Power on the sound bar.
2. Press the **Input** button on the sound bar or remote control until the Bluetooth input is selected (indicated by the LED). The sound bar will enter pairing mode, and the Bluetooth LED will flash.
3. On your Bluetooth device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "RCA RTS7113WS" from the list of found devices.
5. Once connected, the Bluetooth LED on the sound bar will stop flashing and remain solid. You can now play

audio from your device through the sound bar system.

MAINTENANCE

Cleaning

- Always unplug the sound bar and subwoofer from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the surfaces of the sound bar and subwoofer.
- Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as these may damage the finish or internal components.

Storage

- If you plan to store the unit for an extended period, unplug it from the power source and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your sound bar system, refer to the following common solutions.

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active	Ensure power cords are securely plugged into the sound bar, subwoofer, and a working wall outlet.
No sound	Incorrect input selected; Volume too low; Mute function active; Incorrect audio cable connection	Select the correct input source. Increase volume. Deactivate mute. Check audio cable connections between the sound bar and source device. Ensure TV audio output is set correctly.
Poor sound quality	Loose connections; Source audio quality; Interference	Check all cable connections. Try a different audio source. Ensure no strong electromagnetic devices are near the sound bar.
Bluetooth not connecting	Sound bar not in pairing mode; Device Bluetooth off; Out of range	Ensure sound bar is in Bluetooth input mode and flashing. Enable Bluetooth on your device. Move device closer to the sound bar (within 30 feet/10 meters).
Remote control not working	Battery depleted; Obstruction; Out of range	Replace the remote control battery. Remove any obstructions between the remote and the sound bar. Ensure you are within range and pointing the remote at the sound bar's sensor.
Subwoofer not producing sound	Subwoofer not powered; Not paired with sound bar	Ensure subwoofer is plugged in and powered on. Verify the subwoofer is successfully paired with the sound bar (solid LED indicator).

SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	RCA
Model Number	RTS7113WS
Speaker Maximum Output Power	60 Watts (Total)
Number of Audio Channels	2.1
Connectivity Technology	Auxiliary, Bluetooth, Optical, Coaxial
Wireless Technology	Bluetooth
Subwoofer Connectivity	Wireless
Control Method	Remote Control
Speaker Size (Woofer)	4 Inches
Impedance	8 Ohms
Power Source	Adaptor-Powered
Color	Black
Item Weight	6.02 Pounds
Compatible Devices	Laptop, MP3 Player, Smartphone, Tablet, Television

WARRANTY INFORMATION

This RCA RTS7113WS sound bar system is covered by a **1-year manufacturer's limited warranty** from the date of original purchase. This warranty covers defects in materials and workmanship under normal use. For full details regarding warranty terms, conditions, and how to make a claim, please refer to the warranty card included with your product or visit the official RCA support website. Keep your purchase receipt as proof of purchase for warranty service.

SUPPORT

For technical assistance, customer service, or further inquiries regarding your RCA RTS7113WS sound bar system, please refer to the contact information provided in your product packaging. You may also visit the official RCA support website for additional resources, FAQs, and contact options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question