

[Manuals.plus](#) /

> [AICOK](#) /

> AICOK Steam Iron ES2416 User Manual

AICOK ES2416

AICOK Steam Iron ES2416 User Manual

Model: ES2416

1. INTRODUCTION

Thank you for purchasing the AICOK Steam Iron ES2416. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new steam iron. Please read these instructions carefully before first use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the voltage rating on the appliance corresponds to your mains supply voltage.
- Do not leave the iron unattended while it is connected to the power supply or on an ironing board.
- Keep the iron and its cord out of reach of children.
- Do not immerse the iron, cord, or plug in water or other liquids.
- Unplug the iron from the outlet before filling with water, emptying, or when not in use.
- Use the iron only for its intended purpose.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Place the iron on a stable, heat-resistant surface when resting.
- Never direct steam towards people or pets.
- Do not use chemical descaling products in the iron.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your AICOK Steam Iron ES2416.



Image 1: AICOK Steam Iron ES2416. This image displays the overall design of the black and silver steam iron, highlighting its non-stick soleplate, water tank, temperature dial, and steam control buttons.

1. **Spray Nozzle:** Emits a fine mist of water.
2. **Water Filling Inlet:** Opening for adding water to the tank.
3. **Steam Control Lever:** Adjusts steam output (Dry, Min, Max).
4. **Spray Button:** Activates the spray function.
5. **Steam Burst Button:** Delivers a powerful burst of steam.
6. **Handle:** Ergonomic grip for comfortable use.
7. **Power Cord:** Connects to the electrical outlet.
8. **Temperature Control Dial:** Selects the desired fabric temperature.
9. **Indicator Light:** Illuminates when the iron is heating and turns off when the set temperature is reached.
10. **Water Tank:** Transparent reservoir for water.
11. **Non-Stick Soleplate:** Smooth surface for gliding over fabrics.

4. SETUP AND FIRST USE

4.1 Before First Use

- Remove any labels or protective film from the soleplate.
- It is normal for a slight odor or smoke to occur during the first few minutes of use as manufacturing residues burn off. This is temporary.
- Test the iron on an old piece of fabric to ensure no residue is transferred.

4.2 Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Set the steam control lever to the "Dry Ironing" position (no steam).
3. Open the water filling inlet cover.
4. Using a measuring cup, carefully pour tap water into the water tank up to the "MAX" level indicator. Do not overfill.
5. Close the water filling inlet cover securely.

Note: For areas with hard water, it is recommended to use a mixture of 50% tap water and 50% distilled water to prevent mineral buildup.

5. OPERATING INSTRUCTIONS

5.1 Temperature Selection

1. Check the fabric care label for recommended ironing temperature.
2. Plug the iron into a suitable power outlet.
3. Turn the temperature control dial to the desired setting. The indicator light will illuminate.
4. Wait for the indicator light to turn off, indicating the iron has reached the selected temperature. It will cycle on and off during use to maintain temperature.

5.2 Dry Ironing

- Ensure the water tank is empty or the steam control lever is set to "Dry Ironing".
- Select the appropriate temperature for your fabric.
- Once the indicator light turns off, begin ironing.

5.3 Steam Ironing

- Fill the water tank as described in Section 4.2.
- Set the temperature control dial to the "Steam" range (usually between two dots or higher, depending on the fabric). Steam is only produced at higher temperatures.
- Once the indicator light turns off, move the steam control lever to the desired steam output (Min or Max).
- Begin ironing.

5.4 Vertical Steam

- Ensure the water tank is filled and the iron is heated to a high temperature setting (e.g., Linen or Cotton).
- Hold the iron vertically, about 1-2 inches away from the fabric.
- Press the steam burst button repeatedly to release bursts of steam. This is suitable for removing wrinkles from hanging garments, drapes, or upholstery.
- **Caution:** Do not direct steam at people or animals.

5.5 Spray Function

- The spray function can be used with or without steam.

- Press the spray button to emit a fine mist of water onto the fabric, which helps to dampen stubborn wrinkles.

5.6 Steam Burst Function

- This function provides an extra burst of steam for tough wrinkles.
- Ensure the iron is at a high temperature setting and the water tank is filled.
- Press the steam burst button. Allow a few seconds between bursts for the steam to regenerate.

6. MAINTENANCE AND CLEANING

6.1 After Each Use

1. Unplug the iron and allow it to cool completely.
2. Empty any remaining water from the tank by opening the water filling inlet and tilting the iron over a sink.
3. Set the steam control lever to the "Dry Ironing" position.

6.2 Cleaning the Soleplate

- To clean the non-stick soleplate, wipe it with a damp cloth and a non-abrasive cleaner after the iron has cooled.
- Do not use abrasive scouring pads or harsh chemical cleaners, as these can damage the soleplate.

6.3 Self-Clean Function

The self-clean function helps to remove mineral deposits from the steam vents.

1. Fill the water tank to the "MAX" level.
2. Plug in the iron and set the temperature control dial to the maximum setting.
3. Once the indicator light turns off, unplug the iron.
4. Hold the iron horizontally over a sink.
5. Press and hold the self-clean button (if available, or the steam burst button repeatedly if no dedicated self-clean button is present) until all the water has drained from the tank, carrying impurities with it.
6. Move the iron back and forth to help flush out deposits.
7. Plug the iron back in and heat it to dry out any remaining water.
8. Unplug and store once cooled.

7. STORAGE

- Ensure the iron is unplugged and completely cool before storing.
- Empty the water tank.
- Store the iron upright on its heel rest to prevent soleplate damage.
- Wrap the power cord loosely around the heel rest or use the cord clip if provided.
- Store in a dry, safe place, out of reach of children.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; temperature dial set to "MIN" or "OFF".	Check plug connection; test outlet with another appliance; turn temperature dial to a higher setting.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control lever set to "Dry Ironing"; steam vents clogged.	Fill water tank; set temperature to steam range (e.g., Cotton/Linen); move steam control lever to "Min" or "Max"; perform self-clean.
Water leaks from soleplate.	Temperature too low for steam; water tank overfilled; iron left horizontal with steam on.	Increase temperature to steam range; do not overfill water tank; ensure iron is hot enough before using steam; store upright.
Soleplate is dirty.	Starch or fabric residue buildup.	Clean soleplate with a damp cloth and non-abrasive cleaner after cooling.

9. SPECIFICATIONS

- **Model:** ES2416
- **Power:** 1400W
- **Voltage:** Standard household voltage (e.g., 120V AC, 60Hz for US market)
- **Soleplate:** Non-Stick
- **Cord:** 360° Tangle-Free
- **Dimensions:** 11.22 x 4.76 x 5.63 inches
- **Weight:** 2.64 pounds
- **UPC:** 710280980366

10. WARRANTY AND SUPPORT

AICOK products are designed to meet high quality standards. For specific warranty information, please refer to the warranty card included with your purchase or contact AICOK customer support. Keep your purchase receipt as proof of purchase.

For technical assistance or customer service inquiries, please visit the official AICOK website or contact their support channels as provided in your product packaging.