

Toastmaster TM-46TS

Toastmaster 4-Slice Toaster Model TM-46TS Instruction Manual

Model: TM-46TS | Brand: Toastmaster

1. INTRODUCTION

Thank you for purchasing the Toastmaster 4-Slice Toaster, Model TM-46TS. This manual provides important information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

This toaster is designed for household use to toast bread, bagels, and similar items. It features four wide slots, adjustable browning controls, and specialized functions for defrosting and bagels.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the

like, when in operation.

- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- Do not toast pastries with runny fillings or frosting.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Toastmaster 4-Slice Toaster:



Figure 3.1: Front view of the Toastmaster 4-Slice Toaster. This image displays the toaster with four slots, two control levers, and two sets of browning control dials and function buttons (Bagel, Frozen, Cancel).

- **Toasting Slots (4):** Wide slots to accommodate various bread types.
- **Control Levers (2):** Used to lower and raise bread into the toasting slots.
- **Browning Control Dials (2):** Adjusts the toast shade from light (1) to dark (6).
- **Bagel Buttons (2):** Activates the bagel function, toasting only the cut side of bagels.
- **Frozen Buttons (2):** Adds extra toasting time for frozen items.
- **Cancel Buttons (2):** Stops the toasting cycle at any time.
- **Crumb Tray (Hinged):** Located at the bottom for easy cleaning of crumbs.
- **Cool-Touch Exterior:** Designed to remain cool to the touch during operation.

Thoughtful Design



4 Wide slots



High rise
toast lift



Hinged
crumb tray

COOL
TOUCH
EXTERIOR



Figure 3.2: Diagram illustrating key design features including the four wide slots, high-rise toast lift, hinged crumb tray, and cool-touch exterior.

4. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the toaster.
3. **First Use:** Before toasting food for the first time, operate the toaster without bread on the highest setting (6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate.
4. **Power Connection:** Ensure your power outlet matches the voltage requirements (120 Volts) of the toaster. Plug the 2-pin polarized plug into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

This toaster features independent controls for each pair of slots, allowing you to toast different items simultaneously.

Wide slots for a variety of breads

 Bagel Function

 Frozen function

INDEPENDENT
**ADJUSTABLE
BROWNING**
CONTROLS



Figure 5.1: Close-up view of the wide toasting slots and independent adjustable browning controls.

5.1 Basic Toasting

1. Insert up to two slices of bread into the toasting slots.
2. Select your desired browning level using the browning control dial (1 for light, 6 for dark).
3. Press the control lever down until it locks into place. The toaster will begin toasting.
4. When the toasting cycle is complete, the toast will automatically pop up. Use the high-rise toast lift feature by gently lifting the control lever further up to retrieve smaller items.
5. To stop the toasting cycle at any time, press the **Cancel** button.

5.2 Using the Frozen Function

Three function buttons

✓ Frozen

✓ Bagel

✓ Cancel



Figure 5.2: Detailed view of the three function buttons: Bagel, Frozen, and Cancel, alongside the browning control dial.

The Frozen function allows you to toast frozen bread without burning it. It automatically adds extra time to the toasting cycle.

1. Insert frozen bread into the toasting slots.
2. Select your desired browning level.
3. Press the control lever down.
4. Press the **Frozen** button. The indicator light will illuminate.
5. The toaster will automatically adjust the toasting time.

5.3 Using the Bagel Function

The Bagel function toasts the cut side of a bagel while gently warming the outer side.

1. Insert bagel halves into the toasting slots with the cut side facing inwards.
2. Select your desired browning level.

- 3. Press the control lever down.
- 4. Press the **Bagel** button. The indicator light will illuminate.
- 5. The toaster will toast the bagel accordingly.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

- 1. **Always unplug the toaster** from the electrical outlet and allow it to cool completely before cleaning.
- 2. **Crumb Tray:** Pull out the hinged crumb tray located at the bottom of the toaster. Dispose of crumbs and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting.
- 3. **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface.
- 4. **Interior:** Never insert any objects into the toasting slots to clean them. If food becomes lodged, unplug the toaster and carefully turn it upside down to dislodge the item.
- 5. **Storage:** When not in use, store the toaster in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure toaster is securely plugged in. Check circuit breaker. Try a different outlet.
Bread does not toast evenly.	Uneven bread thickness; crumb buildup; internal element issue.	Ensure bread slices are uniform. Clean crumb tray. If problem persists, contact customer support.
Smoke or burning smell.	Food lodged in slots; crumb buildup; foreign object.	Immediately unplug. Allow to cool. Remove any lodged food or crumbs. Do not use if smoke persists.
Control lever does not stay down.	Toaster not plugged in; internal mechanism issue.	Ensure toaster is plugged into a working outlet. If still an issue, contact customer support.

8. SPECIFICATIONS

4-Slice Cool Touch Toaster



3.3 POUNDS



1500 WATTS



120 VOLTS

Figure 8.1: Product dimensions and electrical specifications for the Toastmaster 4-Slice Toaster.

Feature	Detail
Model Number	TM-46TS
Brand	Toastermaster
Color	Black with Stainless Steel accents
Material	Plastic, Stainless Steel
Product Dimensions (D x W x H)	11"D x 11.15"W x 6.9"H
Number of Slices	4
Wattage	1500 watts
Voltage	120 Volts

Feature	Detail
Special Features	Cool Touch Exterior, Variable Browning Control, Bagel Function, Frozen Function, High-Rise Toast Lift, Hinged Crumb Tray
Item Weight	3.3 Pounds
UPC	655772014894

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the warranty card included with your product or visit the official Toastmaster website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: Select Brands Inc.

Website: [Toastmaster Official Store](#)

© 2023 Toastmaster. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question