

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar Pedestal Fan User Manual

Aigostar A1344

Aigostar Pedestal Fan User Manual

Model: A1344 | Brand: Aigostar

1. INTRODUCTION

Thank you for choosing the Aigostar Pedestal Fan. This manual provides important information regarding the safe operation, assembly, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and keep it for future reference.





Figure 1.1: Aigostar Pedestal Fan in white, demonstrating airflow with floating leaves.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this fan.
- Always unplug the fan from the power outlet before cleaning, servicing, or moving it.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not block air openings or operate with any opening blocked. Keep openings free of lint, hair, and the like.
- Do not use outdoors.
- This fan is intended for household use only and not for commercial or industrial use.
- Always place the fan on a stable, flat surface to prevent tipping. The X-shaped base design provides enhanced stability.

- The fan features a safety grille to prevent accidental contact with the blades. Do not attempt to bypass or remove this grille during operation.

3. PRODUCT COMPONENTS AND PACKAGE CONTENTS

Before assembly, ensure all parts listed below are present and undamaged.

- Front Grille
- Rear Grille
- Fan Blades (7 blades)
- Motor Unit with Control Panel
- Adjustable Pole (Telescopic)
- Base (X-shaped)
- Retaining Nuts/Caps
- Power Cord (integrated)



4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Aigostar Pedestal Fan:

1. **Assemble the Base:** Insert the four legs into the central hub of the X-shaped base until they click securely into place.
2. **Attach the Pole:** Insert the adjustable pole into the assembled base. Secure it with the provided screw or locking mechanism at the bottom of the pole.
3. **Mount the Motor Unit:** Place the motor unit onto the top of the adjustable pole. Ensure it is firmly seated and secured, typically with a tightening screw or collar.
4. **Install Rear Grille:** Remove the retaining nut from the motor shaft. Place the rear grille onto the motor unit, aligning the notches. Secure it with the retaining nut.
5. **Attach Fan Blades:** Slide the 7 fan blades onto the motor shaft. Ensure they are pushed all the way back and secured with the blade cap, turning clockwise to tighten.
6. **Install Front Grille:** Align the front grille with the rear grille, ensuring the clips or screws match. Secure the front grille to the rear grille, typically by snapping clips into place or tightening small screws around the rim.

Installationsschritte



Figure 4.1: Visual guide for the assembly process of the fan.

Einfacher Zu Installieren



Figure 4.2: The fan's X-shaped base is designed for easy and stable assembly.

5. OPERATING INSTRUCTIONS

Once assembled, plug the fan into a standard electrical outlet (240V). The control panel is located on the motor unit.

- **Power On/Off:** Use the main power switch (usually marked '0' for off and '1', '2', '3' for speeds) to turn the fan on or off.
- **Speed Settings:** The fan offers 3 speed settings. Select your desired airflow intensity using the buttons on the control panel:
 - **Speed 1:** Low speed for gentle breeze, ideal for sleeping or quiet environments.
 - **Speed 2:** Medium speed for comfortable airflow, suitable for reading or general use.
 - **Speed 3:** High speed for maximum air circulation, effective in larger rooms or during hot weather.
- **Oscillation:** To activate the oscillation feature (75° left and right), press down the oscillation knob located on top of the motor unit. Pull the knob up to stop oscillation.

- **Vertical Tilt:** The fan head can be manually tilted up or down by 45° to direct airflow precisely where needed. Gently push or pull the fan head to adjust the angle.
- **Height Adjustment:** The fan's height can be adjusted from 108cm to 123cm. Loosen the height adjustment collar on the pole, extend or retract the telescopic pole to the desired height, and then tighten the collar securely.

3-geschwindigkeitsstufen



Figure 5.1: The fan's three speed settings cater to various needs, from quiet sleep to powerful cooling.

Kraftvoller Luftstrom



7 Klingen



Leise



Starker Wind

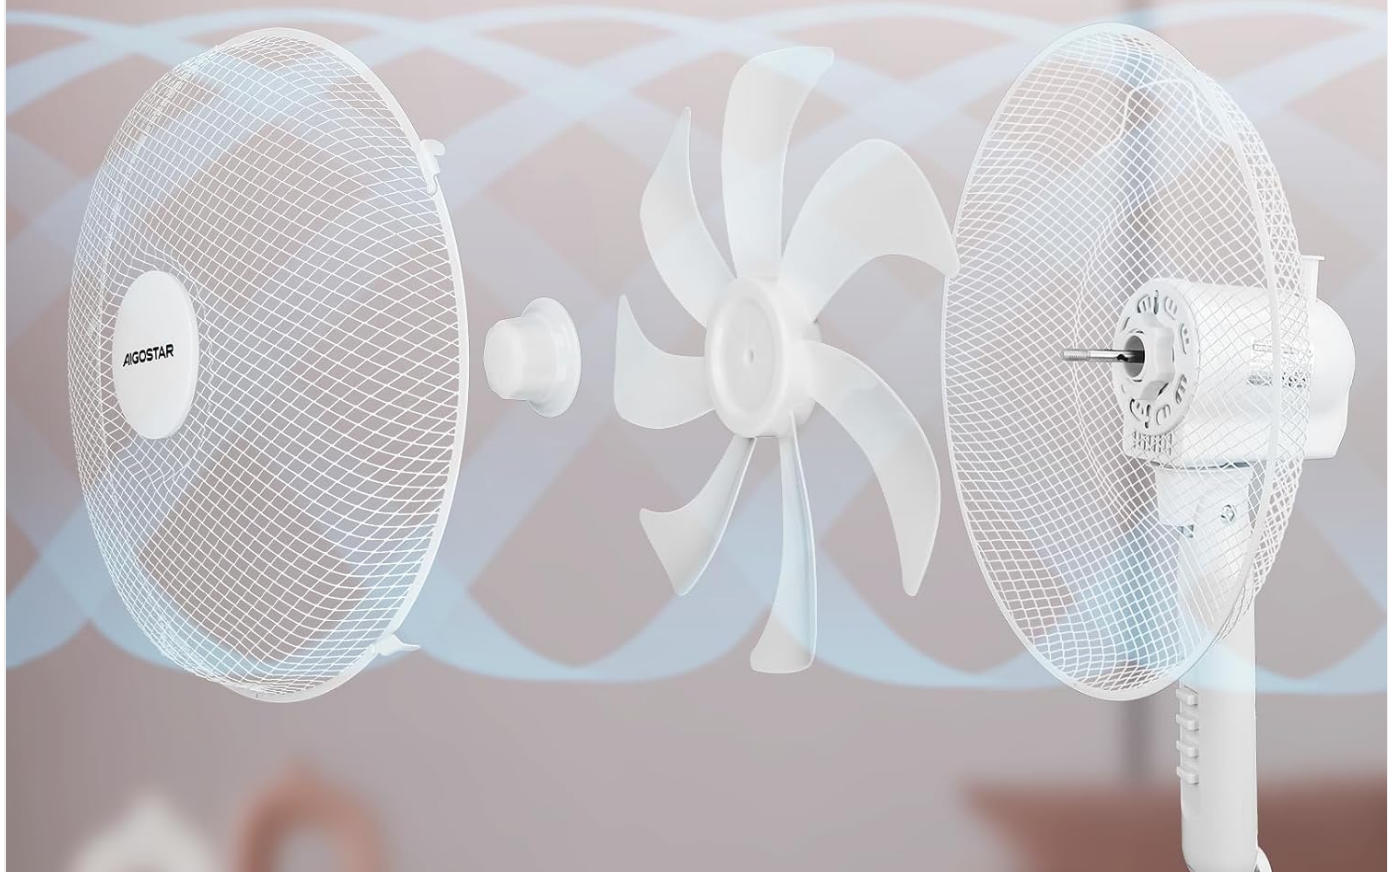


Figure 5.2: The 7-blade design ensures powerful and efficient airflow.



Leiser Betrieb, Schlafgeeignet

Geringe Geräuscentwicklung Für Erholsamen Schlaf



Figure 5.3: The fan operates quietly, with a noise level as low as 40dB, making it suitable for bedrooms.

Breitwinkel-Automatisierung 75°

Ermöglicht, Dass Der Luftstrom Alle Ecken Erreicht



Figure 5.4: The fan offers wide-angle 75° oscillation and 45° vertical tilt for comprehensive air distribution.

Höhenverstellbar



Figure 5.5: The fan's height can be easily adjusted to suit different environments and preferences.



Figure 5.6: The versatile design allows the fan to be used effectively in various rooms.

6. MAINTENANCE AND CLEANING

Regular cleaning will help maintain your fan's performance and extend its lifespan.

- **Always unplug the fan** from the power source before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- To clean the fan blades and inside the grilles, you may need to carefully remove the front grille (refer to assembly instructions in reverse). Wipe the blades and grilles with a damp cloth. Ensure all parts are completely dry before reassembling and operating the fan.
- Do not immerse the fan in water or allow water to drip into the motor housing.
- For storage, disassemble the fan if desired for compact storage, or cover it to protect from dust. Store in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power switch off; power outage.	Ensure fan is securely plugged into a working outlet. Turn power switch to desired speed. Check household circuit breaker.
Weak airflow.	Fan speed too low; grilles or blades are dirty.	Increase fan speed. Clean the fan blades and grilles as per maintenance instructions.
Fan is noisy.	Loose parts; fan not on a stable surface; dirt on blades.	Check all assembly points for tightness. Place fan on a flat, stable surface. Clean blades and grilles.
Oscillation not working.	Oscillation knob not pressed down.	Ensure the oscillation knob on top of the motor unit is fully pressed down.

8. SPECIFICATIONS

- Model:** A1344
- Brand:** Aigostar
- Power:** 50W
- Voltage:** 240V
- Noise Level:** As low as 40 dB
- Blade Diameter:** Approximately 41 cm (16 inches)
- Speed Settings:** 3
- Oscillation:** 750 Horizontal
- Tilt Angle:** 450 Vertical
- Height Adjustable:** 108 cm - 123 cm
- Product Dimensions:** 74.5 x 74.5 x 123 cm (max height)
- Item Weight:** 2.96 kg
- Power Source:** Corded Electric

9. WARRANTY AND SUPPORT

Aigostar is committed to providing high-quality products. For any questions, concerns, or support needs regarding your Aigostar Pedestal Fan, please contact Aigostar customer service or visit the official Aigostar store for more information. You can visit the Aigostar store at: [Aigostar Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B077F6N82D>

More documents and user manuals: **<https://manuals.plus/>**