

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar Kohl 33JTJ 3-in-1 Air Cooler User Manual

Aigostar Kohl 33JTJ / 330100JTJ

Aigostar Kohl 33JTJ 3-in-1 Air Cooler User Manual

Model: 33JTJ / 330100JTJ

1. INTRODUCTION

Thank you for choosing the Aigostar Kohl 33JTJ 3-in-1 Air Cooler. This versatile appliance functions as an air cooler, humidifier, and air purifier, designed to enhance your indoor comfort. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.



Image: The Aigostar Kohl 33JTJ 3-in-1 Air Cooler, showing its sleek white design, the included remote control, and a blue ice pack.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic precautions:

- Read all instructions carefully before using the appliance.
- Never insert fingers or other objects into the cooling grill when the fan is operating.
- Do not use the fan near an open window, as rain can pose an electrical hazard.
- Ensure the power supply matches the specifications (220-240V, 50Hz).
- Always unplug the appliance before cleaning or maintenance.
- Keep the appliance on a stable, level surface.

- Do not immerse the appliance in water or other liquids.
- This appliance is for indoor use only.

3. PRODUCT OVERVIEW

3.1 Key Features

- **3-in-1 Functionality:** Air Cooler, Humidifier, and Air Purifier.
- **Advanced Cooling:** Honeycomb pattern cooling pad for enhanced evaporation.
- **Large Water Tank:** 15-liter capacity for 8-9 hours of continuous operation.
- **Multiple Modes & Speeds:** 3 operating modes (Natural, Normal, Sleep) and 3 fan speeds.
- **Timer Function:** Programmable 7-hour shutdown timer.
- **Oscillation:** 60-degree oscillation for wide air distribution.
- **Portability:** Integrated handle and hidden casters for easy movement.
- **Remote Control:** Convenient operation from up to 6 meters away.



Image: Diagram illustrating the three main functions of the Aigostar Air Cooler: Air Cooler, Humidifier, and Air Purifier.

3.2 Components and Controls

- **Control Panel:** Top-mounted buttons for manual operation.
- **Remote Control:** For convenient wireless operation.
- **Air Outlet:** Front grill where cooled air is expelled.
- **Water Level Window:** Indicates the current water level in the tank.
- **Water Tank:** Located at the bottom, accessible for filling.

- **Honeycomb Filter:** Internal filter for air purification and evaporation.
- **Ice Box:** Two included ice packs for enhanced cooling.
- **Handle:** Integrated top handle for lifting.
- **Wheels:** Hidden cardan wheels for easy mobility.



Image: Detailed view of the Aigostar Air Cooler highlighting its key components: the top handle, simple button panel, 3-speed wind mode, cardan wheels, and water level window.



Image: Rear view of the Aigostar Air Cooler, showing the location of the Ice Box, Water Tank, and Honeycomb Filter.

4. SETUP AND INITIAL USE

4.1 Unpacking

1. Carefully remove the air cooler from its packaging.
2. Check for any damage during transit. If damaged, do not operate and contact customer support.
3. Ensure all accessories are present: main unit, remote control, 2 ice packs.

4.2 Filling the Water Tank

1. Place the air cooler on a flat, stable surface.
2. Locate the water tank at the bottom of the unit.
3. Carefully pull out the water tank or open the water inlet cover (depending on model design).
4. Fill the tank with clean, cool water. Do not exceed the "MAX" fill line. The tank has a 15-liter capacity.
5. For enhanced cooling, place the included ice packs in a freezer until frozen. Once frozen, add them directly into the water tank.
6. Close the water tank securely.

4.3 Power Connection

1. Ensure the power cord is fully extended and not tangled.
2. Plug the power cord into a standard electrical outlet (220-240V, 50Hz).

5. OPERATING INSTRUCTIONS

5.1 Control Panel and Remote Control

The air cooler can be operated using the control panel on top of the unit or the included remote control.

5.2 Power On/Off

- Press the **Power** button (usually marked with a power symbol) on the control panel or remote control to turn the unit on or off.

5.3 Adjusting Fan Speed

- Press the **Speed** button to cycle through the 3 available fan speeds: Low, Medium, and High.
- Maximum airflow is 1250 RPM.

5.4 Selecting Operating Mode

Press the **Mode** button to select from the following modes:

- **Normal Mode:** Provides a consistent airflow at the selected speed.
- **Natural Mode:** Simulates a natural breeze by varying fan speed.
- **Sleep Mode:** Operates at a lower, quieter speed, ideal for nighttime use.

5.5 Oscillation Function

- Press the **Swing** or **Oscillation** button to activate the 60-degree horizontal oscillation, distributing air across a wider area.
- The vertical angle of the fan outlet can be manually adjusted up to 100 degrees.



Image: Diagram illustrating the 100-degree manual angle adjustment of the fan outlet and the 60-degree automatic oscillation feature of the

5.6 Timer Function

- Press the **Timer** button to set the desired operating time before the unit automatically shuts off. The timer can be set for up to 7 hours.



7-hour shutdown timer

Image: The Aigostar Air Cooler next to a sleeping baby, with an overlay indicating the 7-hour shutdown timer feature, highlighting its suitability for quiet operation.

6. MAINTENANCE AND CARE

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your air cooler.

6.1 Cleaning the Exterior

- Always unplug the appliance before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, waxes, or solvents.

6.2 Cleaning the Water Tank

- The water tank is not removable. Drain any remaining water from the tank regularly to prevent mold and mildew buildup.
- Use a mild detergent and a soft brush to clean the inside of the tank. Rinse thoroughly with clean water.
- Allow the tank to air dry completely before refilling or storing.

6.3 Cleaning the Honeycomb Filter

- The honeycomb filter should be cleaned periodically, especially if the airflow decreases or odors are present.
- Refer to the product diagram to locate and carefully remove the honeycomb filter.
- Rinse the filter under running water to remove dust and debris. For stubborn dirt, use a soft brush and mild detergent.
- Ensure the filter is completely dry before reinserting it into the unit.

6.4 Storage

- If storing the unit for an extended period, ensure the water tank and filter are clean and dry.
- Store the air cooler in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply; power cord not plugged in; power outlet faulty.	Check power cord connection; try a different outlet; ensure main power switch is on.
Weak airflow.	Air filter clogged; water tank empty; fan speed set too low.	Clean the honeycomb filter; refill the water tank; increase fan speed.
No cooling effect.	Water tank empty; ice packs not used or not frozen; room temperature too high for evaporative cooling.	Refill water tank; use frozen ice packs; understand that this is an evaporative cooler, not an air conditioner, and its cooling effect is limited by ambient humidity.
Unusual noise.	Unit not on a level surface; foreign object in fan; water pump issue.	Place unit on a level surface; unplug and check for obstructions (if safe); contact customer support if noise persists.
Water leakage.	Water tank overfilled; tank not properly closed; unit tilted.	Do not overfill; ensure tank is securely closed; keep unit upright and stable.

8. SPECIFICATIONS

Brand:	Aigostar
Model Number:	330100JTJ / 33JTJ
Type:	3-in-1 Air Cooler (Cooler, Humidifier, Purifier)
Power:	60 Watts
Voltage:	220-240V

Frequency:	50 Hz
Water Tank Capacity:	15 Liters
Airflow:	≥ 480 m³/min (Max 1250 RPM)
Coverage Area:	Up to 50 m³
Dimensions (L x W x H):	33 x 38 x 73.6 cm
Weight:	7.69 kg
Number of Speeds:	3
Timer:	Up to 7 hours
Oscillation:	60 degrees (horizontal)
Control Type:	Remote Control, Button Panel
Material:	Acrylonitrile Butadiene Styrene (ABS)



Image: Aigostar Air Cooler with its dimensions clearly marked: 736mm height, 380mm width, and 330mm depth.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Aigostar website. If you have any questions about our products, you can always contact us, and we will be happy

to help.

Manufacturer: Aigostar

First Available Date: May 9, 2018

© 2024 Aigostar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question