

[Manuals.plus](#) /

› [Kid Trax](#) /

› Kid Trax Disney Cars 3 Tow-Mater Electric Quad Ride-On Manual KT1193I

Kid Trax KT1193I

Kid Trax Disney Cars 3 Tow-Mater Electric Quad Ride-On Instruction Manual

Model: KT1193I | Brand: Kid Trax

IMPORTANT SAFETY INFORMATION

WARNING: Adult Assembly Required

This product contains small parts. Sharp edges and points may be present during assembly. To avoid serious injury, continuous adult supervision is required. Never use near motor vehicles, streets, swimming pools, hills, steps, or sloped driveways. Always wear shoes, a helmet, and appropriate protective pads.

Allow only one rider at a time.

If batteries are required: Batteries must be handled by an adult. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

PRODUCT OVERVIEW

The Kid Trax Disney Cars 3 Tow-Mater Electric Quad Ride-On is designed for young children aged 18 to 30 months, with a maximum weight limit of 45 lbs. This 6-volt ride-on features an authentic Tow-Mater design, easy push-button acceleration, and Power Trax rubber traction strip tires for a smooth and controlled ride.



Image: The Kid Trax Tow-Mater Electric Quad Ride-On, ready for play.

Key Features:

- **Authentic Tow-Mater Design:** Unique design inspired by Disney Pixar's Cars character.
- **Easy Operation:** Simple push-button acceleration suitable for small hands.
- **Safe Speed:** Maximum speed of 2 mph for controlled riding.
- **Enhanced Traction:** Power Trax rubber traction strip tires provide a no-slip grip.
- **Complete Package:** Includes a 6-volt rechargeable battery and wall charger.



QUAD RIDE ON
6V Battery-Powered

Kid Trax.

Image: A child enjoying the Kid Trax Tow-Mater Quad, suitable for ages 18+ months and up to 45 lbs.



18+
MONTHS
MAX WEIGHT:
45 lbs



Image: Front view of the quad, showcasing the rubber traction strip tires for improved grip.



Image: Side view illustrating the 6V battery power and a maximum speed of 2 MPH.

Official Product Video:

Your browser does not support the video tag.

Video: An official manufacturer video showcasing the features and use of the Kid Trax Disney Cars 3 Tow-Mater Electric Quad Ride-On.

SETUP INSTRUCTIONS

Adult assembly is required for this product. Please ensure all components are present before beginning assembly.

Included Components:

- Toddler quad (main body)
- Steering wheel
- Wheels (if not pre-attached)
- 6-volt rechargeable battery

- Wall charger

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all included components are present.
2. **Attach Wheels:** If the wheels are not pre-attached, follow the specific instructions in your product's detailed manual to securely fasten them to the quad's axles.
3. **Install Steering Wheel:** Attach the steering wheel to the steering column. Ensure it clicks into place or is secured with the provided fasteners.
4. **Connect Battery:** Locate the battery compartment, typically under the seat. Connect the 6-volt battery terminals as indicated in the detailed manual. Ensure a secure connection.
5. **Initial Charge:** Before first use, fully charge the battery for the recommended duration (refer to the Charging the Battery section).

OPERATING INSTRUCTIONS

This ride-on toy is designed for simple and intuitive operation, perfect for young children.

Starting and Stopping:

- **To Start:** Ensure the child is seated comfortably on the quad. Press the red push-button located on the handlebar to engage the motor.
- **To Stop:** Release the push-button. The quad will come to a stop.

Steering:

The handlebars control the direction of the front wheels. Guide the child to turn the handlebars left or right to steer the quad.

Speed:

The quad operates at a safe maximum speed of 2 mph, allowing for controlled movement and easy supervision.

Traction System:

The Power Trax rubber traction strip tires provide a no-slip grip, ensuring stability and control on various surfaces.

CHARGING THE BATTERY

Proper battery charging is essential for optimal performance and longevity of your ride-on toy.

Battery Location:

The 6-volt rechargeable battery is located under the seat of the quad. To access it for charging, you will need to remove the seat.

Charging Procedure:

1. Ensure the quad is turned off and not in use.
2. Carefully remove the seat to expose the battery compartment.
3. Disconnect the battery from the quad's wiring harness.
4. Connect the charger to the battery.
5. Plug the charger into a standard wall outlet.

- 6. Allow the battery to charge for the recommended duration, typically 8-12 hours for a full charge. Do not overcharge.
- 7. Once charging is complete, unplug the charger from the wall and disconnect it from the battery.
- 8. Reconnect the battery to the quad's wiring harness and replace the seat securely.

Note: Always use the charger provided with your Kid Trax ride-on toy. Using an incorrect charger may damage the battery or the toy.

MAINTENANCE

Regular maintenance helps ensure the safety and longevity of your Kid Trax ride-on toy.

Cleaning:

- Wipe the quad with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Avoid spraying water directly onto electrical components.

Battery Care:

- Charge the battery fully after each use.
- If storing the quad for an extended period, charge the battery once a month to maintain its health.
- Do not store the battery in extreme temperatures.

General Inspection:

- Periodically check all screws, nuts, and fasteners to ensure they are tight.
- Inspect the wheels and tires for wear or damage.
- Check the electrical connections for any signs of corrosion or damage.

TROUBLESHOOTING

If you encounter issues with your Kid Trax ride-on, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Quad does not move	Battery is low or not connected; loose wiring; faulty switch	Charge battery fully; check battery connections; inspect wiring for damage; contact support if switch is faulty.
Quad moves slowly	Low battery charge; overloaded; operating on soft surfaces	Recharge battery; ensure rider weight is within limits; operate on hard, flat surfaces.
Short run time	Battery not fully charged; old battery; frequent stops/starts	Ensure full charge; consider battery replacement if old; encourage continuous riding.
Charger not working	Outlet issue; faulty charger	Test outlet with another device; contact support for a replacement charger.

If these solutions do not resolve the issue, please contact Kid Trax customer support for further assistance.

SPECIFICATIONS

Detailed specifications for the Kid Trax Disney Cars 3 Tow-Mater Electric Quad Ride-On (Model KT1193I).



Weight Capacity Maximum 44 pounds Material Type Rubber Theme Movie

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product at the time of purchase. If you require technical assistance, replacement parts, or have questions not covered in this manual, please contact Kid Trax customer support.

You can typically find contact information on the manufacturer's website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question