### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Logitech /
- > Logitech Craft Advanced Keyboard User Manual

# Logitech 920-008507

# Logitech Craft Advanced Keyboard User Manual

Model: 920-008507
Brand: Logitech

### INTRODUCTION

The Logitech Craft Advanced Keyboard is designed to enhance your creative workflow and typing experience. Featuring a unique Creative Input Dial, this keyboard provides instant access to context-specific functions in various applications, allowing for a more efficient and immersive creative process. Its precision-crafted keys offer stability and responsiveness, while smart illumination adapts to your environment.



Figure 1: Logitech Craft Advanced Keyboard overview.

### SETUP

### 1. Charging the Keyboard

Before initial use, fully charge your Logitech Craft keyboard. Connect the keyboard to a power source using the provided USB-C cable. The battery indicator light will show charging status.

### 2. Connecting to Your Device

The Logitech Craft keyboard offers versatile connectivity options:

### • Logitech Unifying Receiver (2.4 GHz Wireless):

Plug the Logitech Unifying receiver into an available USB port on your computer. The keyboard should automatically connect. If not, press one of the Easy-Switch keys (1, 2, or 3) until its LED blinks rapidly, then follow on-screen prompts or use Logitech Options software to pair.

### · Bluetooth Smart:

Ensure Bluetooth is enabled on your device. Press and hold one of the Easy-Switch keys (1, 2, or 3) for three seconds until its LED blinks rapidly. On your device, go to Bluetooth settings and select "Logitech Craft" from the list of available devices to pair.

## 3. Installing Logitech Options Software

To unlock the full potential of your Craft keyboard, including customizing the Creative Input Dial and key functions, download and install the Logitech Options software from the official Logitech website. This software allows you to manage profiles for different applications and personalize your workflow.

## **OPERATING THE KEYBOARD**

# **Creative Input Dial (The Crown)**

The Creative Input Dial, also known as "The Crown," is the central feature of the Craft keyboard, providing intuitive control over various functions depending on the application you are using.

- Context-Specific Functions: The dial automatically adapts to the active application. For example, in Adobe Photoshop CC, it can adjust brightness; in Adobe Illustrator CC, it can change stroke weight.
- Touch, Tap, and Turn: The dial is touch-sensitive, allowing for different interactions:
  - Touch: Hover your finger over the dial to see available functions.
  - Tap: Press the dial to cycle through different functions within an application.
  - Turn: Rotate the dial to adjust the selected function's value.
- Application Integration: The dial supports a wide range of applications, including Adobe Creative Cloud suite (Photoshop, Illustrator, Lightroom Classic, Premiere Pro, InDesign) and Microsoft Office applications (PowerPoint, Excel, Word).



# Input dial for instant access to context-specific functions















Figure 2: The Creative Input Dial and its application integration.



**QUICKLY EDIT PHOTOS AND MORE** 

Figure 3: Demonstrating the Creative Input Dial in use for photo editing.

### **Smart Illumination**

The keyboard features intelligent backlighting that enhances usability in various lighting conditions:

- Proximity Detection: Keys light up automatically as your hands approach the keyboard.
- Automatic Brightness Adjustment: The backlighting brightness adjusts automatically based on ambient lighting conditions to conserve battery and optimize visibility.

### **Typing Experience**

The Logitech Craft keyboard is engineered for precision and comfort:

- Increased Key Stability: Reduces noise and optimizes responsiveness for a quiet yet tactile typing experience.
- **Spherical Key Dishing:** Keys are designed with a concave surface to guide your fingers, improving typing accuracy.
- Blind Navigation Details: Subtle tactile cues on certain keys assist with finger orientation without needing to look at the keyboard.

# **Easy-Switch Functionality**

The keyboard allows seamless switching between up to three connected devices (e.g., Windows PC, Mac, iPad). Use the Easy-Switch keys (labeled 1, 2, 3) located above the numeric keypad to instantly switch control to a different paired device.

### MAINTENANCE

## **Cleaning the Keyboard**

To maintain optimal performance and appearance, clean your keyboard regularly:

- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Avoid harsh chemicals, abrasive cleaners, or solvents.
- Do not spray liquid directly onto the keyboard.
- For debris between keys, use compressed air.

### **Battery Care**

The Logitech Craft keyboard has a built-in rechargeable battery. To prolong battery life:

- Charge the keyboard when the battery indicator shows low power.
- Avoid extreme temperatures.
- If storing for an extended period, charge the battery to about 50% before storage.

### **TROUBLESHOOTING**

If you encounter issues with your Logitech Craft keyboard, try the following solutions:

| Problem                         | Possible Solution  |
|---------------------------------|--|
| Keyboard not responding         | Ensure the keyboard is turned on.  |
|                                 | Check battery level and charge if necessary.   |
|                                 | Verify the Unifying receiver is securely plugged in or Bluetooth is enabled and paired.                |
|                                 | Try reconnecting the keyboard via Logitech Options software.   |
|                                 | Switch to a different Easy-Switch channel (1, 2, or 3) to ensure it's not connected to another device. |
| Creative Input Dial not working | Ensure Logitech Options software is installed and running.   |
|                                 | Check if the active application is supported by the dial.  |
|                                 | Restart the application or your computer.  |
|                                 | Verify dial settings within Logitech Options.  |
| Backlighting not working or dim | Check battery level; low battery can affect backlighting.  |
|                                 | Ensure the ambient light sensor is not obstructed.   |
|                                 | Adjust backlighting settings in Logitech Options.  |

| Problem                                   | Possible Solution   |
|---|---|
| Connectivity issues (lag, disconnections) | Reduce distance between keyboard and receiver/device.                             |
|   | Remove potential sources of interference (other wireless devices, metal objects). |
|   | Update Bluetooth drivers on your computer.  |
|   | Try a different USB port for the Unifying receiver.                               |

### **S**PECIFICATIONS

| Model Number            | 920-008507  |
|-------------------------|---|
| Product Dimensions      | 5.87 x 16.93 x 1.26 inches (14.9 x 43 x 3.2 cm)   |
| Item Weight             | 2.12 pounds (0.96 kg)   |
| Connectivity Technology | Wireless (Logitech Unifying 2.4 GHz, Bluetooth Smart)                                       |
| Wireless Range          | 10 meters (33 feet)   |
| Compatible Devices      | PC (Windows 7 or later), Mac (macOS 10.11 or later)   |
| Special Features        | Creative Input Dial (The Crown), Backlit Keys (Single Color), Easy-Switch (up to 3 devices) |
| Keyboard Description    | Wireless High-Precision Keyboard with Creative Input Dial                                   |
| Power Source            | Rechargeable Lithium-Ion Battery (USB-C charging)   |

### WARRANTY INFORMATION

Logitech products are manufactured to the highest quality standards. For detailed warranty information, including terms, conditions, and duration, please refer to the warranty card included with your product or visit the official Logitech support website. Keep your proof of purchase for warranty claims.

### SUPPORT

For further assistance, technical support, or to download the latest software and drivers, please visit the official Logitech support website:

Logitech Support

You can also find FAQs and community forums on the support site to help resolve common issues.

© 2024 Logitech. All rights reserved.

Logitech, Logi, and their respective logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries.

