

## Clatronic DVG 3686

# Clatronic DVG 3686 Vertical Multigrill Instruction Manual

## 1. INTRODUCTION

Thank you for choosing the Clatronic DVG 3686 Vertical Multigrill. This appliance is designed for fat-free grilling of various meats, including chicken, kebabs, gyros, and meat skewers. To ensure safe operation and optimal performance, please read this instruction manual thoroughly before first use and keep it for future reference.

## 2. SAFETY INSTRUCTIONS

- Always unplug the appliance from the power outlet when not in use, before assembly, disassembly, or cleaning.
- This appliance is intended for household use only. Do not use it outdoors or for commercial purposes.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children. Close supervision is necessary when the appliance is used near children.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other heat-sensitive materials, to allow for proper ventilation.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact qualified service personnel for examination, repair, or adjustment.
- Avoid contact with hot surfaces. Use handles or knobs. Always use the provided stainless steel tongs when handling hot food or components.
- Do not place the appliance near flammable materials or heat sources.
- Do not use accessories not recommended by the manufacturer, as this may cause injuries or damage to the appliance.
- The fat collection tray must always be in place during operation to collect dripping fat and juices.

## 3. PRODUCT OVERVIEW AND COMPONENTS

The Clatronic DVG 3686 Multigrill features a vertical design for efficient, fat-free grilling. It includes various accessories for versatile cooking.



**Image 1:** The Clatronic DVG 3686 Vertical Multigrill in operation, showing a large kebab roast on the central spit, surrounded by heating elements.

**Included Components:**

- Main Grill Unit with Heating Elements
- 1 Large Rotisserie Spit (for chicken, kebab/gyros)

- 6 Small Rotating Meat Skewers
- Stainless Steel Fat Collection Tray
- Stainless Steel Tongs

## Optimal für eine Feier schnell und unkompliziert grillen



**Image 2:** All removable components of the grill, including the large rotisserie spit, six small skewers, the fat collection tray, and stainless steel tongs, ready for cleaning.

## 4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Initial Cleaning:** Before first use, wash all removable parts (large spit, small skewers, fat collection tray, tongs) with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the grill on a flat, stable, and heat-resistant surface. Ensure there is adequate space around the appliance for ventilation (at least 10 cm from walls or other objects).
4. **Assemble Fat Collection Tray:** Always ensure the stainless steel fat collection tray is correctly positioned at the base of the grill before operation.

## 5. OPERATING INSTRUCTIONS



## 5.1 General Operation

1. After assembling the desired grilling accessories and loading food, plug the power cord into a suitable 220-240V, 50/60Hz power outlet.
2. Turn the appliance ON using the integrated On/Off switch. The LED indicator light will illuminate, indicating the grill is active and heating.
3. The heating elements will begin to glow, and the rotisserie mechanism will start rotating.
4. Monitor the cooking process. Cooking times will vary depending on the type and thickness of the meat.
5. Once cooking is complete, turn the appliance OFF using the On/Off switch and unplug it from the power outlet. Allow the appliance to cool completely before handling or cleaning.

## 5.2 Grilling Chicken, Kebab, or Gyros



**Image 3:** Examples of food prepared with the grill: a whole chicken, a large kebab/gyros roast, and multiple meat skewers.

1. Attach the large rotisserie spit to the central rotating mechanism. Ensure it is securely locked in place.
2. Carefully load your chicken, kebab, or gyros meat onto the large spit. Ensure the food is balanced to allow for even rotation. The grill can accommodate up to 2 kg of meat.
3. Ensure the meat does not touch the heating elements directly. Adjust the position if necessary.
4. Follow general operating instructions (Section 5.1) to start grilling.
5. During cooking, fat and juices will drip into the stainless steel collection tray at the bottom.

6. Once cooked, turn off the grill, unplug, and carefully remove the spit using the provided tongs or oven mitts.

### 5.3 Grilling Meat Skewers

## Leichte Reinigung

dank abnehmbarer Edelstahl-  
Elemente (spülmaschinenfest)

inkl. Edelstahlzange



**Image 4:** The grill configured with six small skewers, each loaded with colorful meat and vegetable pieces, rotating for even cooking.

1. Attach the six small rotating meat skewers to the designated slots around the central mechanism.
2. Load your meat and vegetable pieces onto the skewers. Do not overload them.
3. Ensure the skewers are properly seated and can rotate freely without obstruction.
4. Follow general operating instructions (Section 5.1) to start grilling.
5. The skewers will rotate independently, ensuring even cooking.
6. Once cooked, turn off the grill, unplug, and carefully remove the skewers using the provided tongs.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your grill.

1. **Cool Down:** Always ensure the appliance is unplugged and has cooled down completely before cleaning.
2. **Remove Components:** Carefully remove the large spit or small skewers, and the fat collection tray.
3. **Wash Removable Parts:** The large spit, small skewers, fat collection tray, and tongs are made of stainless

steel and are dishwasher safe. Alternatively, wash them by hand with warm soapy water, rinse thoroughly, and dry immediately to prevent water spots.

4. **Clean Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface. Never immerse the main unit in water.
5. **Storage:** Once clean and dry, store the grill and its accessories in a dry place.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power switch off; No power at outlet.	Ensure plug is securely in outlet; Turn power switch ON; Check household circuit breaker.
Meat not cooking evenly.	Meat loaded unevenly; Too much meat; Obstruction to rotation.	Distribute meat evenly on the spit/skewers; Do not exceed 2 kg capacity; Ensure nothing obstructs rotation.
Excessive smoke.	Fat/marinade dripping onto heating elements; Fat collection tray full.	Ensure fat collection tray is clean and empty before use; Trim excess fat from meat.

## 8. SPECIFICATIONS

- **Brand:** Clatronic
- **Model:** DVG 3686
- **Reference Number:** 263831
- **Power:** 1400 Watts
- **Voltage:** 220-240 V, 50/60 Hz
- **Dimensions (L x W x H):** 25.5 x 25.5 x 35 cm
- **Weight:** 2.5 Kilograms
- **Material:** Stainless Steel (components), Black finish (exterior)
- **Special Features:** LED indicators, Integrated On/Off switch, Vertical grilling, Rotating skewers

## 9. WARRANTY AND SUPPORT

This Clatronic DVG 3686 Vertical Multigrill comes with a **1-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims.

For technical support, spare parts, or warranty inquiries, please contact your retailer or the Clatronic customer service department. Contact information can typically be found on the manufacturer's official website or on your product packaging.

	<p><a href="#">Clatronic MG 3519 Multigrill Bedienungsanleitung und Garantie</a></p> <p>Umfassende Bedienungsanleitung und Garantieinformationen für den Clatronic MG 3519 Multigrill Kontaktgrill. Enthält Sicherheitshinweise, Bedienung, Wartung und technische Daten.</p>
	<p><a href="#">CLATRONIC MG 3519 Multigrill Bedienungsanleitung und Garantie</a></p> <p>Umfassende Bedienungsanleitung und Garantieinformationen für den CLATRONIC MG 3519 Multigrill. Erfahren Sie mehr über sichere Handhabung, Bedienung, Reinigung, technische Daten und Garantiebedingungen für Ihr CLATRONIC Gerät.</p>
	<p><a href="#">Safety Instructions for Clatronic Ice Cream Maker ICM 3784</a></p> <p>Comprehensive safety instructions and general guidelines for the Clatronic Ice Cream Maker ICM 3784, ensuring safe operation and maintenance for household use.</p>
	<p><a href="#">CLATRONIC EK 3497 Eierkocher Bedienungsanleitung</a></p> <p>Umfassende Bedienungsanleitung für den CLATRONIC EK 3497 Eierkocher. Enthält detaillierte Informationen zur sicheren Nutzung, Inbetriebnahme, Reinigung und Garantie.</p>
	<p><a href="#">Clatronic KA 3808 Kaffeeautomat Bedienungsanleitung</a></p> <p>Umfassende Bedienungsanleitung für den Clatronic KA 3808 Kaffeeautomaten. Enthält Anleitungen zur Inbetriebnahme, Bedienung, Reinigung, Wartung und Fehlerbehebung für optimale Kaffeezubereitung.</p>
	<p><a href="#">Clatronic Knetmaschine KM 3711/KM 3712 Bedienungsanleitung und Garantie</a></p> <p>Umfassende Bedienungsanleitung und Garantieinformationen für die Clatronic Knetmaschine KM 3711/KM 3712. Enthält Sicherheitshinweise, Bedienung, Rezepte und Fehlerbehebung in mehreren Sprachen.</p>

