

Capello 074-10-1744

Capello 074-10-1744 Digital Alarm Clock with USB Charger User Manual

1. INTRODUCTION

Thank you for choosing the Capello 074-10-1744 Digital Alarm Clock with USB Charger. This manual provides essential information for the proper setup, operation, and maintenance of your new alarm clock. Please read these instructions carefully before use and retain them for future reference.

2. PRODUCT OVERVIEW

The Capello 074-10-1744 is a digital alarm clock designed for tabletop use, featuring a clear time display and a convenient USB charging port. Its unique design incorporates a wood composite frame and a digital display that projects time onto a surface behind the clock.

Key Features:

- Digital Time Display
- Dual Alarm Functionality
- Integrated USB Charging Port
- Modern Wood Composite Design

Package Contents:

- Capello 074-10-1744 Digital Alarm Clock
- AC Power Adapter



Figure 1: Front view of the Capello 074-10-1744 Digital Alarm Clock, displaying '12:46 PM' and two alarm icons.

3. SETUP

3.1 Power Connection

1. Unpack the alarm clock and its AC power adapter.
2. Insert the small end of the AC power adapter into the DC IN port located on the back of the alarm clock.
3. Plug the larger end of the AC power adapter into a standard wall outlet.
4. The clock display will illuminate, indicating it has power.

Note: This alarm clock operates primarily on corded electric power. No batteries are required for its main functions.

4. OPERATING INSTRUCTIONS

4.1 Setting the Time

Locate the control buttons on the back or top of the clock. (Specific button labels may vary, typically 'Time Set', 'Hour', 'Minute').

1. Press the **Time Set** button (or equivalent) once. The hour digits will begin to flash.
2. Use the **Hour** button (or '+' / '-' buttons) to adjust the hour. Pay attention to the AM/PM indicator.
3. Press the **Time Set** button again. The minute digits will begin to flash.
4. Use the **Minute** button (or '+' / '-' buttons) to adjust the minutes.
5. Press the **Time Set** button one more time to confirm and exit time setting mode.

4.2 Setting the Alarm(s)

This clock supports dual alarms (Alarm 1 and Alarm 2, indicated by bell icons on the display).

1. Press the **Alarm 1 Set** button (or equivalent). The Alarm 1 hour digits will flash.
2. Adjust the hour using the **Hour** button, observing the AM/PM indicator.
3. Press **Alarm 1 Set** again. The minute digits will flash.
4. Adjust the minutes using the **Minute** button.
5. Press **Alarm 1 Set** one more time to confirm and activate Alarm 1. The Alarm 1 bell icon will appear on the display.
6. Repeat steps for **Alarm 2 Set** if desired.

4.3 Deactivating/Activating Alarms

To turn an alarm ON or OFF, press the corresponding **Alarm 1 ON/OFF** or **Alarm 2 ON/OFF** button. The bell icon for that alarm will appear (ON) or disappear (OFF) from the display.

4.4 Snooze Function

When an alarm sounds, press the **Snooze** button (usually a large button on top) to temporarily silence the alarm for a few minutes. The alarm will sound again after the snooze period ends.

4.5 Using the USB Charging Port

A USB charging port is located on the back of the clock. This port provides power to charge compatible devices such as smartphones or tablets. Simply connect your device's USB charging cable to the port.

4.6 Display Visibility and Backlight

The Capello 074-10-1744 features a unique display design where the time is projected onto a surface behind the clock. For optimal visibility, place the clock in front of a light-colored, flat surface (e.g., a wall or headboard).

- The display's backlight automatically dims after a period of inactivity to conserve energy.
- To temporarily brighten the display, gently tap the clock.



Figure 2: The Capello 074-10-1744 Digital Alarm Clock in a dimly lit environment, illustrating the projected display.

5. MAINTENANCE

To ensure the longevity and proper functioning of your alarm clock, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the clock. Do not use abrasive cleaners, waxes, or solvents.
- **Placement:** Avoid placing the clock in direct sunlight, near heat sources, or in areas with high humidity.
- **Power:** Always disconnect the power adapter from the wall outlet before cleaning or if the clock will be unused for an extended period.

6. TROUBLESHOOTING

If you encounter any issues with your Capello alarm clock, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clock display is dim or unreadable.	Automatic dimming activated; insufficient light on the surface behind the clock.	Tap the clock to temporarily brighten the display. Ensure the clock is placed in front of a light-colored, flat surface for optimal projection.
Clock is not powering on.	Power adapter not properly connected or power outlet is not functioning.	Check that the AC power adapter is securely plugged into both the clock and a working wall outlet. Try a different outlet.
Alarm is not sounding.	Alarm is not activated or set incorrectly.	Verify that the alarm time is set correctly (AM/PM) and that the alarm is activated (bell icon visible on display).
USB charging port is not working.	Device not compatible or cable faulty.	Ensure your device is compatible with USB charging. Try a different USB cable. Confirm the clock is powered on.

7. SPECIFICATIONS

- **Brand:** Capello
- **Model:** 074-10-1744
- **Display Type:** Digital
- **Style:** Modern
- **Special Feature:** Alarm, USB Charging Port
- **Product Dimensions:** 6" W x 3" H (approximately 15.24 cm W x 7.62 cm H)
- **Power Source:** Corded Electric
- **Material:** Plastic, Wood Composite
- **Mounting Type:** Tabletop
- **Item Weight:** 7.2 ounces (approximately 204 grams)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Capello customer service through their official website. Please have your model number (074-10-1744) and purchase details ready when contacting support.