

Edifier W806BT

Edifier W806BT Bluetooth Headphones User Manual

Model: W806BT

1. INTRODUCTION

Thank you for choosing the Edifier W806BT Bluetooth Headphones. This manual provides detailed instructions on how to set up, operate, and maintain your headphones to ensure optimal performance and longevity. The W806BT offers a superior audio experience with its 40mm drivers, extended battery life, and comfortable design, suitable for various audio needs.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Edifier W806BT Bluetooth Headphones
- 1 x 3.5mm Audio Cable
- 1 x USB Charging Cable
- 1 x User Manual

3. PRODUCT OVERVIEW AND FEATURES

The Edifier W806BT headphones are designed for comfort and high-fidelity audio, featuring both wireless Bluetooth and wired connectivity options.



Image: Edifier W806BT Bluetooth Headphones. This image displays the Edifier W806BT headphones, showcasing their over-ear design and sleek black finish. The earcups appear cushioned for comfort, and the headband is adjustable.

Key Features:

- **Dual Mode Connectivity:** Seamlessly switch between wireless Bluetooth V4.0 and wired 3.5mm audio cable connection.
- **Extended Battery Life:** Up to 70 hours of playback and 800 hours of standby time on a single 4.5-hour charge,

thanks to the 1400mAh lithium battery and low-power circuit design.

- **High-Fidelity Sound:** Equipped with 40mm NdFeB high-performance drivers, composite diaphragm, and a large Japanese black voice coil for powerful bass and clear vocal music.
- **Comfortable Ergonomic Design:** Elastic sponge earcups wrapped in synthetic leather provide comfort for all-day wear. The adjustable headband can tilt 15 degrees for a customized fit.
- **Hands-Free Calling:** Built-in omnidirectional high-sensitivity microphone with simple on-ear controls for managing calls.

4. CONTROLS AND FUNCTIONS

Familiarize yourself with the control buttons located on the earcup for easy operation.

Button/Port	Function
Power Button	Press and hold to power on/off. Short press to play/pause music.
Volume Up (+)	Short press to increase volume. Long press for next track.
Volume Down (-)	Short press to decrease volume. Long press for previous track.
Microphone	Built-in for hands-free calls.
3.5mm Audio Jack	For wired connection using the included audio cable.
Micro USB Charging Port	For charging the headphones using the included USB cable.

5. SETUP

5.1 Charging the Headphones

1. Connect the micro USB end of the charging cable to the charging port on the headphones.
2. Connect the USB-A end of the charging cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (e.g., red for charging, off or blue for fully charged).
4. A full charge takes approximately 4.5 hours.

5.2 Bluetooth Pairing

1. Ensure the headphones are fully charged.
2. With the headphones powered off, press and hold the Power button for approximately 5-7 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Edifier W806BT" from the list of found devices.
5. Once paired, the LED indicator will flash blue slowly, and you may hear a confirmation tone.
6. If prompted for a password, enter "0000".

Note: The headphones can only pair with one device at a time. To pair with a new device, disconnect from the current device or ensure the headphones are in pairing mode.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **Power On:** Press and hold the Power button for 3 seconds.
- **Power Off:** Press and hold the Power button for 3 seconds.

6.2 Music Playback (Bluetooth Mode)

- **Play/Pause:** Short press the Power button.
- **Volume Up:** Short press the "+" button.
- **Volume Down:** Short press the "-" button.
- **Next Track:** Long press the "+" button.
- **Previous Track:** Long press the "-" button.

6.3 Phone Calls (Bluetooth Mode)

- **Answer Call:** Short press the Power button when an incoming call rings.
- **End Call:** Short press the Power button during a call.
- **Reject Call:** Long press the Power button when an incoming call rings.
- **Redial Last Number:** Double-press the Power button.

6.4 Wired Mode

If the headphones run out of battery or you prefer a wired connection, use the included 3.5mm audio cable.

1. Plug one end of the 3.5mm audio cable into the audio jack on the headphones.
2. Plug the other end into the 3.5mm audio output of your device.
3. In wired mode, the headphone's controls (volume, play/pause) may not function, and you will need to control playback and volume directly from your connected device.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in use for extended periods.
- **Avoid Moisture:** Do not expose the headphones to water or excessive moisture.
- **Handle with Care:** Avoid dropping or subjecting the headphones to strong impacts.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; device Bluetooth off; too many paired devices.	Ensure headphones are in pairing mode (flashing blue/red). Turn device Bluetooth off/on. Clear Bluetooth history on device and try again.
No sound or low volume.	Volume too low on headphones or device; incorrect audio output selected on device.	Increase volume on both headphones and device. Check device's audio output settings.

Problem	Possible Cause	Solution
Sound is distorted or intermittent.	Too far from device; interference; low battery.	Move closer to the device. Avoid strong electromagnetic interference. Charge the headphones.
Microphone not working clearly.	Microphone obstructed; software issue on device.	Ensure microphone is not covered. Check device's audio input settings. Try restarting the device.

9. SPECIFICATIONS

Feature	Detail
Bluetooth Version	CSR Bluetooth V4.0
Bluetooth Profiles	HSP/HFP/A2DP/AVRCP
Driver Unit	40mm NdFev
Impedance	32 Ω
Sensitivity	100dB
Frequency Response	20Hz - 20kHz
Battery Capacity	1400mAh Lithium
Charging Time	Approx. 4.5 hours
Playback Time	Up to 70 hours
Standby Time	Up to 800 hours
Connectivity	Wireless (Bluetooth) / Wired (3.5mm Audio Jack)
Weight	249g

10. WARRANTY AND SUPPORT

Edifier products are designed with quality and reliability in mind. For warranty information and customer support, please refer to the warranty card included in your package or visit the official Edifier website. If you encounter any issues not covered in this manual, please contact Edifier customer service for assistance.

Note: Some reviews mention warranty handled by Amazon for 30 days, and direct support might be limited. Always check the latest warranty policy from the manufacturer or your point of purchase.

11. SAFETY INFORMATION

- Do not disassemble, repair, or modify the product.
- Keep the product away from heat sources, direct sunlight, and high humidity.
- Do not use the product in environments with extreme temperatures (below 0°C or above 45°C).
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Do not use the headphones while driving or in situations where you need to be aware of your surroundings.

- Dispose of the product and its battery responsibly according to local regulations.

© 2024 Edifier. All rights reserved.

Related Documents

 <p>EDIFIER W806BT Headphones Stereo Headphone Operating Instructions</p>	<p>Edifier W806BT Bluetooth Headphones Operating Instructions Comprehensive operating instructions for the Edifier W806BT Bluetooth Stereo Headphones, covering features, specifications, operation, maintenance, FAQs, and safety warnings.</p>
 <p>EDIFIER W820NB Headphones User Manual</p> <p>EN 1. Product description and accessories</p> <p>Multi-function button Charging port</p> <p>Accessories: Headset x1, Charging cable x1, User manual x1</p> <p>Note: - Images are for illustrative purposes only and may differ from the actual product. - To use the hands-free feature connect this headset to audio output devices with a Type-C-Dongle cable.</p> <p>2. Power on/off</p> <p>Power on: Press and hold the power button for around 2 seconds, and the blue light will turn on. Power off: Press and hold the power button for around 2 seconds, and the blue light will turn off and then turn on.</p> <p>3. Charge</p> <p>Charge the headset: - Connect the headset to a power source for charging with the included charging cable. - Red and green lights = charging - Red light = fully charged - Blue light = off</p> <p>Input: 5V 2A</p> <p>Warning: The rechargeable batteries that provide power for this product must be disposed of properly for recycling. Do not dispose of batteries in fire, prevent short-circuit or overheat.</p> <p>4. User guide</p> <p>Bluetooth connection</p> <p>For initial use, press and hold the power button for around 2 seconds to power on the headset. Once the headset is powered on, pair it with a device and rapidly, auto-enabling Bluetooth pairing. Once the pairing is successful, the blue light will flash twice for subsequent use. To connect to a different device, repeat the pairing process. To disconnect from the current device, hold the power button for around 2 seconds to device connection, and the blue and green lights will flash alternately for rapid pairing.</p> <p>Return to factory settings: - When the headset is powered on, press and hold the '+' and '-' buttons simultaneously for around 2 seconds and the blue light flashes in a series of short pulses.</p> <p>Music playback</p> <p>Volume up: single press Next track: press and hold Pause/Play: single press Voice assistant: double press Volume down: single press Previous track: press and hold</p>	



4. Mode switch/Bluetooth pairing



5. FAQs

Red light flashes at the right button.
The button is lit in red when the device recharge the headset.

No sound.
Check if the headset is operating.
Check if the headset volume is at an appropriate level.
Check if the headset is correctly connected with mobile phone.
Check if the mobile phone volume is at an appropriate level.

The headband is not good.
Check if the product is not too strong.
Please clean the product with a soft cloth.

When playing music, cannot control play/pause/previous/next track via the headset.
Please use the remote control or a second device support IR/RC (Audio/Video Remote Control Profile) profile.

6. Maintenance

It is not used for long periods of time, please charge the product with lithium battery every three months.
Do not expose the product to direct sunlight or places exposed to heat during intense circuit.
Do not put the product in places exposed to sun or high temperature, this may cause the product to overheat and damage the product.
Do not expose the product to direct sunlight or places exposed to heat during intense circuit.
Do not expose the product to direct sunlight or places exposed to heat during intense circuit.
Do not damage the product. Non-professional persons may damage the product.
Do not drop, strongly vibrate, strike the product with hard object to avoid damage the product.
Do not use sharp chemicals or solvent to clean the product.
Do not use tools to clean the product to avoid product surface to avoid damaging shell and affecting heads.

Model: EDK20004

Edifier International Limited
P.O. Box 6262
General Post Office
Hong Kong
www.edifier.com

©2021 Edifier International Limited. All rights reserved.
Printed in China.

NOTICE:
For the need of technical improvements and system upgrades, information contained herein may be subject to change from time to time.
Products of Edifier will be customized for different applications.
Pictures and illustrations shown on this manual may be slightly different from the products. Any difference found, the actual product prevails.

FR 1. Description du produit et accessoires



Accessoires: Casque d'écoute x1, Câble de recharge x1, Manuel d'utilisation x1

Remarque:
Les boutons multidirections sont de référence uniquement, et peuvent ne pas correspondre au produit.
Les câbles fournis sont des câbles branchés sur ce casque audio à la source audio avec un câble de données de type C.

2. Allumer/étendre

• Allumer :
Mettre le bouton d'allumage appuyé pendant environ 3 secondes.
Le voyant bleu s'allume.
• Éteindre :
Mettre le bouton d'allumage appuyé pendant environ 3 secondes.
Le voyant bleu s'éteint.



3. Charger



• Chargez le casque audio :
Connectez le casque audio pour le chargez avec le câble inclus.
Voyant bleu clignotant en continu ou éteint lorsque le casque audio est complètement chargé.

Étendez 30 ~ 60 s.

Attention : La batterie rechargeable qui alimente ce produit est dérivée de la technologie pour la recharge. Ne pas utiliser une batterie au lithium risque d'explosion.

4. Instructions d'utilisation

a. Connexion Bluetooth



• Pour l'utilisation initiale, maintenez le bouton d'alimentation appuyé pendant environ 3 secondes pour allumer le casque audio. Les réseaux Bluetooth sont automatiquement activés. Lorsque le casque audio est connecté avec un périphérique Bluetooth, l'indicateur LED bleu clignote et l'application Bluetooth de l'appareil mobile effectue la connexion avec succès. Lorsque le casque audio est connecté avec un périphérique Bluetooth, l'indicateur LED bleu clignote et l'application Bluetooth de l'appareil mobile effectue la connexion avec succès.

• Connectez de nouveaux appareils Bluetooth. Lorsque le casque audio est connecté avec un périphérique Bluetooth, l'indicateur LED bleu clignote et l'application Bluetooth de l'appareil mobile effectue la connexion avec succès pour effectuer la connexion avec l'appareil. Les indicateurs bleus et vert clignotent alternativement.

• Réinitialisez les paramètres d'usine.

• Lorsque vous allumez le casque audio, maintenez les boutons « + » et « - » pressés ensemble pendant environ 10 secondes jusqu'à ce que le voyant bleu clignote et l'indicateur LED bleu clignote.

• Lorsque vous allumez le casque audio, maintenez les boutons « + » et « - » pressés ensemble pendant environ 10 secondes jusqu'à ce que le voyant bleu clignote et l'indicateur LED bleu clignote.

b. Lecture de musique

• Augmentation du volume une seule pression :
Augmentation du volume une seule pression.
• Augmentation du volume plusieurs fois :
Augmentation du volume plusieurs fois.

• Réduction du volume une seule pression :
Réduction du volume une seule pression.
• Réduction du volume plusieurs fois :
Réduction du volume plusieurs fois.

c. En appel

• Désactiver/déactiver un appel :
Désactiver/déactiver un appel une seule pression.
• Réduire un appel plusieurs fois :
Réduire un appel plusieurs fois.



5. FAQs

El十里anga parapadeo en roja en lugar de azul.
- El auricular tiene batería blanca; recarga azul.

Se sentó

- Cambió la función del auricular.
- Comprueba si el volumen del auricular está al nivel adecuado.
- Cambió la función del auricular para que esté completamente conectada al móvil.
- Cambió la función del auricular dentro de la distancia normal de funcionamiento.

El efecto de llamada del auricular es malo.

- Cambió el auricular de teléfono móvil en otra zona con buena señal.
- Cambió la función del auricular para que esté completamente conectada al móvil.
- Cambió la función del auricular dentro de la distancia normal de funcionamiento.

Cuando se reproduce música, no se puede controlar pausar/ reproducción/pausa/ anterior/siguiente que el auricular.

- Comprueba que el dispositivo en el que se comparte el perfil de conexión con el auricular tiene Configuración Perfil de conexión (sección 4.6).

6. Mantenimiento

Model: DFD200046
Edifier International Limited
P.O. Box 6254
General Post Office
Hong Kong
www.edifier.com
©2021 Edifier International Limited. Todos los derechos reservados.
Impreso en China

NOTIFICACIÓN:

sistema, la información aquí contenida puede estar sujeta a cambios
ocasionales sin previo aviso.
Los productos EDIFER se personalizan para distintas aplicaciones.
Las imágenes e ilustraciones mostradas en este manual pueden ser
ligeramente distintas del producto real. Si se encuentra alguna
diferencia, prevalece el producto real.

DE 1. Produktbeschreibung und Zubehör



Zubehör: Ohrhörer x1, Ladekabel x1, Bedienungsanleitung x1

Hinweis:
• Die Abbildungen dienen ausschließlich zur Veranschaulichung und können vom tatsächlichen Produkt abweichen.
• Um Hi-Fi-Audio zu genießen, schließen Sie dieses Headset bitte mit einem Typ-C-Datenkabel an Audiausgabegeräte an.

2. Einschalten/Ausschalten

- **Einschalten:**
Haben Sie den Ein-/Ausschalter etwa 3 Sekunden lang gedrückt. Das blaue Licht leuchtet auf.
- **Ausschalten:**
Haben Sie den Ein-/Ausschalter etwa 3 Sekunden lang gedrückt. Das blaue Licht leuchtet auf.



⚠ Achtung: Die aufzuladenen Batterien, die Strom für dieses Produkt zur Verfügung stellen, müssen korrekt für das Recycling entsorgt werden. Werfen Sie Akkus nicht ins Feuer, um der Gefahr einer Explosion vorzubeugen.

• Bluetooth-Kopplung



- Halten Sie bei der ersten Anwendung den Ein-/Ausschalter etwa 3 Sekunden lang gedrückt, um das Headset einzuschalten. Das blaue und grüne Licht beginnen abwechselnd und schnell und beginnen automatisch die Bluetooth®-Kopplung.
- Sollten Sie das Headset so ein, dass es nach „ZOEHR WOODIE“ sucht und eine Verbindung zu diesem herstellt, kann der eingehängte Reißverschluss das blaue Licht zermalen. Für die spätere Verbindung wird das Headset mit dem zuletzt verwendeten Gerät verbunden.
- Verbindung zu neuen Bluetooth®-Geräten herstellen: Wenn das Headset eingeschaltet ist, halten Sie die Multifunktionstaste für die Geräteverbindung etwa 3 Sekunden lang gedrückt. Das blaue und grüne Licht bleiben abwechselnd schnell.

- Wirkereinstellungen wiederherstellen
 - Wenn das Headset eingeschaltet ist, halten Sie die Tasten „+“ und „-“ gleichzeitig etwa 5 Sekunden gedrückt, bis das blaue Licht sechs Mal schnell hintereinander blinks, um die letzten Kopplungen zu löschen.



• Anruftätigen



[Edifier W820NB Headphones: User Manual and Features](#)

Comprehensive guide to the Edifier W820NB headphones, covering setup, Bluetooth connectivity, music playback, troubleshooting, and maintenance. Learn about active noise cancelling and Hi-Res audio.

La batteria funziona per circa 40 ore.
• Collegare il caricabatteria e caricare la batteria, ricaricare gli cuffie.
Notifica di scarica della batteria
• Verificare se gli cuffie sono funzionanti.
• Verificare se il caricabatteria è in carica.
• Verificare se il caricabatteria è collegato a una fonte di corrente.
• Verificare se gli cuffie sono collegati a un caricabatteria o a una fonte di corrente.
Quando si riproduce un brano musicale, non è possibile spegnere il controllo volume.
• Accendere la riproduzione musicale, premere il pulsante di pausa, riproduzione, lasciare precedente/successivo tranne il controllo volume.
• Accendere che il dispositivo accoppiato supporta il protocollo HFP/HSP/AVRCP.
• Accendere il dispositivo che accoppiare supporta il protocollo HFP/HSP/AVRCP.

6. Manutenzione

Il prodotto che si consiglia di tenere al di fuori delle zone con una volta ogni tre mesi di prodotti che non vengono utilizzati per lungo tempo.
• Conservare i prodotti al riparo da umidità, calore per evitare di danneggiare i prodotti.
• Non esporre i prodotti in luoghi esposti a raggi ultravioletti diretti, come i raggi del sole, per evitare che i prodotti vengano ricoperti da buchi o danneggiati.
• Non esporre i prodotti in luoghi esposti a calore e umidità, come i bagno o la cucina, per evitare che i prodotti vengano danneggiati.
• Non esporre i prodotti in luoghi esposti a calore e umidità, come i bagno o la cucina, per evitare che i prodotti vengano danneggiati.
• Non esporre i prodotti in luoghi esposti a calore e umidità, come i bagno o la cucina, per evitare che i prodotti vengano danneggiati.
• Non esporre i prodotti in luoghi esposti a calore e umidità, come i bagno o la cucina, per evitare che i prodotti vengano danneggiati.
• Non esporre i prodotti in luoghi esposti a calore e umidità, come i bagno o la cucina, per evitare che i prodotti vengano danneggiati.
• Non esporre i prodotti in luoghi esposti a calore e umidità, come i bagno o la cucina, per evitare che i prodotti vengano danneggiati.
• Non esporre i prodotti in luoghi esposti a calore e umidità, come i bagno o la cucina, per evitare che i prodotti vengano danneggiati.

Model: EDF2004A

Edifier International Limited

P.O. Box 6242

General Post Office

Hong Kong

Web: www.edifier.com

©2021 Edifier International Limited. Tutti i diritti riservati.

Stampato in Cina

COMUNICAZIONE:
Per ricevere aggiornamenti tecnici e aggiornamenti del sistema, le informazioni qui contenute possono essere soggette a modifiche periodiche.
I prodotti EDIFIER servono personalizzati per applicazioni diverse.
Le immagini mostrate in questo manuale possono differire leggermente da quelle reali nel caso di eventuali difetti, prevale il prodotto reale.

PT 1. Descrição do produto e acessórios



Aparelho fone de ouvido x1, Cabo de carregamento x1, Manual do utilizador x1

Nota:
• As imagens das aplicações, funções e ecrãs, etc. da produto real, podem ser diferentes devido ao ambiente de utilização e dispositivos de saída de áudio com um cabo de áudio tipo "Toslink".

2. Ligar/desligar

• Ligar:
Pressione e segure o botão de energia por cerca de 2 segundos, e a luz piscará.
• Desligar:
Pressione e segure o botão de energia por cerca de 2 segundos, e a luz piscará (apagada) e encerrá-se o dispositivo.



3. Carregar

• Carregue o fone de ouvido:
• Coloque o fone de ouvido para carregar dentro do carregador.
• Ligue o carregador e verifique se a luz piscará.
• Desligue o carregador e verifique se a luz piscará.
Entrada: 5V⎓1A

Atenção: As baterias recarregáveis que alimentam esse produto não devem ser descartadas juntas com os resíduos domésticos. Não elimine as baterias no fogão para evitar um incêndio.

4. Guia de funcionamento

a. Ligar/Desligar



Para liga e desligar, pressione e segure o botão de energia por cerca de 2 segundos. Para ligar o fone de ouvido com o fone de ouvido, conecte o dispositivo a um dispositivo de áudio e, em seguida, conecte o dispositivo de áudio ao fone de ouvido.

• Certifique-se de que o dispositivo que deseja conectar ao TOSLINK, pode suportar a função de áudio de saída. Se o dispositivo que deseja conectar ao TOSLINK não suportar a função de áudio de saída, o dispositivo não pode ser conectado ao fone de ouvido.

• Certifique-se de que o dispositivo que deseja conectar ao fone de ouvido é suportado para reprodução de áudio. Se o dispositivo que deseja conectar ao fone de ouvido não suportar para reprodução de áudio, o dispositivo não pode ser conectado ao fone de ouvido.

b. Reprodução de áudio



c. Interruptor de modo/Espera/funcionamento Bluetooth



5. FAQs

A luz vermelha piscar em vez da luz azul.

- indica a que horas de fone de ouvido é Fase 1, recuperação
- NÃO é entendido nenhum sinal de fone de ouvido
- Verifica se o fone é conectado e funcionando
- Verifica se o volume do fone de ouvido está num nível adequado
- Verifica se o fone de ouvido está dentro da memória de alcance normal

A qualidade da chamada da hora de ouvido é ruim.

- Certifique se de que o seu imphrime é dentro de uma área com um sinal forte
- Verifica se o fone de ouvido está dentro de uma distância efetiva (10m) e que não estejam obstruindo a frente de ouvido e imphrime

A reprodução musical, não é possível controlar a passagem/reprodução/falha ação/ativação seguidas através do fone de ouvido.

Verifique se o fone de ouvido é conectado e funcionando

Verifique se o volume do fone de ouvido está num nível adequado

Verifique se o fone de ouvido está dentro da memória de alcance normal

Verifique se o fone de ouvido está dentro de uma área com um sinal forte

Verifique se o fone de ouvido está dentro de uma distância efetiva (10m) e que não estejam obstruindo a frente de ouvido e imphrime

6. Manutenção

- se não for usado por longo período, carregue a produto com bateria de lítio (caixa bateria).
- Mantenha o produto de uso de bateria húmidas para evitar que a bateria se encoste.
- Não coloque o produto em locais expostos ao sol ou com altas temperaturas. As temperaturas altas diminuem a vida útil da bateria das componentes.
- Não coloque o produto em locais com temperaturas muito baixas ou muito altas.
- Não coloque o produto em locais húmidos para evitar danos da bateria e evite a oxidação.
- Não use o produto. Se uma pessoa não profissional apear o produto, poderá danificá-lo.
- Não deixe o produto, não só agir fortemente e não bata no produto com força.
- Não use o produto se estiver com a bateria baixa.
- Não use produtos químicos e líquidos para limpá-lo para que o forte líquido não danifique o produto.
- Não use eletrodomésticos que não suportem a superfície de produto e evitar níveis de resistência e aletar a superfície.

Modelo EDIF200046
Edifller International Limited
P.O. Box 6264
General Post Office
Hong Kong

www.edifller.com
© 2021 Edifller International Limited. Todos os direitos reservados.
Impresso na China

Aviso:
Para a necessidade de melhoramento técnico e atualização do sistema, as informações contidas neste documento poderão ser sujeitas a alteração, periodicamente, sem aviso prévio.
Os produtos da EDIFLDER serão personalizados para aplicações

JP 1. 製品の説明とアクセサリー



アクセサリー(ヘッドセット), 有線ケーブル), ユーザーズガイド)

注意:
・画像は参考図です。
・Hi Res Audioを楽しむには、C型データケーブルでこのヘッドセットをオーディオ出力デバイスに接続します。

2. オン/オフ

- ・ オン:
電源ボタンを約3秒間長押すると、青色ライトが点灯します。
- ・ オフ:
電源ボタンを約3秒間長押すると、赤色ライトが点灯して、すぐに消



3. 亮電



警告：本製品に電源を供給する充電式バッテリーは、正しくリサイクルして廃棄する必要があります。廃棄を防ぐために、バッテリーは火や水に絶対にないでください。

4. ユーザーガイド

• Bluetooth®



- ・初回使用時は、電源ボタンを約3秒長押してヘッドセットの電源をオンにする。青色・緑色ライトが交互に点滅し、自動でBluetoothペアリングになります。
- ・携帯電話を「EXTERIORWIRELESS」を検索して接続します。ペアリングが正常に完了すると、青色ライトが3回点滅します。2回目の使用以降は、ヘッドセットは自動的にペアリングに接続されます。
- ・新しいBluetoothデバイスを登録する。ヘッドセットの電源がオフのとき、多機能ボタンを約3秒長押してデバイスに接続する。青色と

- ・工場設定に復元する
 - ・ヘッドセットの電源がオンのとき、「+」と「-」ボタンを青色ライトが4回点滅しペアリング登録が消去されるまで、同時に約5秒間長い音が鳴ります。

モードスイッチ: Bluetoothペアリング
モードスイッチ: 1回押す
アンペニン: サウンド - モード
ノイズ - キャンセル - モード
選曲モード
ゲームモード: 2回押す

黄色ライトではなく赤い色が点滅します。
バッテリー充電がなくなり、ヘッドセットを充電してください。
音が途切れ
・ヘッドセットが動作しているか確認します。
・ヘッドセットの音量が弱すぎるかであるか確認します。
・ヘッドセットが音楽再生中に操作されているか確認します。
・ヘッドセットが他の機器連接時に操作されているか確認します。
ヘッドセットの音楽再生品質が良い
・ヘッドセットが音楽再生中に操作されているか確認します。
・ヘッドセットが音楽再生中に操作されているか確認します。
・ヘッドセットが音楽再生中に操作されているか確認します。
音楽を設定するとき、ヘッドセットを介して一時停止(再生)の曲の次の曲を自動的に再生する
・ヘッドセットを介して一時停止(再生)の曲の次の曲を自動的に再生する

replacement.



S3
Wireless Over-Ear Headphones

— Manual — **BC**

1. Power

1 Press and hold the MFB button for 3s when power ON.
2 Power OFF: Press and hold the MFB button for 5s when power ON.

2. Pairing

1 Press and hold the MFB button for 3s when power ON.
2 Power ON: Press and hold the MFB button for 5s when power ON.

Note:
1. In pairing mode, the headset will automatically connect to the device with the lowest signal strength.
2. Press and hold the MFB button for 5s when power ON.

3. Reset

1 Power on and disconnect to any Bluetooth device.
2 Simultaneously press and hold the “+” button for 5s to reset and start.
3 Blue LED will blink 3 times rapidly when successful.

4. Dual Connectivity

1 Pair device A with the headphones (Upon success, disconnect the Bluetooth of device A or power off the headphones and long press the MFB button of device A for 5s to connect to device B).
2 Pair device B with the headphones (Upon success, disconnect the Bluetooth of device B or power off the headphones and long press the MFB button of device B for 5s to connect to device A).
3 Select TOPFM (FM 88MHz 107MHz) as device A to connect to device B.
4 Select TOPFM (FM 88MHz 107MHz) as device B to connect to device A.
5 Select TOPFM (FM 88MHz 107MHz) as device A to connect to device B.
6 Select TOPFM (FM 88MHz 107MHz) as device B to connect to device A.

5. Charge

1 Please connect this product to power source with the included Type C charging cable for charging.
2 Blue LED is ready to begin charging and off when fully charged.
3 Input: 5V 2A

6. AUX Cable

1 Connect the AUX cable to the headphones and the device you want to play music from, and the headphones will switch to AUX mode and connect to the device you want to play music from. The headphones will automatically power on and the blue LED will blink 3 times rapidly when successful.
2 Unplug the AUX cable from the headphones and the headphones will power off automatically.
3 Green LED is steady when in the AUX mode.

7. Controls

Note:
1. Press and hold:
- Press and hold the headset when there is sweat or other liquids.
- Press and hold the headset when there is sweat or other liquids.
- Images are for illustrative purposes only and may differ from the actual product.
2. Download Edifier Connect App for more customizable connection settings.

8. Ear cushion replacement method

[Edifier W830BT Wireless Stereo Headphones User Manual and Features](#)

Comprehensive user manual for Edifier W830BT Wireless Stereo Headphones. Discover features, specifications, setup, call handling, music playback, maintenance, and essential safety information.




Documents - Edifier – W806BT

For more information, please visit our website:
www.edifier.com




Model: FTF720BT1
Edifier International Limited
7/F, 9/F, 10/F, 11/F, 12/F, 13/F, 14/F, 15/F, 16/F, 17/F, 18/F, 19/F, 20/F, 21/F, 22/F, 23/F, 24/F, 25/F, 26/F, 27/F, 28/F, 29/F, 30/F, 31/F, 32/F, 33/F, 34/F, 35/F, 36/F, 37/F, 38/F, 39/F, 40/F, 41/F, 42/F, 43/F, 44/F, 45/F, 46/F, 47/F, 48/F, 49/F, 50/F, 51/F, 52/F, 53/F, 54/F, 55/F, 56/F, 57/F, 58/F, 59/F, 60/F, 61/F, 62/F, 63/F, 64/F, 65/F, 66/F, 67/F, 68/F, 69/F, 70/F, 71/F, 72/F, 73/F, 74/F, 75/F, 76/F, 77/F, 78/F, 79/F, 80/F, 81/F, 82/F, 83/F, 84/F, 85/F, 86/F, 87/F, 88/F, 89/F, 90/F, 91/F, 92/F, 93/F, 94/F, 95/F, 96/F, 97/F, 98/F, 99/F, 100/F, 101/F, 102/F, 103/F, 104/F, 105/F, 106/F, 107/F, 108/F, 109/F, 110/F, 111/F, 112/F, 113/F, 114/F, 115/F, 116/F, 117/F, 118/F, 119/F, 120/F, 121/F, 122/F, 123/F, 124/F, 125/F, 126/F, 127/F, 128/F, 129/F, 130/F, 131/F, 132/F, 133/F, 134/F, 135/F, 136/F, 137/F, 138/F, 139/F, 140/F, 141/F, 142/F, 143/F, 144/F, 145/F, 146/F, 147/F, 148/F, 149/F, 150/F, 151/F, 152/F, 153/F, 154/F, 155/F, 156/F, 157/F, 158/F, 159/F, 160/F, 161/F, 162/F, 163/F, 164/F, 165/F, 166/F, 167/F, 168/F, 169/F, 170/F, 171/F, 172/F, 173/F, 174/F, 175/F, 176/F, 177/F, 178/F, 179/F, 180/F, 181/F, 182/F, 183/F, 184/F, 185/F, 186/F, 187/F, 188/F, 189/F, 190/F, 191/F, 192/F, 193/F, 194/F, 195/F, 196/F, 197/F, 198/F, 199/F, 200/F, 201/F, 202/F, 203/F, 204/F, 205/F, 206/F, 207/F, 208/F, 209/F, 210/F, 211/F, 212/F, 213/F, 214/F, 215/F, 216/F, 217/F, 218/F, 219/F, 220/F, 221/F, 222/F, 223/F, 224/F, 225/F, 226/F, 227/F, 228/F, 229/F, 230/F, 231/F, 232/F, 233/F, 234/F, 235/F, 236/F, 237/F, 238/F, 239/F, 240/F, 241/F, 242/F, 243/F, 244/F, 245/F, 246/F, 247/F, 248/F, 249/F, 250/F, 251/F, 252/F, 253/F, 254/F, 255/F, 256/F, 257/F, 258/F, 259/F, 260/F, 261/F, 262/F, 263/F, 264/F, 265/F, 266/F, 267/F, 268/F, 269/F, 270/F, 271/F, 272/F, 273/F, 274/F, 275/F, 276/F, 277/F, 278/F, 279/F, 280/F, 281/F, 282/F, 283/F, 284/F, 285/F, 286/F, 287/F, 288/F, 289/F, 290/F, 291/F, 292/F, 293/F, 294/F, 295/F, 296/F, 297/F, 298/F, 299/F, 299/F, 300/F, 301/F, 302/F, 303/F, 304/F, 305/F, 306/F, 307/F, 308/F, 309/F, 310/F, 311/F, 312/F, 313/F, 314/F, 315/F, 316/F, 317/F, 318/F, 319/F, 320/F, 321/F, 322/F, 323/F, 324/F, 325/F, 326/F, 327/F, 328/F, 329/F, 330/F, 331/F, 332/F, 333/F, 334/F, 335/F, 336/F, 337/F, 338/F, 339/F, 340/F, 341/F, 342/F, 343/F, 344/F, 345/F, 346/F, 347/F, 348/F, 349/F, 350/F, 351/F, 352/F, 353/F, 354/F, 355/F, 356/F, 357/F, 358/F, 359/F, 360/F, 361/F, 362/F, 363/F, 364/F, 365/F, 366/F, 367/F, 368/F, 369/F, 370/F, 371/F, 372/F, 373/F, 374/F, 375/F, 376/F, 377/F, 378/F, 379/F, 380/F, 381/F, 382/F, 383/F, 384/F, 385/F, 386/F, 387/F, 388/F, 389/F, 390/F, 391/F, 392/F, 393/F, 394/F, 395/F, 396/F, 397/F, 398/F, 399/F, 400/F, 401/F, 402/F, 403/F, 404/F, 405/F, 406/F, 407/F, 408/F, 409/F, 410/F, 411/F, 412/F, 413/F, 414/F, 415/F, 416/F, 417/F, 418/F, 419/F, 420/F, 421/F, 422/F, 423/F, 424/F, 425/F, 426/F, 427/F, 428/F, 429/F, 430/F, 431/F, 432/F, 433/F, 434/F, 435/F, 436/F, 437/F, 438/F, 439/F, 440/F, 441/F, 442/F, 443/F, 444/F, 445/F, 446/F, 447/F, 448/F, 449/F, 450/F, 451/F, 452/F, 453/F, 454/F, 455/F, 456/F, 457/F, 458/F, 459/F, 460/F, 461/F, 462/F, 463/F, 464/F, 465/F, 466/F, 467/F, 468/F, 469/F, 470/F, 471/F, 472/F, 473/F, 474/F, 475/F, 476/F, 477/F, 478/F, 479/F, 480/F, 481/F, 482/F, 483/F, 484/F, 485/F, 486/F, 487/F, 488/F, 489/F, 490/F, 491/F, 492/F, 493/F, 494/F, 495/F, 496/F, 497/F, 498/F, 499/F, 500/F, 501/F, 502/F, 503/F, 504/F, 505/F, 506/F, 507/F, 508/F, 509/F, 510/F, 511/F, 512/F, 513/F, 514/F, 515/F, 516/F, 517/F, 518/F, 519/F, 520/F, 521/F, 522/F, 523/F, 524/F, 525/F, 526/F, 527/F, 528/F, 529/F, 530/F, 531/F, 532/F, 533/F, 534/F, 535/F, 536/F, 537/F, 538/F, 539/F, 540/F, 541/F, 542/F, 543/F, 544/F, 545/F, 546/F, 547/F, 548/F, 549/F, 550/F, 551/F, 552/F, 553/F, 554/F, 555/F, 556/F, 557/F, 558/F, 559/F, 550/F, 551/F, 552/F, 553/F, 554/F, 555/F, 556/F, 557/F, 558/F, 559/F, 560/F, 561/F, 562/F, 563/F, 564/F, 565/F, 566/F, 567/F, 568/F, 569/F, 570/F, 571/F, 572/F, 573/F, 574/F, 575/F, 576/F, 577/F, 578/F, 579/F, 570/F, 571/F, 572/F, 573/F, 574/F, 575/F, 576/F, 577/F, 578/F, 579/F, 580/F, 581/F, 582/F, 583/F, 584/F, 585/F, 586/F, 587/F, 588/F, 589/F, 580/F, 581/F, 582/F, 583/F, 584/F, 585/F, 586/F, 587/F, 588/F, 589/F, 590/F, 591/F, 592/F, 593/F, 594/F, 595/F, 596/F, 597/F, 598/F, 599/F, 590/F, 591/F, 592/F, 593/F, 594/F, 595/F, 596/F, 597/F, 598/F, 599/F, 599/F, 600/F, 601/F, 602/F, 603/F, 604/F, 605/F, 606/F, 607/F, 608/F, 609/F, 600/F, 601/F, 602/F, 603/F, 604/F, 605/F, 606/F, 607/F, 608/F, 609/F, 610/F, 611/F, 612/F, 613/F, 614/F, 615/F, 616/F, 617/F, 618/F, 619/F, 610/F, 611/F, 612/F, 613/F, 614/F, 615/F, 616/F, 617/F, 618/F, 619/F, 620/F, 621/F, 622/F, 623/F, 624/F, 625/F, 626/F, 627/F, 628/F, 629/F, 620/F, 621/F, 622/F, 623/F, 624/F, 625/F, 626/F, 627/F, 628/F, 629/F, 630/F, 631/F, 632/F, 633/F, 634/F, 635/F, 636/F, 637/F, 638/F, 639/F, 630/F, 631/F, 632/F, 633/F, 634/F, 635/F, 636/F, 637/F, 638/F, 639/F, 640/F, 641/F, 642/F, 643/F, 644/F, 645/F, 646/F, 647/F, 648/F, 649/F, 640/F, 641/F, 642/F, 643/F, 644/F, 645/F, 646/F, 647/F, 648/F, 649/F, 650/F, 651/F, 652/F, 653/F, 654/F, 655/F, 656/F, 657/F, 658/F, 659/F, 650/F, 651/F, 652/F, 653/F, 654/F, 655/F, 656/F, 657/F, 658/F, 659/F, 660/F, 661/F, 662/F, 663/F, 664/F, 665/F, 666/F, 667/F, 668/F, 669/F, 660/F, 661/F, 662/F, 663/F, 664/F, 665/F, 666/F, 667/F, 668/F, 669/F, 670/F, 671/F, 672/F, 673/F, 674/F, 675/F, 676/F, 677/F, 678/F, 679/F, 670/F, 671/F, 672/F, 673/F, 674/F, 675/F, 676/F, 677/F, 678/F, 679/F, 680/F, 681/F, 682/F, 683/F, 684/F, 685/F, 686/F, 687/F, 688/F, 689/F, 680/F, 681/F, 682/F, 683/F, 684/F, 685/F, 686/F, 687/F, 688/F, 689/F, 690/F, 691/F, 692/F, 693/F, 694/F, 695/F, 696/F, 697/F, 698/F, 699/F, 690/F, 691/F, 692/F, 693/F, 694/F, 695/F, 696/F, 697/F, 698/F, 699/F, 700/F, 701/F, 702/F, 703/F, 704/F, 705/F, 706/F, 707/F, 708/F, 709/F, 700/F, 701/F, 702/F, 703/F, 704/F, 705/F, 706/F, 707/F, 708/F, 709/F, 710/F, 711/F, 712/F, 713/F, 714/F, 715/F, 716/F, 717/F, 718/F, 719/F, 710/F, 711/F, 712/F, 713/F, 714/F, 715/F, 716/F, 717/F, 718/F, 719/F, 720/F, 721/F, 722/F, 723/F, 724/F, 725/F, 726/F, 727/F, 728/F, 729/F, 720/F, 721/F, 722/F, 723/F, 724/F, 725/F, 726/F, 727/F, 728/F, 729/F, 730/F, 731/F, 732/F, 733/F, 734/F, 735/F, 736/F, 737/F, 738/F, 739/F, 730/F, 731/F, 732/F, 733/F, 734/F, 735/F, 736/F, 737/F, 738/F, 739/F, 740/F, 741/F, 742/F, 743/F, 744/F, 745/F, 746/F, 747/F, 748/F, 749/F, 740/F, 741/F, 742/F, 743/F, 744/F, 745/F, 746/F, 747/F, 748/F, 749/F, 750/F, 751/F, 752/F, 753/F, 754/F, 755/F, 756/F, 757/F, 758/F, 759/F, 750/F, 751/F, 752/F, 753/F, 754/F, 755/F, 756/F, 757/F, 758/F, 759/F, 760/F, 761/F, 762/F, 763/F, 764/F, 765/F, 766/F, 767/F, 768/F, 769/F, 760/F, 761/F, 762/F, 763/F, 764/F, 765/F, 766/F, 767/F, 768/F, 769/F, 770/F, 771/F, 772/F, 773/F, 774/F, 775/F, 776/F, 777/F, 778/F, 779/F, 770/F, 771/F, 772/F, 773/F, 774/F, 775/F, 776/F, 777/F, 778/F, 779/F, 780/F, 781/F, 782/F, 783/F, 784/F, 785/F, 786/F, 787/F, 788/F, 789/F, 780/F, 781/F, 782/F, 783/F, 784/F, 785/F, 786/F, 787/F, 788/F, 789/F, 790/F, 791/F, 792/F, 793/F, 794/F, 795/F, 796/F, 797/F, 798/F, 799/F, 790/F, 791/F, 792/F, 793/F, 794/F, 795/F, 796/F, 797/F, 798/F, 799/F, 800/F, 801/F, 802/F, 803/F, 804/F, 805/F, 806/F, 807/F, 808/F, 809/F, 800/F, 801/F, 802/F, 803/F, 804/F, 805/F, 806/F, 807/F, 808/F, 809/F, 810/F, 811/F, 812/F, 813/F, 814/F, 815/F, 816/F, 817/F, 818/F, 819/F, 810/F, 811/F, 812/F, 813/F, 814/F, 815/F, 816/F, 817/F, 818/F, 819/F, 820/F, 821/F, 822/F, 823/F, 824/F, 825/F, 826/F, 827/F, 828/F, 829/F, 820/F, 821/F, 822/F, 823/F, 824/F, 825/F, 826/F, 827/F, 828/F, 829/F, 830/F, 831/F, 832/F, 833/F, 834/F, 835/F, 836/F, 837/F, 838/F, 839/F, 830/F, 831/F, 832/F, 833/F, 834/F, 835/F, 836/F, 837/F, 838/F, 839/F, 840/F, 841/F, 842/F, 843/F, 844/F, 845/F, 846/F, 847/F, 848/F, 849/F, 840/F, 841/F, 842/F, 843/F, 844/F, 845/F, 846/F, 847/F, 848/F, 849/F, 850/F, 851/F, 852/F, 853/F, 854/F, 855/F, 856/F, 857/F, 858/F, 859/F, 850/F, 851/F, 852/F, 853/F, 854/F, 855/F, 856/F, 857/F, 858/F, 859/F, 860/F, 861/F, 862/F, 863/F, 864/F, 865/F, 866/F, 867/F, 868/F, 869/F, 860/F, 861/F, 862/F, 863/F, 864/F, 865/F, 866/F, 867/F, 868/F, 869/F, 870/F, 871/F, 872/F, 873/F, 874/F, 875/F, 876/F, 877/F, 878/F, 879/F, 870/F, 871/F, 872/F, 873/F, 874/F, 875/F, 876/F, 877/F, 878/F, 879/F, 880/F, 881/F, 882/F, 883/F, 884/F, 885/F, 886/F, 887/F, 888/F, 889/F, 880/F, 881/F, 882/F, 883/F, 884/F, 885/F, 886/F, 887/F, 888/F, 889/F, 890/F, 891/F, 892/F, 893/F, 894/F, 895/F, 896/F, 897/F, 898/F, 899/F, 890/F, 891/F, 892/F, 893/F, 894/F, 895/F, 896/F, 897/F, 898/F, 899/F, 900/F, 901/F, 902/F, 903/F, 904/F, 905/F, 906/F, 907/F, 908/F, 909/F, 900/F, 901/F, 902/F, 903/F, 904/F, 905/F, 906/F, 907/F, 908/F, 909/F, 910/F, 911/F, 912/F, 913/F, 914/F, 915/F, 916/F, 917/F, 918/F, 919/F, 910/F, 911/F, 912/F, 913/F, 914/F, 915/F, 916/F, 917/F, 918/F, 919/F, 920/F, 921/F, 922/F, 923/F, 924/F, 925/F, 926/F, 927/F, 928/F, 929/F, 920/F, 921/F, 922/F, 923/F, 924/F, 925/F, 926/F, 927/F, 928/F, 929/F, 930/F, 931/F, 932/F, 933/F, 934/F, 935/F, 936/F, 937/F, 938/F, 939/F, 930/F, 931/F, 932/F, 933/F, 934/F, 935/F, 936/F, 937/F, 938/F, 939/F, 940/F, 941/F, 942/F, 943/F, 944/F, 945/F, 946/F, 947/F, 948/F, 949/F, 940/F, 941/F, 942/F, 943/F, 944/F, 945/F, 946/F, 947/F, 948/F, 949/F, 950/F, 951/F, 952/F, 953/F, 954/F, 955/F, 956/F, 957/F, 958/F, 959/F, 950/F, 951/F, 952/F, 953/F, 954/F, 955/F, 956/F, 957/F, 958/F, 959/F, 960/F, 961/F, 962/F, 963/F, 964/F, 965/F, 966/F, 967/F, 968/F, 969/F, 960/F, 961/F, 962/F, 963/F, 964/F, 965/F, 966/F, 967/F, 968/F, 969/F, 970/F, 971/F, 972/F, 973/F, 974/F, 975/F, 976/F, 977/F, 978/F, 979/F, 970/F, 971/F, 972/F, 973/F, 974/F, 975/F, 976/F, 977/F, 978/F, 979/F, 980/F, 981/F, 982/F, 983/F, 984/F, 985/F, 986/F, 987/F, 988/F, 989/F, 980/F, 981/F, 982/F, 983/F, 984/F, 985/F, 986/F, 987/F, 988/F, 989/F, 990/F, 991/F, 992/F, 993/F, 994/F, 995/F, 996/F, 997/F, 998/F, 999/F, 990/F, 991/F, 992/F, 993/F, 994/F, 995/F, 996/F, 997/F, 998/F, 999/F, 1000/F, 1001/F, 1002/F, 1003/F, 1004/F, 1005/F, 1006/F, 1007/F, 1008/F, 1009/F, 1000/F, 1001/F, 1002/F, 1003/F, 1004/F, 1005/F, 1006/F, 1007/F, 1008/F, 1009/F, 1010/F, 1011/F, 1012/F, 1013/F, 1014/F, 1015/F, 1016/F, 1017/F, 1018/F, 1019/F, 1010/F, 1011/F, 1012/F, 1013/F, 1014/F, 1015/F, 1016/F, 1017/F, 1018/F, 1019/F, 1020/F, 1021/F, 1022/F, 1023/F, 1024/F, 1025/F, 1026/F, 1027/F, 1028/F, 1029/F, 1020/F, 1021/F, 1022/F, 1023/F, 1024/F, 1025/F, 1026/F, 1027/F, 1028/F, 1029/F, 1030/F, 1031/F, 1032/F, 1033/F, 1034/F, 1035/F, 1036/F, 1037/F, 1038/F, 1039/F, 1030/F, 1031/F, 1032/F, 1033/F, 1034/F, 1035/F, 1036/F, 1037/F, 1038/F, 1039/F, 1040/F, 1041/F, 1042/F, 1043/F, 1044/F, 1045/F, 1046/F, 1047/F, 1048/F, 1049/F, 1040/F, 1041/F, 1042/F, 1043/F, 1044/F, 1045/F, 1046/F, 1047/F, 1048/F, 1049/F, 1050/F, 1051/F, 1052/F, 1053/F, 1054/F, 1055/F, 1056/F, 1057/F, 1058/F, 1059/F, 1050/F, 1051/F, 1052/F, 1053/F, 1054/F, 1055/F, 1056/F, 1057/F, 1058/F, 1059/F, 1060/F, 1061/F, 1062/F, 1063/F, 1064/F, 1065/F, 1066/F, 1067/F, 1068/F, 1069/F, 1060/F, 1061/F, 1062/F, 1063/F, 1064/F, 1065/F, 1066/F, 1067/F, 1068/F, 1069/F, 1070/F, 1071/F, 1072/F, 1073/F, 1074/F, 1075/F, 1076/F, 1077/F, 1078/F, 1079/F, 1070/F, 1071/F, 1072/F, 1073/F, 1074/F, 1075/F, 1076/F, 1077/F, 1078/F, 1079/F, 1080/F, 1081/F, 1082/F, 1083/F, 1084/F, 1085/F, 1086/F, 1087/F, 1088/F, 1089/F, 1080/F, 1081/F, 1082/F, 1083/F, 1084/F, 1085/F, 1086/F, 1087/F, 1088/F, 1089/F, 1090/F, 1091/F, 1092/F, 1093/F, 1094/F, 1095/F, 1096/F, 1097/F, 1098/F, 1099/F, 1090/F, 1091/F, 1092/F, 1093/F, 1094/F, 1095/F, 1096/F, 1097/F, 1098/F, 1099/F, 1100/F, 1101/F, 1102/F, 1103/F, 1104/F,

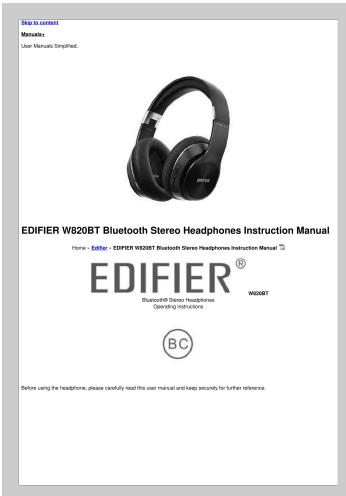

[Edifier W820BT Bluetooth Stereo Headphones Instruction Manual](#)

This manual provides operating instructions for the Edifier W820BT Bluetooth Stereo Headphones, covering features, specifications, setup, usage, maintenance, and troubleshooting.


lang:en score:43 filesize: 146.93 K page_count: 7 document date: 2022-05-30

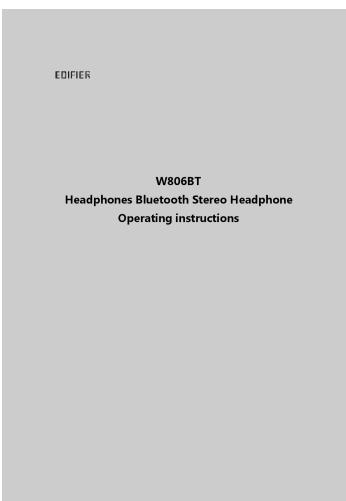

[Edifier W806BT Bluetooth Headphones Operating Instructions](#)

Comprehensive operating instructions for the Edifier W806BT Bluetooth Stereo Headphones, covering features, specifications, operation, maintenance, FAQs, and safety warnings.

lang:en score:30 filesize: 139.65 K page_count: 7 document date: 2019-02-01

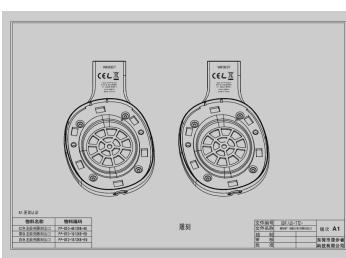

[\[pdf\] Label](#)

W800BT 19 A1 viola xx yang Label Edifier International Limited EDF91 Bluetooth Stereo Headphones Z9G Z9GEDF91 edf91

W800BT Input: 5V 500mA FCC ID: Z9G-EDF91 IC: 10004A-EDF91 HVIN: EDF91
Made in China **W806BT** Input: 5V 500mA FCC ID: Z9G-EDF91 IC: 10004A-EDF91
HVIN: EDF91 Made in China 33 . 33. 33. -677= : 7 A1 ...

lang:en score:16 filesize: 469.35 K page_count: 1 document date: 2019-08-06