

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HILTI](#) /

› [HILTI VC 40-U Fleece Bags Instruction Manual](#)

HILTI 2121562

HILTI VC 40-U Fleece Bags Instruction Manual

Model: 2121562

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your HILTI VC 40-U Fleece Bags. These bags are designed for efficient dry and wet dust collection with compatible HILTI vacuum cleaners, ensuring optimal performance and cleanliness during cutting, sawing, and grinding applications. Please read this manual thoroughly before installation and use.

SAFETY INFORMATION

Always observe general safety precautions when working with power tools and dust collection systems. Ensure the vacuum cleaner is unplugged before installing or replacing dust bags. Do not reuse damaged or overfilled bags. Dispose of used bags according to local regulations, especially when collecting hazardous materials.

- Ensure the vacuum cleaner is switched off and unplugged from the power source before handling the dust bag.
- Do not attempt to clean or reuse damaged or torn fleece bags.
- Dispose of full dust bags properly, following local waste disposal guidelines.
- Avoid overfilling the bag, as this can reduce vacuum performance and potentially damage the vacuum cleaner.

SETUP AND INSTALLATION

Proper installation of the fleece bag is crucial for effective dust collection.



Image: A HILTI VC 40-U fleece bag, white in color, with a black plastic collar for attachment to the vacuum cleaner. The bag is designed for dust collection and is shown folded, highlighting its material and connection point.

1. **Open the Vacuum Cleaner:** Unlatch and open the dust container of your HILTI VC 40-U vacuum cleaner.
2. **Remove Old Bag (if applicable):** If an old bag is present, carefully remove it by pulling the collar away from the inlet port. Close the bag's opening if it has a sealing mechanism to prevent dust escape.
3. **Insert New Bag:** Take a new HILTI VC 40-U fleece bag. Align the black plastic collar of the bag with the inlet port inside the vacuum cleaner's dust container.
4. **Secure the Bag:** Push the collar firmly onto the inlet port until it clicks into place, ensuring a secure and airtight connection.
5. **Position the Bag:** Gently unfold the bag inside the container, ensuring it is not creased or obstructing any internal components.
6. **Close the Vacuum Cleaner:** Close the dust container lid and secure the latches.

OPERATING INSTRUCTIONS

Once the fleece bag is correctly installed, the vacuum cleaner is ready for operation.

- Ensure the vacuum cleaner is properly assembled and the bag is securely in place.
- Connect the vacuum cleaner to a suitable power source.
- Turn on the vacuum cleaner and proceed with your cutting, sawing, or grinding tasks, allowing the system to collect dust.
- Monitor the vacuum cleaner's performance. A decrease in suction power often indicates a full dust bag.

MAINTENANCE

Regular replacement of the fleece bag is essential for maintaining optimal vacuum performance and air quality.

- **Bag Replacement:** Replace the fleece bag when it is full or when you notice a significant reduction in suction power. Do not wait until the bag is completely bursting.
- **Disposal:** Carefully remove the full bag as described in the "Setup and Installation" section. Seal the bag if possible and dispose of it according to local environmental regulations.
- **Filter Check:** While replacing the bag, it is a good practice to inspect the main filter of your vacuum cleaner for excessive dust buildup and clean or replace it as per your vacuum cleaner's manual.

TROUBLESHOOTING

Common issues related to dust bag usage and their solutions.

Problem	Possible Cause	Solution
Reduced suction power	Dust bag is full or nearly full.	Replace the dust bag with a new one.
Dust escaping from vacuum	Dust bag not installed correctly or is damaged.	Check bag installation; ensure collar is sealed. Replace bag if damaged.
Unusual odor during operation	Bag contains damp or moldy debris.	Replace the bag immediately. Ensure only dry materials are collected unless the vacuum is rated for wet use.

SPECIFICATIONS

Feature	Detail
Brand	HILTI
Model Number	2121562
Compatible Device	HILTI VC 40-U Vacuum Cleaner
Quantity	5 bags per pack
Material	Fleece
Application	Dry & Wet Dust Collection (with compatible vacuum)
Special Feature	Lightweight
Item Weight (per pack)	Approximately 1.35 pounds (0.61 kg)
Package Dimensions	Approximately 22.5 x 12.5 x 3.2 inches (57.15 x 31.75 x 8.13 cm)

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for HILTI products, please refer to the documentation provided with your HILTI vacuum cleaner or visit the official HILTI website. These fleece bags are consumable accessories designed for specific HILTI vacuum models.

HILTI Official Website: www.hilti.com

