

Madison 10-5750MA

Madison MAD-LINK20 10-5750MA Wi-Fi Speaker User Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Madison MAD-LINK20 10-5750MA Wi-Fi Speaker. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your listening experience. Keep this manual for future reference.

PRODUCT OVERVIEW

The Madison MAD-LINK20 is a versatile Wi-Fi speaker designed for high-quality audio playback in various environments. It features multiple connectivity options and a portable design.



Image: Front-side view of the Madison MAD-LINK20 Wi-Fi Speaker. The speaker is a dark grey, square-shaped unit with a perforated metal grille covering its sides. A sturdy grey fabric handle is attached to the top for portability. The top panel features a circular control interface with buttons for power, play/pause, volume up/down, and track skip forward/backward. The Madison logo is visible at the bottom front of the speaker.

KEY FEATURES

- **USB Player:** Supports MP3 and WAV audio formats.
- **Wireless Connectivity:** Features Wi-Fi, AirPlay, and Bluetooth for seamless audio streaming.
- **Streaming Service Support:** Compatible with DLNA, Spotify, Muzo, and other platforms.
- **Auxiliary Input:** 3.5mm jack for wired audio connections.
- **Portable Design:** Equipped with a handle for easy transport.

SETUP INSTRUCTIONS

1. **Power Connection:** Connect the speaker to a power source using the provided power adapter. Ensure the speaker's internal battery is charged for portable use.
2. **Initial Power On:** Press and hold the power button (usually located on the top panel) until the indicator light illuminates.
3. **Download the Application:** For full functionality and Wi-Fi setup, download the dedicated Madison control application from your device's app store. Refer to the quick start guide included in the packaging for QR codes or direct links.
4. **Wi-Fi Network Setup:**
 - Open the Madison application on your smartphone or tablet.
 - Follow the on-screen instructions to connect your speaker to your home Wi-Fi network. This typically involves selecting your network and entering the password.
5. **Bluetooth Pairing (Optional):** If you prefer Bluetooth, activate Bluetooth on your source device and select "MAD-LINK20" from the list of available devices.

OPERATING INSTRUCTIONS

Basic Controls (Top Panel)

- **Power Button:** Press and hold to turn the speaker on or off. Short press to switch modes (if applicable).
- **Play/Pause Button:** Press to play or pause audio playback.
- **Volume Up (+):** Press to increase the volume.
- **Volume Down (-):** Press to decrease the volume.
- **Previous Track (⏮):** Press to go to the beginning of the current track or the previous track.
- **Next Track (⏭):** Press to skip to the next track.

Connectivity Modes

- **Wi-Fi Streaming:** Once connected to your Wi-Fi network via the application, you can stream audio using compatible services like Spotify, Muzo, or through DLNA/AirPlay from your connected devices.
- **Bluetooth Streaming:** After pairing, select the speaker as your audio output device on your Bluetooth-enabled source.
- **AUX Input:** Connect an audio source (e.g., MP3 player, computer) to the 3.5mm AUX input jack using a standard audio cable. The speaker will automatically switch to AUX mode or you may need to select it via the app/mode button.
- **USB Playback:** Insert a USB drive containing MP3 or WAV audio files into the designated USB port. The speaker will automatically detect and play the files. Use the track skip buttons to navigate.

SPECIFICATIONS

Feature	Detail
Model Name	MAD-LINK20
Item Model Number	10-5750MA
Brand	Madison
Connectivity Technology	Wi-Fi, Bluetooth
Wireless Communication Technology	Wi-Fi, AirPlay
Speaker Maximum Output Power	20 Watts
Surround Sound Channel Configuration	2
Product Dimensions	12.8 x 12.8 x 12.8 cm
Item Weight	1.14 Kilograms
Mounting Type	Tabletop
Batteries	1 Lithium Ion battery required (included)
Recommended Uses	For computers, For smartphones or tablets

TROUBLESHOOTING

- **No Power:**
 - Ensure the power adapter is securely connected to both the speaker and a working power outlet.
 - Check if the internal battery is charged.
- **No Sound:**
 - Verify the volume level on both the speaker and your audio source device.
 - Ensure the correct input mode (Wi-Fi, Bluetooth, AUX, USB) is selected.
 - For Wi-Fi/Bluetooth, check the connection status.
- **Wi-Fi Connection Issues:**
 - Confirm your Wi-Fi network is active and within range.
 - Re-enter your Wi-Fi password in the Madison application.
 - Restart your router and the speaker.
- **Bluetooth Pairing Failure:**
 - Ensure the speaker is in Bluetooth pairing mode.
 - Disable and re-enable Bluetooth on your source device.
 - Move the speaker closer to the source device.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or



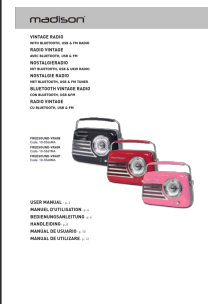

abrasive materials.


- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in constant use.
- **Environmental Conditions:** Avoid exposing the speaker to water, high humidity, or excessive dust.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Madison website. Keep your proof of purchase for any warranty claims.


Related Documents - 10-5750MA

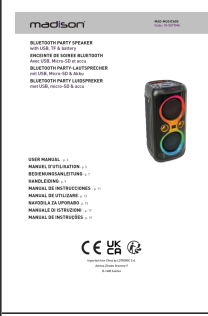	<p>Madison MAD-MUSICA50 Bluetooth Party Speaker User Manual</p> <p>Discover the features and operation of the Madison MAD-MUSICA50 Bluetooth Party Speaker with this comprehensive user manual. It provides detailed instructions, control explanations, and technical specifications in multiple languages for optimal use.</p>
	<p>Madison Custom Printed Information Guide: Logo Artwork, Post Measurement, and Colour Matching</p> <p>Learn how to supply logo artwork, measure posts for custom printing, and match colours with Madison's comprehensive guide. Essential information for custom printed sports equipment and apparel.</p>
	<p>Madison FREESOUND-VR40 Vintage Bluetooth FM Radio User Manual</p> <p>Comprehensive user manual for the Madison FREESOUND-VR40 vintage radio, detailing features like Bluetooth, USB playback, FM radio, safety instructions, operation, and specifications.</p>
	<p>Madison FREESOUND-VR40 Rechargeable Vintage Radio with Bluetooth, USB & FM Radio 30W Instruction Manual</p> <p>User manual for the Madison FREESOUND-VR40 rechargeable vintage radio. This device features Bluetooth connectivity, USB playback, FM radio tuning, and an AUX input. The manual provides detailed safety instructions, operating procedures for pairing, wired connection, USB playback, mode selection, and FM radio usage, along with technical specifications and disposal guidelines.</p>

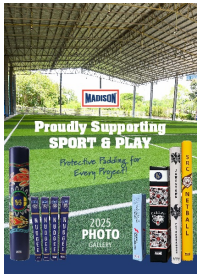

[Madison Protective Padding: Custom Solutions for Sport & Play](#)

 Madison Sport, an Australian manufacturer since 1985, provides custom protective padding for sporting clubs, schools, and businesses. Offering nationwide shipping, 12-month guarantee, and bespoke designs for safety and play.

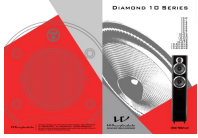

[Wharfedale Diamond 10 Series Loudspeaker User Manual](#)

Comprehensive user manual for the Wharfedale Diamond 10 Series loudspeakers and subwoofers, covering setup, connection, operation, specifications, and troubleshooting.