

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fastrack](#) /

› [Fastrack Loopholes Analog Watch NN3169QP01 User Manual](#)

## Fastrack NN3169QP01

# Fastrack Loopholes Analog Watch NN3169QP01 User Manual

Model: NN3169QP01

## 1. INTRODUCTION

---

Thank you for choosing the Fastrack Loopholes Analog Watch, model NN3169QP01. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.

This watch features an analog display, quartz movement, and is designed for daily wear with a water resistance of 50 meters.

## 2. PRODUCT OVERVIEW

---

The Fastrack Loopholes Analog Watch combines a robust design with practical functionality. It features a black dial, a durable silicone band, and a brass case. The watch is equipped with a quartz movement for accurate timekeeping and includes chronograph functions.



Figure 2.1: Front view of the Fastrack Loopholes Analog Watch on a wrist, showcasing the black dial and silicone strap.



Figure 2.2: Side view of the watch case, highlighting the crown and chronograph pushers.



Figure 2.3: Rear view of the watch, showing the stainless steel case back with engravings.

## 3. SETUP INSTRUCTIONS

---

### 3.1 Setting the Time

1. Pull the crown (the knob on the side of the watch) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Push the crown back into position 1 (normal operating position) to start the watch.

### 3.2 Setting the Date (if applicable)

If your watch model includes a date display, follow these steps:

1. Pull the crown out to position 1 (first click).
2. Turn the crown clockwise or counter-clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.
3. Push the crown back into the normal operating position.

### 3.3 Adjusting the Strap

The silicone strap features a buckle closure. Adjust the strap to a comfortable fit on your wrist, ensuring it is not too tight or too loose. The watch should sit securely without restricting circulation.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Basic Timekeeping

Once the time is set, the watch will continuously display the current time using its quartz movement. Ensure the crown is fully pushed in to maintain water resistance and proper operation.

### 4.2 Using the Chronograph (Stopwatch Function)

This watch is equipped with a chronograph function, indicated by the two pushers located above and below the crown.

1. **Start:** Press the upper pusher to start the chronograph. The chronograph hands will begin to move.
2. **Stop/Pause:** Press the upper pusher again to stop or pause the chronograph. The elapsed time will be displayed.
3. **Reset:** While the chronograph is stopped, press the lower pusher to reset all chronograph hands to their zero positions.

### 4.3 Water Resistance

The watch has a water resistance rating of 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, showering, or washing hands. It is **not** suitable for diving, snorkeling, or high-impact water sports. Always ensure the crown is fully pushed in before any contact with water.

## 5. MAINTENANCE

---

### 5.1 Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the case and strap with a soft, dry cloth regularly.
- For the silicone strap, a damp cloth with mild soap can be used, then rinse thoroughly and dry completely.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or strap material.

### 5.2 Battery Replacement

The watch is powered by a lithium metal battery. When the watch stops or the second hand begins to jump irregularly (if applicable), the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

### 5.3 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. The original packaging (can-shaped box) can be used for storage.





Figure 5.1: The can-shaped packaging for the Fastrack Loopholes Analog Watch.

## 6. TROUBLESHOOTING

---

- **Watch not running:**
  - Check if the crown is fully pushed in.
  - The battery may be depleted. Refer to Section 5.2 for battery replacement.
- **Incorrect time/date:**
  - Refer to Section 3.1 and 3.2 to reset the time and date.
  - Ensure the crown is fully pushed in after setting.
- **Water inside the watch:**
  - Despite water resistance, prolonged exposure to water or improper handling (e.g., crown not fully pushed in) can lead to water ingress.
  - Immediately take the watch to an authorized service center for inspection and repair to prevent further damage.

## 7. SPECIFICATIONS

---

Feature	Specification
Model Number	NN3169QP01
Display Type	Analog
Movement Type	Quartz
Power Source	Battery Powered (1 Lithium Metal battery included)
Case Material	Brass
Case Diameter	44.8 Millimetres
Case Thickness	7 Millimetres
Band Material	Silicone
Band Colour	Black
Band Width	22 Millimetres
Dial Colour	Black
Crystal Material	Mineral

Feature	Specification
Water Resistance Depth	50 Metres
Item Weight	180 Grams
Product Dimensions	14 x 7 x 10 Centimeters

## 8. WARRANTY AND SUPPORT

---

### 8.1 Manufacturer Warranty

This Fastrack watch comes with a **12 Months Manufacturer Warranty** from the date of purchase. The warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

### 8.2 Customer Support

For warranty claims, service, or any inquiries regarding your Fastrack watch, please contact the manufacturer directly:

- **Manufacturer:** Fastrack, Titan Company Ltd
- **Address:** 3 Sipcot Industrial Complex, Hosur - 635126, India
- **Telephone:** +91-(0)4344-664199

Please retain your proof of purchase for warranty validation.