

AIDITIYMI AIDITIYMI-AKB75095307-ad001

User Manual

AIDITIYMI AKB75095307 REPLACEMENT REMOTE CONTROL

Model: AIDITIYMI-AKB75095307-ad001

[Introduction](#) [Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. Introduction

This manual provides detailed instructions for the AIDITIYMI AKB75095307 Replacement Remote Control. It is designed to help you set up, operate, and maintain your remote control effectively. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

2. Product Overview

The AIDITIYMI AKB75095307 is a direct replacement remote control for various LG LED LCD TV models. It is designed to function immediately upon battery installation, requiring no additional programming or pairing. Its ergonomic design ensures comfortable handling.

Compatible TV Models:

- 32LJ550BUA, 43UJ6050-UC, 49UJ620MUA
- 43UJ6200, 43UJ6500, 43UJ6560
- 49UJ6500, 49UJ6560
- 55UJ6520, 55UJ6540, 55UJ6580
- 60UJ6540, 65UJ6520, 65UJ6540, 65UJ6580
- 70UJ6520, 70UJ6570, 70UJ657A
- 75UJ6470, 75UJ6520, 75UJ657A
- 24LM520S, 28LM520S, 24Im520d, 24LM530S, 24LM500S







Image 2.1: Front view of the AIDITIYMI AKB75095307 Remote Control, showcasing its button layout and ergonomic design.

3. Setup

The AIDITIYMI AKB75095307 remote control is designed for immediate use with compatible LG TVs. No programming or pairing is required.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote control is ready for use with your compatible LG TV.

4. Operating Instructions

Point the remote control directly at your LG TV's infrared receiver for optimal performance. Ensure there are no obstructions between the remote and the TV.

4.1 Button Functions

- **Power (Red Button):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **CH PAGE +/-:** Changes channels sequentially.
- **Mute:** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Netflix / Amazon:** Direct access buttons for Netflix and Amazon Prime Video streaming services.
- **Home (House icon):** Accesses the TV's Smart Home dashboard.
- **Settings (Gear icon):** Opens the TV's settings menu.
- **Input (Square with arrow):** Selects the input source (HDMI, AV, etc.).
- **Caption:** Toggles closed captions on/off.
- **List:** Displays the channel list.
- **Flashbk:** Returns to the previously viewed channel.
- **Info:** Displays information about the current program.
- **Quick Access / FAV:** Provides quick access to favorite channels or functions.
- **Live Zoom:** Zooms into a specific area of the screen.
- **SAP/*:** Selects Secondary Audio Program or other audio options.

- **Sleep:** Sets a sleep timer for the TV.
- **Magic Link:** Activates Magic Link features (if supported by TV).
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop):** Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or applications.



Image 4.1: Close-up view of the central buttons on the remote control, including Netflix, Amazon, and navigation controls.

5. Maintenance

5.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

6. Troubleshooting

If you encounter issues with your remote control, refer to the following common problems and solutions:

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA batteries if necessary.
- **Line of Sight:** Make sure there are no objects blocking the path between the remote control and the TV's infrared sensor.
- **Distance:** Ensure you are within the effective operating range of the remote control (typically up to 20 feet).
- **TV Power:** Confirm that the TV is powered on and not in standby mode.

6.2 Specific Buttons Not Working

- **Clean Buttons:** Dust or debris might be interfering with button contacts. Gently clean around the affected buttons.
- **Battery Level:** Low battery power can sometimes cause intermittent button functionality. Replace batteries.

If the issue persists after trying these steps, please refer to the Support section.

7. Specifications

Feature	Detail
Model Number	AIDITIYMI-AKB75095307-ad001
Compatible Brand	LG
Power Source	2 x AAA Batteries (not included)
Color	Black
Product Dimensions	6.5 x 2 x 0.6 inches (16.5 x 5.1 x 1.5 cm)
Item Weight	1.76 ounces (50 grams)
Special Feature	Ergonomic design, No programming required





17 CM

5CM



Image 7.1: The remote control displayed with its approximate length and width measurements.

8. Warranty and Support

8.1 Warranty Information

Specific warranty details for this product are not provided in the available information. Please refer to your purchase documentation or contact the seller for warranty inquiries.

8.2 Customer Support

For any questions, concerns, or assistance regarding your AIDITIYMI AKB75095307 Remote Control, please contact the seller or manufacturer directly. They are available to help resolve any issues you may encounter.
