

USARMT N2QAYB000820

USARMT Replacement Remote Control for Panasonic TV
(N2QAYB000820) - Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup and operation of your new USARMT N2QAYB000820 replacement remote control. This remote is designed to function as a direct replacement for the original Panasonic N2QAYB000820 remote, offering seamless compatibility with various Panasonic and TCL television models without requiring any programming.

PRODUCT OVERVIEW

The USARMT N2QAYB000820 is a pre-programmed infrared remote control, specifically engineered to replace the original Panasonic N2QAYB000820 remote. It features a standard layout with dedicated buttons for power, channel selection, volume control, menu navigation, and various media playback functions, ensuring a familiar user experience.



Image: Front view of the USARMT N2QAYB000820 replacement remote control, showing all buttons and the 'Panasonic TV' branding at the bottom.

SETUP

Battery Installation

To begin using your remote control, you must first install batteries. This remote requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

The remote control is now ready for use. No additional programming is required.

OPERATING INSTRUCTIONS

Basic Functions

This replacement remote control operates identically to the original Panasonic N2QAYB000820 remote. Simply point the remote at your television and press the desired button. Ensure there are no obstructions between the remote and the TV's infrared sensor.

Key Button Functions

Button	Function
Power (Red)	Turns the television on or off.
Input / Source	Selects the input source (e.g., HDMI 1, AV, Component).
CH +/-	Changes the television channel up or down.
VOL +/-	Adjusts the volume level up or down.
Mute	Mutes or unmutes the television audio.
Menu / Home	Accesses the television's main menu or smart TV home screen.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK / Enter	Confirms a selection or enters a menu item.
Exit	Exits the current menu or screen.
Return / Back	Returns to the previous screen or menu.
Number Buttons (0-9)	Direct channel entry.
Media Player	Accesses media playback functions.
CC	Activates or deactivates Closed Captions.
SAP	Selects Secondary Audio Program.
Info	Displays program information.
Sleep	Sets the TV to turn off automatically after a set time.
Favorite	Accesses favorite channels or settings.

Button	Function
Format	Adjusts screen aspect ratio or display format.
Colored Buttons (R, G, Y, B)	Functions vary depending on the TV menu or application.

COMPATIBLE MODELS

This USARMT N2QAYB000820 replacement remote control is compatible with a wide range of Panasonic and TCL television models, including but not limited to:

Panasonic: TC-P50X60, TH-42LRU60, TH-32LRU60, TH-42LRU6, TH-39LRU60, TH-39LRU6, TC-L50EM60, TC-L32XM6, TC-L32B6, TC-L39EM60, TC-P42X60, TH-65LRU60, TH39LRU6, TH39LRU60, TH42LRU6, TH32LRU60, TH42LRU60, TH65LRU60, TH32LRU6, TC50A400U, TC39A400U, TC32A400U, TC40A420U, TH42LRU7, TH50LRU70, TH32LRU70, TH42LRU70, TH32LRU7, TH39LRU60A, TH50LRU60, TH39LRU6U, TH65LRU60U, TH32LRU60U, TH39LRU60U, TH39LR

TCL: TCL39EM60, TCL50EM60, TCP42X60, TCP50X60, TCL32B6, TCL32XM6, TCL50EM60E, TCL50B6, TCL32B6P, TCL39B6

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Verify that the remote is pointed directly at the TV.
- **Specific buttons not working:**
 - Clean the remote control's surface and buttons with a soft, dry cloth to remove any dirt or debris that might be interfering with button presses.
 - If only certain buttons are unresponsive, it might indicate a fault with the remote.
- **TV not listed in compatibility:**
 - While this remote is designed for the N2QAYB000820 model, compatibility with unlisted models cannot be guaranteed. Refer to your TV's original manual for its specific remote model number.

SPECIFICATIONS

Feature	Detail
Brand	USARMT
Model Number	N2QAYB000820
Special Feature	Infrared, Pre-Programmed
Color	Black
Max Number of Supported Devices	1 (Television)
Compatible Devices	Television

Feature	Detail
Parcel Dimensions	16.4 x 6.5 x 2.8 cm
Item Weight	78 g

WARRANTY AND SUPPORT

This USARMT replacement remote control comes with a **30-day warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as described.

For any questions, troubleshooting assistance beyond this manual, or warranty claims, please refer to the retailer or contact USARMT customer support through the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question