

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hisense](#) /

› [Hisense Fully Automatic Washing Machine 4.5kg HW-T45C Instruction Manual](#)

## Hisense HW-T45C

# Hisense Fully Automatic Washing Machine 4.5kg HW-T45C Instruction Manual

Model: HW-T45C

## 1. INTRODUCTION

Thank you for purchasing the Hisense HW-T45C Fully Automatic Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read this manual thoroughly before using the washing machine and keep it for future reference.

## 2. SAFETY INFORMATION

### General Safety

- Do not allow children to play with the appliance.
- Keep packaging materials out of reach of children.
- Do not wash items that have been soiled with flammable substances.
- Ensure the appliance is placed on a stable and level surface.

### Electrical Safety

- Use a dedicated 15A, 100V AC outlet.
- Always connect the grounding wire to prevent electric shock.
- Do not use extension cords or adapters.
- Unplug the appliance before cleaning or performing any maintenance.

### Installation Safety

- Ensure adequate space around the washing machine for ventilation and access.
- Do not install in areas exposed to direct sunlight, rain, or extreme temperatures.
- Verify that the water supply and drain connections are secure to prevent leaks.

### 3. PRODUCT OVERVIEW

The Hisense HW-T45C is a compact and efficient washing machine designed for single-person households, offering a 4.5kg capacity and a slim 50cm body width.

#### Key Features:

- Unique Pulsator:** Features two types of blades that generate a powerful, three-dimensional water flow, effectively dislodging dirt similar to hand washing.
- Stainless Steel Tub:** The tub's concave-convex design enhances washing power and maintains cleanliness.
- Customizable Wash Courses:** Allows individual selection of wash, rinse, spin, and wind dry functions to create courses tailored to different fabric types.
- 10-Minute Quick Wash:** Ideal for busy schedules, providing a complete wash cycle in just 10 minutes.
- Detergent Pocket:** Designed to dissolve detergent into a foamy state before entering the tub, ensuring gentle and quick penetration into clothes.
- Slim Body:** With a body width of approximately 50cm, it fits easily into smaller spaces.

## 2つのポイント

暮らしの中に欠かせない機能を取り揃えています。

### 洗浄力がアップ

#### 1 独自のパルセーター

絡みにくくて強力  
汚れをしっかり  
掻き出す



#### 2 シャワー水流

強力循環水流が、  
頑固な汚れを浮かして  
落とす



#### 3 洗濯式ステンレス槽

洗濯板のような  
"凹凸設計"が  
汚れを残さず  
落とす

この凸凹で、  
強力洗浄!



### 安心機能がいっぱい

#### 1 選べるお好みボタン

「洗い」「すすぎ」「脱水」が個別に  
選択できる



※画像はHW-DG75Aです

#### 2 便利な予約機能

1-24時間までの  
予約時間設定が  
可能です。



#### 3 デジタル表示

お洗濯などの  
残り時間が  
パッとわかる  
デジタル表示



※画像はHW-DG75Aです

Image: Overview of key features including the pulsator, shower water flow, stainless steel tub, and digital display.

## 4. SETUP

Proper installation is crucial for the performance and longevity of your washing machine. Please follow these steps carefully.

### 4.1. Unpacking and Placement

- Remove all packaging materials and internal packing.
- Place the washing machine on a firm, level surface. Ensure there is at least 1cm clearance on the left/right sides, 15cm above, and 1cm behind the unit for proper ventilation and hose connections.


## 商品寸法+10cmの幅が必要です。

### 《搬入における確認項目》


#### 〈商品の寸法〉




#### 〈玄関の高さ〉 商品寸法+10cm

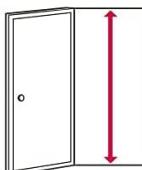


#### 〈玄関の幅〉 商品寸法+10cm

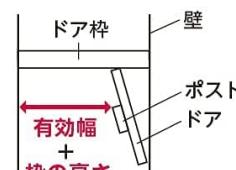


#### 〈廊下の幅〉 商品寸法+10cm

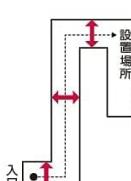

#### 〈エレベータの幅〉 商品寸法+10cm

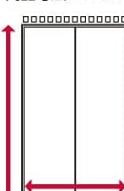


#### 〈階段の幅〉 商品寸法+10cm

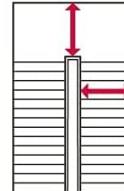

### 《設置における確認項目》

・必要なスペースは商品によって異なるため、詳細はメーカーページなどでご確認ください。

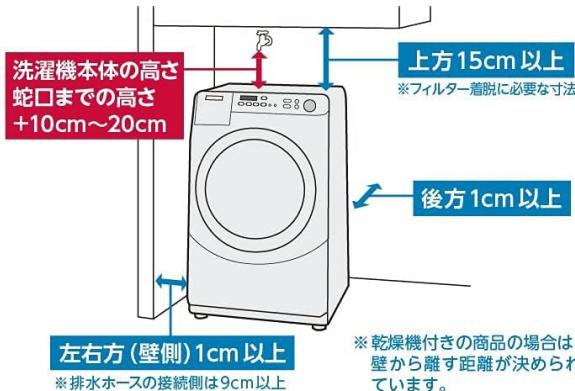

#### 防水パンの有無と内側サイズをチェック



※排水エルボ・足台の有無と排水口位置によって、追加費用がかかることがあります。

Image: Recommended installation clearances for the washing machine.

### 4.2. Drain Hose Connection

- Attach the provided drain sleeve to the end of the drain hose.
- Insert the drain hose into the drain outlet. The drain pipe can be set up for 4-way drainage (left, right, front, back).

Video: Step-by-step guide on connecting the drain hose and adjusting the drain pipe direction.

### 4.3. Leveling the Washing Machine

- Gently rock the washing machine to check for stability.
- Adjust the height of the adjustable leg at the front right by rotating it until the machine is level and stable.
- Secure the adjustable leg by tightening the locking nut.

Video: Demonstrates how to level the washing machine using the adjustable feet.

#### 4.4. Water Supply Connection

- Connect the water supply hose to the faucet. For dedicated faucets, pull down the sleeve and connect. For non-dedicated faucets, loosen the four screws on the water supply connector, center the faucet outlet within the ring, tighten the screws, and then firmly attach the nozzle to the ring.
- Connect the other end of the water supply hose to the washing machine's water inlet. Rotate the supply nut to ensure it is securely fixed.

Video: Instructions for connecting the water supply hose to both the faucet and the washing machine.

#### 4.5. Power Connection

- Plug the power cord into a dedicated 15A, 100V AC outlet. Ensure the outlet has proper grounding.

Video: Shows how to connect the power cord to the electrical outlet.

#### 4.6. Test Run

- After all connections are made, perform a test run to ensure proper operation and check for any leaks.

Video: Demonstrates initiating a test run after installation.

### 5. OPERATING INSTRUCTIONS

Your Hisense washing machine offers various functions for efficient and convenient laundry care.

#### 5.1. Control Panel Overview

# 最短10分

忙しい・お急ぎ時は、洗濯時間が短縮できます。



Image: Control panel showing various buttons and digital display.

## 5.2. Basic Operation

- Load Laundry:** Place clothes loosely into the tub. Do not overload.
- Add Detergent/Softener:** Add appropriate amounts of detergent and softener to their respective compartments.
- Power On:** Press the Power button.
- Select Course:** Choose a desired wash course (e.g., Standard, Quick, Blanket).
- Start:** Press the Start/Pause button to begin the wash cycle.

## 5.3. Wash Courses

- Standard:** For daily laundry with normal soil levels.
- Quick (10 minutes):** For lightly soiled items or when time is limited.
- Soak:** For heavily soiled items requiring pre-soaking.
- Blanket:** Specialized course for washing blankets and large items.
- Dry (Wind Dry):** Uses air circulation to reduce moisture in clothes, aiding in faster drying.
- Tub Clean:** For cleaning the washing machine tub itself.
- Custom:** Allows you to individually select wash, rinse, spin, and wind dry times/cycles.

## 5.4. Reservation Function (Timer)

You can set a timer for the washing machine to start at a later time, allowing you to schedule laundry according to your convenience.

- Select your desired wash course.
- Press the 'Reservation' button and adjust the desired delay time.
- Press Start/Pause. The machine will start automatically after the set delay.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

### 6.1. Cleaning the Tub

- Use the 'Tub Clean' course regularly to prevent mold and detergent residue buildup.
- For manual cleaning, wipe the interior with a soft cloth and mild detergent, then rinse thoroughly.

### 6.2. Cleaning the Lint Filter

- Remove the lint filter from the tub.
- Open the filter and remove any accumulated lint.
- Rinse the filter under running water and reattach it securely.

# 頼れる「洗浄力」

## カンタン操作で頼れる洗浄機能が充実。



Image: Interior of the tub, highlighting the pulsator and lint filter for cleaning.

### 6.3. Cleaning the Exterior

- Wipe the exterior with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

## 7. TROUBLESHOOTING

If you encounter any issues, please refer to this section before contacting customer support.

### Common Issues and Solutions:

- Machine does not start:** Check if the power cord is securely plugged in, the water supply is open, and the lid is closed properly.
- Water does not drain:** Ensure the drain hose is not kinked or blocked, and the drain outlet is clear.
- Excessive noise/vibration:** Verify the machine is level, and there are no foreign objects in the tub. Reduce laundry load if overloaded.


- **Water leakage:** Check all hose connections for tightness and ensure the drain hose is correctly positioned.

## 8. SPECIFICATIONS

Specification	Value
Brand	Hisense
Model Number	HW-T45C
Capacity	4.5 kg
Product Dimensions (D x W x H)	54 x 54 x 94 cm
Product Weight	28 kg
Voltage	100 Volts
Annual Energy Consumption	360 Watts
Standard Water Usage	93 Liters
Washing Noise Level	41 Decibels
Spin Noise Level	47 Decibels
Max Spin Speed	750 RPM
Control Type	Fully Automatic
Tub Material	Stainless Steel
Included Components	Water supply hose

# スリムボディー

## 横幅を抑えた形状なので設置場所に困りません。

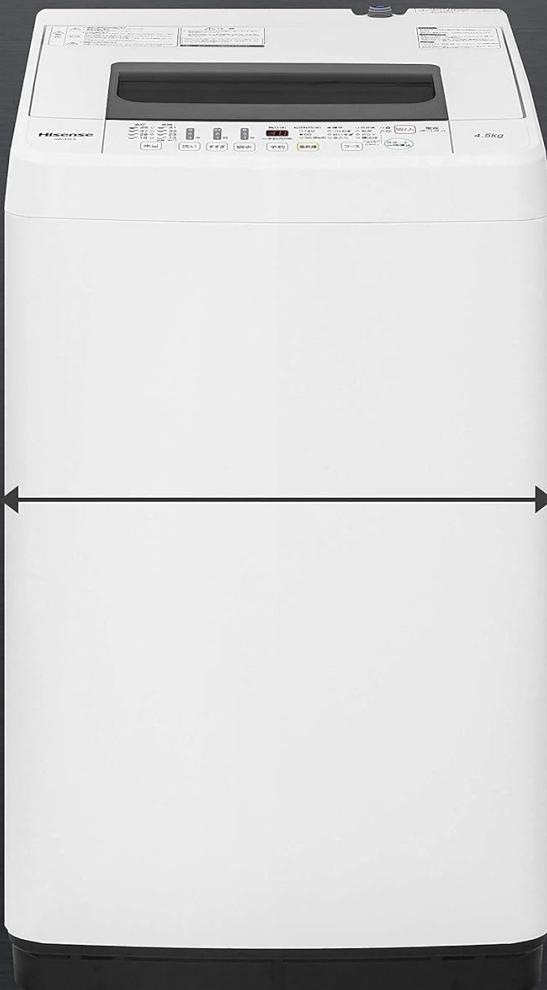

大容量でも  
スリムな  
**50cm幅**

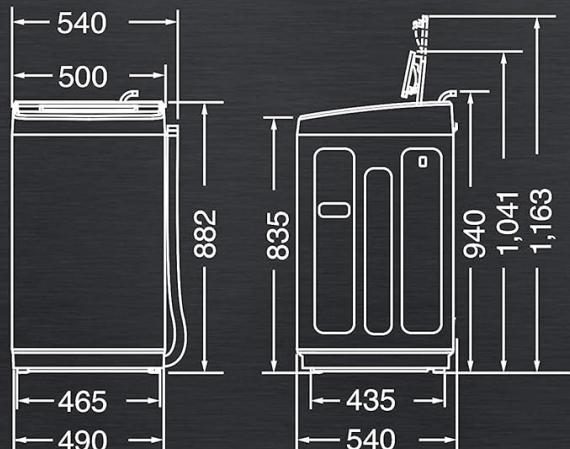


Image: Detailed dimensions of the washing machine's slim body.

# スペック・サイズ

洗濯・脱水容量

4.5kg

風乾燥 毛布洗い  
2.0kg 3.0kg

自由に選べる10コース

標準

つけおき

おいそぎ  
(最短10分)

念入り

自分流

毛布  
(3.0kg)

ドライ

槽洗浄

槽乾燥

すすぎ1回  
設定あり



Image: Specifications and size overview, including capacity and available wash cycles.

## 9. WARRANTY AND SUPPORT

For any inquiries or issues, please contact Hisense customer support.

### Warranty Information:

Please refer to the warranty card included with your product for detailed warranty terms and conditions. Typically, initial defects reported within one week of product arrival are covered. Any other costs, such as installation fees, are not covered under warranty.

### Contact Support:

If you have any questions or require assistance, please contact the Hisense Support Center.



# ハイセンス サポートセンター



0120-835-111

■FAX 0570-061-117 (有料)

■メールでのお問い合わせは下記をご参照ください。

<https://www.hisense.co.jp/support/>

365  
日

9:00～18:00 年中無休

※土・日・祝日は受付のみとなります。

Image: Hisense Support Center contact details.

For further information, you may visit the official Hisense support page:<https://www.hisense.co.jp/support/>