

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AA59-00431A Replacement Remote Control User Manual for Samsung LCD LED 3D TVs

ECONTROLLY AA59-00431A

ECONTROLLY AA59-00431A Replacement Remote Control User Manual

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY AA59-00431A replacement remote control. Designed to be compatible with various Samsung LCD, LED, and 3D TV models, this remote offers a direct replacement solution without requiring any programming or setup. Simply insert batteries, and it is ready for use.



Image 1: Front view of the ECONTROLLY AA59-00431A Replacement Remote Control. This image displays the full layout of buttons, including power, source, number pad, navigation, volume, channel, and special function keys.

SETUP

Battery Installation

The remote control requires two AAA batteries for operation. Follow these steps to install the batteries correctly:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 2: Rear view of the ECONTROLLY AA59-00431A Replacement Remote Control with the battery compartment open. This image shows the correct orientation for inserting two AAA batteries.

Note: Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

Button Functions

The ECONTROLLY AA59-00431A remote control provides access to all standard functions of your compatible Samsung TV. Below is a guide to the primary buttons and their uses:

Button	Function
POWER (Red)	Turns the TV on or off.
ON/OFF (Orange)	Turns the TV on or off (alternative power button).
SOURCE	Selects the input source (e.g., HDMI, AV, Component).
Number Pad (0-9)	Directly selects TV channels or enters numerical values.
VOL +/-	Adjusts the volume level up or down.
CH +/-	Changes the TV channel up or down.
MUTE	Mutes or unmutes the TV audio.
MENU	Opens the TV's main menu for settings and options.
GUIDE	Displays the electronic program guide (EPG).
INFO	Displays information about the current program or input.
Directional Pad (Up, Down, Left, Right, Enter)	Navigates through menus and selects options.
RETURN	Returns to the previous menu or screen.
EXIT	Exits the current menu or function.
SMART HUB / HUB	Accesses the Samsung Smart Hub for apps and online content.
TOOLS	Opens a quick menu with common functions.
Colored Buttons (A, B, C, D)	Perform specific functions depending on the TV mode or application.
Play/Pause/Stop/Rewind/Fast Forward	Controls media playback for connected devices or TV functions.

For specific functions related to your TV model, refer to your television's original user manual.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a

mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents.

- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the remote control will not be used for an extended period to prevent leakage, which can damage the device.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your ECONTROLLY AA59-00431A remote control, try the following solutions:

- **Remote is not responding:**
 - Ensure batteries are installed correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Verify that the TV is powered on.
- **Remote control range is poor:**
 - Ensure there are no objects blocking the line of sight between the remote and the TV.
 - Replace batteries, as low battery power can reduce signal strength.
- **Certain buttons do not work:**
 - This remote is a direct replacement and does not require programming. If specific buttons are not functioning, ensure your TV model is listed as compatible.
 - Clean the remote control, as dirt or debris might be interfering with button contacts.

If the problem persists after trying these steps, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	AA59-00431A
Brand	ECONTROLLY
Compatible Devices	Samsung LCD, LED, and 3D Televisions (various models including those starting with UE, UA, PS, UN series)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches (17.78 x 5.08 x 1.65 cm)
Item Weight	1 ounce (28.35 grams)
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

This ECONTROLLY product is designed for reliable performance. For any questions, technical assistance, or warranty inquiries, please refer to the seller's return policy or contact the manufacturer directly through their official channels. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the [ECONTROLLY brand page on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B077JZBLKX>

More documents and user manuals: <https://manuals.plus/>