

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Amazon Basics](#) /
- › [Amazon Basics Portable Security Box with Combination Lock L \(SW-SC01\) - Instruction Manual](#)

### Amazon Basics SW-SC01

# Amazon Basics Portable Security Box with Combination Lock L (SW-SC01) - Instruction Manual

Model: SW-SC01

## 1. INTRODUCTION AND OVERVIEW

---

The Amazon Basics Portable Security Box with Combination Lock (Model SW-SC01) is designed to provide secure storage for your valuables. Its compact and durable construction makes it suitable for both home and travel use, offering protection against unauthorized access.



**Figure 1.1:** The Amazon Basics Portable Security Box, open and ready for use, showcasing its interior space and foam padding.

This security box is constructed from high-quality steel and features a zinc alloy combination lock for enhanced security. The interior is foam-padded to protect contents from scratches and impacts. A security cable is included for anchoring the box to stationary objects, further deterring theft.

## 2. SAFETY INFORMATION

---

- Do not store flammable materials or liquids inside the security box.
- Keep the combination code confidential and store it in a safe, memorable location separate from the box.
- Ensure the box is securely closed and locked after each use.
- Do not attempt to force the lock if it is not opening. Refer to the troubleshooting section.
- This product is water-resistant, not waterproof. Avoid submerging the box in water.

## 3. PACKAGE CONTENTS

---

Please check the package to ensure all items are present:

- Amazon Basics Portable Security Box (Model SW-SC01)
- Security Cable
- Instruction Manual (this document)

## 4. SETUP

---

### 4.1 Setting the Combination Lock

1. The factory default combination is typically **0-0-0**. Align these numbers with the indicator line on the lock.
2. With the default combination set, slide the latch to the right to open the box.
3. Locate the reset button or lever inside the box, usually near the combination dials.
4. While the box is open, use a pointed object (like a pen tip) to press and hold the reset button, or move the reset lever to the 'SET' position.
5. While holding the reset button/lever, set your desired 3-digit combination by rotating the dials. Choose a memorable but secure combination.
6. Release the reset button/lever. Your new combination is now set.
7. **Test the new combination:** Scramble the dials, then enter your new combination and attempt to open the box. If it opens, the combination is set correctly.

**Important: Do not forget your combination. There is no master key or override for the combination lock. If you forget your combination, the box may become permanently locked.**

### 4.2 Attaching the Security Cable

The included security cable can be used to anchor the security box to a fixed object, providing an additional layer of security.

1. Locate the cable attachment point on the side of the security box.
2. Thread the looped end of the security cable through the attachment point.
3. Wrap the cable around a secure, stationary object (e.g., a car seat frame, a desk leg).
4. Pass the other end of the cable (with the metal ball) through the loop you created.
5. Ensure the cable is taut and the box is firmly secured to the object.

# Multi-Purpose & Portable

Durable & no-pry security case



Store jewellery,  
credit cards, cash,  
documents & more



Comes with 1,300 lbs  
/ 590 kg tested steel  
cable attaches to  
stationary objects



Anti-scratch exterior

Figure 4.1: The security box with the included cable, demonstrating how it can be secured.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Opening the Security Box

1. Rotate the three dials to align your personal 3-digit combination with the indicator line.
2. Slide the latch mechanism to the right. The lid will spring open slightly.
3. Lift the lid to fully open the box.

### 5.2 Closing and Securing the Security Box

1. Place your valuables inside the foam-padded interior. Ensure items fit without forcing the lid closed.
2. Lower the lid and press down firmly until the latch engages.
3. Scramble the combination dials to lock the box. This prevents unauthorized access.



## For Travel & Home

Lockable box with foam-padded interior to prevent jewellery, watches & other valuable items from getting scratched

Figure 5.1: The foam-padded interior of the security box, designed to protect contents.

## 6. MAINTENANCE

---

- **Cleaning:** Wipe the exterior of the security box with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Lock Inspection:** Periodically check the combination dials for smooth operation. If they become stiff, a small amount of graphite lubricant can be applied.
- **Interior Care:** The foam padding can be gently cleaned with a vacuum or a lint roller if needed.
- **Storage:** When not in use, store the security box in a dry place away from extreme temperatures.

## 7. TROUBLESHOOTING

---

### 7.1 Lock Not Opening

- **Incorrect Combination:** Double-check that you are entering the correct 3-digit combination. Ensure each number is precisely aligned with the indicator line.
- **Dials Not Aligned:** Sometimes the dials may not be perfectly aligned. Gently wiggle each dial to ensure it clicks into place for the correct number.
- **Latching Mechanism Stuck:** Apply slight pressure to the lid while attempting to slide the latch.

## 7.2 Difficulty Setting Combination

- Ensure the reset button/lever is fully pressed or moved to the 'SET' position while changing the combination.
- Make sure to release the reset button/lever only after your new combination is fully set.
- Always test the new combination immediately after setting it.

**Note: If you have forgotten your combination, there is no way to reset it without knowing the current combination. The manufacturer cannot provide a master code or unlock the box.**

## 8. SPECIFICATIONS


<h1>Compact Security Case</h1> <p>High quality steel &amp; zinc alloy lock</p> 			
ASIN	Dimensions	Size	Weight
B077K3FJHC	9.5 x 6.5 x 1.8 in (24.1 x 16.5 x 4.6 cm)	Large	2.86 lbs / 1.3 kg
B077K1YH8Z	9.7 x 6.5 x 1.9 in (24.6 x 16.5 x 4.9 cm)	XL	2.97 lbs / 1.35 kg

Figure 8.1: Visual representation of the security box's dimensions.

Feature	Specification
Brand	Amazon Basics
Model Number	SW-SC01
Product Dimensions (D x W x H)	24.1 cm x 16.5 cm x 4.6 cm (9.5 x 6.5 x 1.8 inches)

Lock Type	3-Digit Combination Dial Lock
Color	Black
Capacity	Approximately 110 cubic inches
Special Features	Portable, Foam-padded interior
Mounting Type	Portable (with security cable attachment)
Alarm	None
Water Resistance Level	Water Resistant
Control Type	Dial Control
Product Weight	1.44 kg (3.17 lbs)
Case Material	High-quality Steel
Lock Material	Zinc Alloy
Country of Origin	China
UPC	192233012308

## 9. WARRANTY AND SUPPORT

---

### 9.1 Warranty Information

This Amazon Basics product is backed by a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. Please retain your proof of purchase for warranty claims.

**The warranty is provided by Amazon and is valid in Japan for products purchased in Japan.**

### 9.2 Customer Support

For any questions, issues, or warranty claims regarding your Amazon Basics Portable Security Box, please contact Amazon Customer Service through your Amazon account or visit the Amazon Basics support page on the official Amazon website.

Please have your product model number (SW-SC01) and purchase details ready when contacting support.