

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Symphonized](#) /
- › [Symphonized Wireless Sport Earbuds - Instruction Manual](#)

Symphonized pwr_black

Symphonized Wireless Sport Earbuds

INSTRUCTION MANUAL

Introduction

Thank you for choosing Symphonized Wireless Sport Earbuds. These headphones are designed to provide a high-fidelity audio experience with the convenience of wireless connectivity, ideal for sports, exercise, and daily use. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new earbuds.

Package Contents

Please verify that all items are present in your package:

- Symphonized Wireless Sport Earbuds
- Additional Ear Tips (S/M/L)
- Charging Cable (USB)
- User Manual

Product Overview



Symphonized Wireless Sport Earbuds, black, with ear hooks and neckband cable. This image displays the overall design of the earbuds, including the flexible neckband and ear hooks for a secure fit.



Detailed view of a Symphonized Wireless Sport Earbud, highlighting the control buttons and ear hook design. This close-up shows the integrated controls on the earbud housing.

Key Components:

- **Earbuds:** Left and right earpieces with integrated ear hooks.
- **Neckband Cable:** Connects the two earbuds and houses the battery and main controls.
- **Control Panel:** Located on one of the earbuds, typically includes Power/Multi-function button, Volume Up/Next Track, Volume Down/Previous Track.
- **Microphone:** Built-in for hands-free calling.
- **Charging Port:** Micro USB port for charging.

Setup

1. Charging the Earbuds

Before first use, fully charge your earbuds. Connect the provided USB charging cable to the charging port on the earbuds and the other end to a USB power source (e.g., computer USB port, wall adapter). The charging time is approximately **2 hours** for a full charge.

An indicator light will typically show red during charging and turn blue or off when fully charged.

2. Bluetooth Pairing

To connect your earbuds to a device:

1. Ensure the earbuds are turned off.
2. Press and hold the Multi-function button (usually the power button) for approximately 5-7 seconds until the indicator light flashes red and blue alternately. This indicates pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for new devices.
4. Select "Symphonized PWR" or a similar name from the list of available devices.
5. Once connected, the indicator light on the earbuds will typically flash blue slowly or turn off. You will also hear an audible confirmation.

The earbuds use Bluetooth V4.1 technology and have a wireless range of up to **10 meters (33 feet)** in an open environment.



Symphonized Wireless Sport Earbuds shown next to a smartphone displaying a music player interface, illustrating wireless connectivity. This image demonstrates the wireless connection between the earbuds and a mobile device.

3. Wearing the Earbuds

For optimal sound quality and comfort, choose the correct size ear tips from the included options (S/M/L). The ear hooks are designed to provide a secure fit, especially during physical activity.

1. Select the ear tips that create a comfortable seal in your ear canal.
2. Place the earbud into your ear, ensuring the ear hook goes over the top of your ear.
3. Adjust the earbud and hook until it feels secure and comfortable.

ERGONOMIC DESIGN

COMFORTABLE | STABLE | SECURE FIT



Diagram illustrating the ergonomic fit of the Symphonized Wireless Sport Earbud within the ear, emphasizing stability and comfort. This visual guide helps users understand how to properly wear the earbuds.

Operating Instructions

Power On/Off

- **Power On:** Press and hold the Multi-function button for approximately 3 seconds until the indicator light flashes blue and you hear a power-on prompt.
- **Power Off:** Press and hold the Multi-function button for approximately 3-5 seconds until the indicator light flashes red and you hear a power-off prompt.

Music Playback

- **Play/Pause:** Short press the Multi-function button.

- **Volume Up:** Short press the "+" button.
- **Volume Down:** Short press the "-" button.
- **Next Track:** Long press the "+" button.
- **Previous Track:** Long press the "-" button.

Call Management

- **Answer/End Call:** Short press the Multi-function button.
- **Reject Call:** Long press the Multi-function button.
- **Redial Last Number:** Double-press the Multi-function button.

Voice Assistant (Siri/Google Assistant)

If supported by your device, a quick triple-press of the Multi-function button may activate your device's voice assistant.

Maintenance & Care


- **Cleaning:** Use a soft, dry cloth to clean the earbuds. Do not use harsh chemicals or abrasive materials. Regularly clean ear tips to prevent wax buildup.
- **Storage:** Store the earbuds in a cool, dry place away from extreme temperatures and direct sunlight.
- **Water Resistance:** The earbuds are **Water Resistant**, making them suitable for workouts and light rain. Do not submerge them in water or expose them to heavy downpours. Ensure the charging port cover is securely closed when not charging.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the earbuds regularly, even if not in use for extended periods.

Troubleshooting


Problem	Possible Cause	Solution
Earbuds won't power on.	Low battery.	Charge the earbuds fully.
Cannot pair with device.	Earbuds not in pairing mode; Bluetooth off on device; device too far.	Ensure earbuds are in pairing mode (flashing red/blue). Turn on Bluetooth on your device. Move device closer to earbuds (within 10m). Forget previous pairings on your device and try again.
No sound or low volume.	Volume too low on earbuds or device; earbuds not connected.	Increase volume on both earbuds and your device. Reconnect the earbuds to your device.
Intermittent connection.	Interference; device too far; obstacles.	Move closer to your device. Avoid environments with strong Wi-Fi or other Bluetooth signals. Remove obstacles between earbuds and device.


Specifications

COMPLETELY WIRELESS STEREO EARBUDS




symphonized







Bluetooth V4.1 Technology




Completely Wireless stereo earbuds




Deep, rich HD sound




Built in mic



200mAh battery capacity up to 6H talking time



Sweat & Waterproof earbuds



Infographic detailing key features of the Symphonized Wireless Sport Earbuds, including Bluetooth V4.1, HD sound, built-in mic, 200mAh battery, and sweat/waterproof design. This image summarizes the technical capabilities.

Feature	Detail
Model Name	pwr_black
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	4.1
Bluetooth Range	10 Meters
Battery Life	Up to 6 Hours (Playtime)
Charging Time	2 Hours

Feature	Detail
Frequency Range	18Hz-22kHz
Water Resistance Level	Water Resistant
Control Type	Volume Control, Touch
Earpiece Shape	In-Ear with Ear Hooks
Material	Metal, Silicone
Item Weight	3.2 ounces
UPC	700600921889

Warranty & Support


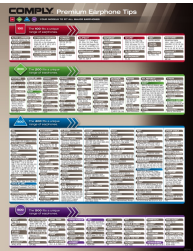
Symphonized products are designed for durability and performance. For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Symphonized website. For customer support, troubleshooting assistance, or to inquire about returns, please contact Symphonized directly through their official channels.




You can visit the Symphonized brand store on Amazon for more information:[Symphonized Store](#)

Important Notes

No official product videos from the seller were available for embedding based on the provided data.

Related Documents - pwr_black

	Symphonized SNRGY True Wireless Earbuds: Quick Start Guide & Manual Get started with your Symphonized SNRGY True Wireless Earbuds. This guide covers setup, pairing, controls, specifications, and troubleshooting for optimal listening.
	Comply Premium Earphone Tips Compatibility Guide Find the perfect Comply Premium Earphone Tips for your audio devices. This guide lists compatible earphone models for Comply tip sizes 100, 200, 400, and 500.

	<p>Comply Foam Earphone Tip Compatibility Guide</p> <p>A comprehensive compatibility guide for Comply Premium Foam Tips, detailing which Comply series fit various earphone models from numerous brands across 100, 200, 400, and 500 series.</p>
	<p>Comply Earphone Tip Compatibility Chart: Find Your Perfect Fit</p> <p>Comply offers a wide range of foam earphone tips designed to fit hundreds of audio models. Use this comprehensive compatibility chart to find the ideal Comply tips for your specific earphones from brands like Shure, Sony, Bose, and more.</p>
	<p>Comply Foam Earphone Tip Compatibility Guide</p> <p>A comprehensive compatibility guide for Comply Premium Foam Tips, listing earphone models from various brands that fit the 100, 200, 400, and 500 series Comply tips.</p>