

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cuisinart](#) /

› [Cuisinart TOB-60N2BKS2 Convection Toaster Oven Broiler Instruction Manual](#)

## Cuisinart TOB-60N2BKS2

# Cuisinart TOB-60N2BKS2 Convection Toaster Oven Broiler Instruction Manual

Brand: Cuisinart | Model: TOB-60N2BKS2

## INTRODUCTION

Thank you for choosing the Cuisinart TOB-60N2BKS2 Convection Toaster Oven Broiler. This versatile appliance brings a classic approach to modern cooking, offering multiple functions to enhance your kitchen experience. With its industrial stainless steel styling and robust 1800-watt motor, it is designed for efficient and convenient meal preparation. This manual will guide you through the setup, operation, and maintenance of your new appliance to ensure optimal performance and longevity.

The Cuisinart TOB-60N2BKS2 features 8-in-1 functions including Toast, Convection Bake, Broil, Pizza, and Reheat, along with a convenient Keep-Warm function. Its spacious interior can accommodate a 12-inch pizza or 6 slices of toast, making it suitable for various cooking needs. The tinted glass door allows for easy monitoring of cooking progress without opening the door, and the nonstick interior simplifies cleanup.

## IMPORTANT SAFEGUARDS

Before using your Cuisinart TOB-60N2BKS2 Convection Toaster Oven Broiler, please read all instructions carefully. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons. Keep the appliance away from children and ensure proper ventilation during operation. Do not immerse the appliance in water or other liquids. Always unplug the appliance from the outlet when not in use and before cleaning. Refer to the full user manual for a complete list of safety instructions.

## SETUP

- Unpacking:** Carefully remove all packaging materials and any promotional labels or stickers from your toaster oven.
- Cleaning:** Wash the baking pan, wire rack, and crumb tray in warm, soapy water. Wipe the exterior of the toaster oven with a damp cloth. Ensure all parts are completely dry before reassembling.
- Placement:** Place the toaster oven on a flat, stable, heat-resistant surface. Ensure there is adequate clearance (at least 4 inches) on all sides and above the appliance for proper ventilation. Avoid placing it near flammable materials or under cabinets that could be damaged by heat.
- Power Connection:** Plug the power cord into a standard electrical outlet.



Image: Front view of the Cuisinart TOB-60N2BKS2 Convection Toaster Oven Broiler, showcasing its stainless steel finish and control knobs.

## OPERATING INSTRUCTIONS

Your Cuisinart TOB-60N2BKS2 offers multiple cooking functions controlled by easy-to-use dials. Familiarize yourself with the control panel before operation.

### Control Panel Overview

- Function Dial:** Selects the cooking mode (Toast, Bagel, Bake, Broil, Warm).
- Temperature Dial:** Adjusts the cooking temperature from 200°F to 450°F, or selects "Warm" or "Broil" settings.
- Toast Shade/Timer Dial:** For toasting, selects the desired toast shade (Light to Dark). For other functions, sets the cooking timer up to 60 minutes or selects "Stay On" for continuous operation.
- Start/Stop Button:** Initiates or cancels the cooking cycle.
- Power Indicator Light:** Illuminates when the appliance is powered on.

### Cooking Functions

#### 1. Toast/Bagel:

- Place items directly on the wire rack.
- Turn the Function Dial to "Toast" or "Bagel".
- Turn the Toast Shade Dial to your desired shade (Light to Dark).
- Press the Start/Stop button to begin. The cycle will automatically complete.

#### 2. Bake:

 
- Place food in the baking pan on the wire rack.
- Turn the Function Dial to "Bake".
- Turn the Temperature Dial to the desired temperature (200°F - 450°F).
- Turn the Toast Shade/Timer Dial to the desired cooking time (up to 60 minutes) or "Stay On".
- Press the Start/Stop button.

#### 3. Broil:

- Place food on the wire rack in the baking pan. Position the rack closer to the top heating elements for optimal broiling.
- Turn the Function Dial to "Broil".
- Turn the Temperature Dial to "Broil".
- Turn the Toast Shade/Timer Dial to the desired cooking time (up to 60 minutes) or "Stay On".
- Press the Start/Stop button. Monitor food closely to prevent burning.

#### 4. Warm:

- Place cooked food in the baking pan on the wire rack.
- Turn the Function Dial to "Warm".
- Turn the Temperature Dial to "Warm".
- Turn the Toast Shade/Timer Dial to the desired warming time or "Stay On".
- Press the Start/Stop button.



Video: An official Cuisinart overview of the Convection Toaster Oven Broiler (TOB-60 Series), demonstrating the various functions and controls.



Video: A seller-provided video clarifying that this specific model does NOT have an air fryer function, despite common toaster oven features.

## ACCESSORIES AND FEATURES

- **Wire Rack:** The toaster oven includes a durable wire rack that can be positioned at different heights to accommodate various food items and cooking methods.
- **Baking Pan:** A baking pan is provided for baking, broiling, and reheating. It is designed to fit perfectly within the oven.
- **Removable Crumb Tray:** Located at the bottom front of the oven, the crumb tray slides out for easy cleaning of crumbs and drips. Ensure the tray is properly inserted before operating the oven.
- **Nonstick Interior:** The interior of the oven features a nonstick coating for easy cleanup after use.
- **Capacity:** The oven has a 0.6 cubic feet capacity, capable of fitting a 12-inch pizza or 6 slices of toast.



Image: Diagram showing the dimensions of the Cuisinart TOB-60N2BKS2: 19.1 inches width, 15.5 inches depth, and 9.75 inches height.

## MAINTENANCE

---

Regular cleaning and maintenance will ensure your toaster oven continues to perform efficiently.

1. **Before Cleaning:** Always unplug the toaster oven and allow it to cool completely before cleaning.
2. **Crumb Tray:** Slide out the crumb tray and discard any crumbs. Wash the tray in warm, soapy water or place it in the dishwasher. Dry thoroughly.
3. **Wire Rack and Baking Pan:** Wash these accessories in warm, soapy water or in the dishwasher. Dry thoroughly.
4. **Interior:** Wipe the nonstick interior with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads, as they can damage the nonstick surface.
5. **Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners.

## TROUBLESHOOTING

---

If you encounter any issues with your Cuisinart TOB-60N2BKS2, refer to the following common troubleshooting tips. For more detailed solutions, consult the full user manual.

- **Appliance Not Turning On:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the Function Dial and Timer Dial are set correctly for the desired operation.

- **Uneven Toasting/Cooking:**

- Ensure food is evenly distributed on the rack or pan.
- Adjust the rack position for optimal heat distribution based on the food type.
- Experiment with different toast shade settings to find your preference.

- **Excessive Smoke:**

- This may occur during initial use due to manufacturing residues; it should dissipate quickly.
- Ensure the crumb tray and interior are clean and free of food debris or grease buildup.

## SPECIFICATIONS

---

<b>Brand</b>	Cuisinart
<b>Model Name</b>	Toaster Oven Broiler with Convection
<b>Item Model Number</b>	TOB-60N2BKS2
<b>Product Dimensions</b>	15.5"D x 19.1"W x 9.75"H
<b>Capacity</b>	0.6 Cubic Feet
<b>Power Source</b>	Electric (1800-Watt Motor)
<b>Temperature Range</b>	200 - 450 Degrees Fahrenheit
<b>Control Type</b>	Knob
<b>Special Features</b>	Precise Toast Shade Control, Nonstick Interior, Brushed Stainless Steel Finish, Power On LED Indicator, Slide-out Crumb Tray
<b>Included Components</b>	Toaster Oven, Wire Rack, Baking Pan, Removable Crumb Tray

---

## WARRANTY AND SUPPORT

---

The Cuisinart TOB-60N2BKS2 Convection Toaster Oven Broiler comes with a **Limited 3-Year Warranty**. For detailed information regarding warranty policies, troubleshooting steps, or any product-related questions, please refer to the comprehensive user manual included with your appliance or visit the official Cuisinart website. This product is BPA-free.