

USARMT U-EN2A27HT

Universal Remote Control EN2A27HT User Manual

Model: U-EN2A27HT | Brand: USARMT

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your USARMT Universal Remote Control EN2A27HT. This remote is designed to be compatible with a wide range of Hisense Smart 4K HDR TV models, offering a seamless replacement or secondary control option. Please read this manual thoroughly before use to ensure optimal performance and longevity of your remote control.

SETUP

The USARMT Universal Remote Control EN2A27HT is preprogrammed and typically requires no additional setup or programming for compatible Hisense TV models. Simply insert batteries, and the remote should be ready for use.

Inserting Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.







Image: Back of the remote control, illustrating the battery compartment and its cover. Ensure correct battery polarity when inserting.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible Hisense Smart 4K HDR TV. Below is a guide to the primary buttons and their functions:



Image: Front view of the remote control, displaying all buttons from power to app shortcuts.

- **Power Button (Red):** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels.

- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus, select options, and confirm choices.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's smart home screen or main menu.
- **Exit Button:** Exits the current menu or application.
- **Volume Up/Down (+/-):** Adjusts the TV's volume level.
- **Mute Button:** Mutes or unmutes the TV's audio.
- **Channel Up/Down (+/-):** Changes the TV channel.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Control media playback in compatible applications.
- **Dedicated App Buttons (Netflix, Amazon, Vudu, YouTube):** Provide quick access to popular streaming services.



Universal Remote for All Hisense TV Remote



Image: A magnified view of the remote's lower section, highlighting the dedicated Netflix, Amazon, Vudu, and YouTube buttons.

Compatibility

This remote is compatible with numerous Hisense Smart 4K HDR TV models, including but not limited to: 40H5D, 43H5D, 43H6D, 50DU6070, 50H5D, 50H6D, 55DU6070, 55H6D, 60DU6070, 65H6D. It is designed to replace Hisense remote models such as EN2A27HT, EN2A27, EN2A127H, EN2AN27H, EN2AS27H, EN2B27, EN2C27, EN2D27, EN2G27, EN33922A, EN33924HS, EN33925A, EN33926A, EN33927A, EN2BN27H, and ERF2A60.

MAINTENANCE

Battery Replacement

When the remote's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the steps in the 'Inserting Batteries' section to replace the old batteries with new AAA batteries. Always replace both batteries at the same time.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any objects blocking the signal path. Move closer to the TV.
Specific buttons not working	Dirt or debris under the button. Button malfunction.	Clean the remote surface around the button. If problem persists, the button may be faulty.
TV not responding to remote commands	TV's IR receiver is blocked or faulty. Remote is not compatible with the TV model.	Ensure TV's IR receiver is clear. Verify TV model compatibility with the remote.

SPECIFICATIONS

Feature	Detail
Model Number	U-EN2A27HT

Feature	Detail
Brand	USARMT
Compatible Devices	Television (Hisense Smart 4K HDR TVs)
Color	Black
Item Weight	2.99 ounces
Package Dimensions	8.23 x 2.87 x 0.98 inches
Max Number of Supported Devices	1
Special Feature	Universal (for specified Hisense models)

WARRANTY AND SUPPORT

For any issues not covered in this manual, or for warranty inquiries, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase for warranty claims.

© 2024 USARMT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B077MFZY93>

More documents and user manuals: <https://manuals.plus/>