

MINELAB 3226-0002

Minelab PRO-FIND 15 Pinpointer Instruction Manual

Model: 3226-0002

1. INTRODUCTION

The Minelab PRO-FIND 15 is a waterproof pinpointer metal detector designed for precise and rapid target location. It features Detector Interference Free (DIF) technology to minimize interference with an operating metal detector and provides clear audio indication as you approach a target. This manual provides essential information for setting up, operating, and maintaining your PRO-FIND 15.





Image: Minelab PRO-FIND 15 Pinpointer, a yellow and black handheld device.

2. SETUP

2.1. Battery Installation

The PRO-FIND 15 requires one 9V PP3 battery (not included). To install the battery, unscrew the cap at the end of the pinpointer. Insert the 9V battery, ensuring correct polarity. Replace the cap and tighten it securely to maintain the waterproof seal.

3. OPERATION

3.1. Powering On/Off

To power on the PRO-FIND 15, press and hold the power button until you hear two short beeps, followed by a third beep. This indicates the device is ready for use. To power off, press and hold the power button until the device shuts down.

3.2. Target Detection

Once powered on, sweep the tip of the pinpointer over the area where a target is suspected. The audio tones will intensify as the probe approaches the target, providing a clear indication of its precise location. The PRO-FIND 15 is equipped with Detector Interference Free (DIF) technology, which significantly reduces interference with an operating metal detector when the pinpointer is switched off.



Image: A person using the Minelab PRO-FIND 15 to pinpoint a target in the soil.

3.3. Waterproof Capability

The PRO-FIND 15 is fully waterproof up to 5 ft (1.5 m), allowing for accurate detection of targets in shallow water, streams, or wet environments. Ensure the battery cap is securely tightened before submerging the device.



PRO FIND 15 PINPOINTER



Lanyard



Holster



Pro Find 15 Pinpointer

Image: The Minelab PRO-FIND 15 being used underwater by a person in diving gear.

4. MAINTENANCE

4.1. Cleaning

After each use, especially in wet or dirty conditions, clean the pinpointer with fresh water. Wipe down the entire unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the device is completely dry before storage.

4.2. Storage

Store the PRO-FIND 15 in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, remove the battery to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

Issue	Possible Cause / Solution
Device does not turn on or is intermittent.	Check battery installation and ensure it is a fresh 9V PP3 battery. Try pressing the power button multiple times to initiate startup.
Interference with main metal detector.	The PRO-FIND 15 features DIF (Detector Interference Free) technology. Ensure the pinpointer is switched OFF when not in use to minimize interference with your main metal detector.
Audio indication is too loud.	If the audio is too loud, a small piece of electrical tape can be placed over the speaker grill to dampen the sound.

6. SPECIFICATIONS

Feature	Detail
Brand	MINELAB
Model	PRO-FIND 15 (3226-0002)
Color	Black / Yellow
Batteries Required	1 x 9V PP3 (not included)
Material	Metal
Item Weight	6.5 oz (184 g)
Product Dimensions	9.7"L (247 mm)
Battery Life	Approximately 30 Hours
International Protection Rating	IP54 (Waterproof up to 5 ft / 1.5 m)

7. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase accessories, please refer to the official Minelab website or contact their customer service directly. Keep your proof of purchase for any warranty claims. You can also visit the [MINELAB Store on Amazon](#) for more products and information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question