

Epson WF-7210

Epson WorkForce WF-7210 Wireless Wide-format Color Inkjet Printer Instruction Manual

Model: WF-7210

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Epson WorkForce WF-7210 Wireless Wide-format Color Inkjet Printer. Please read thoroughly before use.

Key Features:

- Epson printing system designed for genuine Epson cartridges.
- Performance Beyond Laser with PrecisionCore technology.
- Print shop quality color graphics and laser sharp black text.
- Borderless prints and brilliant marketing materials up to 13" x 19".
- Economical: uses up to 80 percent less power vs. color laser printers.
- Amazon Dash Replenishment Ready: tracks ink usage and orders more when low.

2. WHAT'S IN THE BOX

Verify that all items are included in your printer package:

- WorkForce WF-7210 printer
- Instruction manual
- CD-ROM for product setup
- Power cord
- 4x DURABrite Ultra Ink cartridges (1x Black, 1x Cyan, 1x Magenta, 1x Yellow)

In the box

WorkForce® WF-7210



Figure 1: Items included in the Epson WorkForce WF-7210 printer box, showing the printer, ink cartridges, power cord, CD-ROM, and instruction manual.

3. SETUP

3.1 Unpacking and Placement

Carefully remove the printer from its packaging. Place the printer on a stable, flat surface, ensuring adequate space around it for paper trays and ventilation. Note that the printer is large, measuring 22.3"D x 31.8"W x 12.7"H (81 cm x 57 cm x 32 cm).

Epson® Genuine Ink Promise

Epson is committed to delivering the highest quality and most reliable inks for your printing experience. Epson's Promise is backed by our outstanding Service & Support and Warranty Programs.



Epson strongly recommends the use of Genuine Epson inks for a quality printing experience. Non-Epson inks and inks not formulated for your specific printer may cause damage that is not covered by the Epson warranty.

SCROLL DOWN TO "FROM THE MANUFACTURER" TO LEARN MORE.

Figure 2: The Epson WorkForce WF-7210 printer, a large black unit, positioned on a wooden desk.

3.2 Power On

Connect the power cord to the printer and a wall outlet. Press the power button to turn on the printer.

3.3 Ink Cartridge Installation

Install the included DURABrite Ultra Ink cartridges into their respective slots. Ensure you use only genuine Epson brand cartridges for optimal performance and to maintain warranty coverage.

At a glance


WorkForce® WF-7210



Wireless



Wide-format
Print

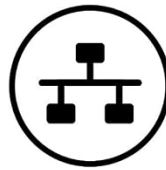

Ethernet

Additional features

- ✓ Powered by PrecisionCore®
- ✓ Prints up to 13" x 19"
- ✓ 500-sheet capacity
- ✓ Print-shop-quality results
- ✓ Auto 2-sided printing
- ✓ 2.2" LCD
- ✓ Wireless/Wi-Fi Direct®/NFC*
- ✓ Ethernet networking
- ✓ 18 ISO ppm (black), 10 ISO ppm (color)*
- ✓ Smartphone/tablet printing*



Ink cartridges



DURABrite
Ultra
INK

252 Series Genuine Epson® Ink cartridges

Epson recommends the use of genuine ink to ensure optimal quality and performance.

***SCROLL DOWN TO "FROM THE MANUFACTURER" TO LEARN MORE.**

Figure 3: Top-down view of the Epson WorkForce WF-7210 printer, showing the ink cartridge compartment with four color cartridges installed.

3.4 Paper Loading

The printer features dual 250-sheet paper trays and a rear manual feed. For larger paper sizes like 11" x 17" or 13" x 19", you may need to extend the paper trays. The rear feed is suitable for specialty paper like photo paper or envelopes.



*SCROLL DOWN TO "FROM THE MANUFACTURER" TO LEARN MORE.

Smartphone sold separately.

Figure 4: The Epson WorkForce WF-7210 printer with its paper output tray extended to accommodate larger prints, demonstrating its wide-format capability.

3.5 Connectivity

Connect the printer to your network via Wi-Fi, Wi-Fi Direct, or Ethernet. USB connection to a computer is also supported. For wireless setup, use the printer's LCD panel to connect to your Wi-Fi network. Once connected, your computers (Windows/Mac) should automatically detect the printer.

For mobile devices, download the Epson mobile app for easy printing from smartphones and tablets. The printer also supports Google Cloud Print, with an additional configuration step for Chromebooks.



Figure 5: The Epson WorkForce WF-7210 printer in an office environment, showcasing its compact design despite wide-format capabilities.

Setup and Features Overview Video:

Video 1: An overview of the Epson WorkForce WF-7210 printer, demonstrating its large format printing capabilities, dual paper trays, ink cartridge installation, and various connectivity options including Wi-Fi and Ethernet. The video also shows a print speed test for both black and white and color documents, and a photo print test.

4. OPERATING

4.1 Basic Printing

To print a document, select the print option from your application. Choose the Epson WF-7210 Series printer. You can select various settings such as paper size (up to 13" x 19"), media type, and print quality (Draft, Normal, Best). The printer supports automatic two-sided (duplex) printing for sizes up to 11" x 17".

4.2 Mobile Printing

Use the Epson iPrint app (available for iOS and Android) to print photos and documents directly from your mobile device. The app allows you to select paper size, media type, print quality, and other settings for optimal results.

5. MAINTENANCE

5.1 Ink Cartridge Replacement

When an ink cartridge runs low or is empty, the printer's LCD will display a message. Open the printer cover, remove the old cartridge, and insert a new genuine Epson cartridge. A full set of standard capacity cartridges costs approximately \$68, while high-capacity black cartridges can print about 1100 pages and color cartridges about 350 pages, depending on coverage.

5.2 Maintenance Box Replacement

The printer uses a maintenance box to collect excess ink during print head cleaning and other operations. When the maintenance box is full, the printer will prompt you to replace it. To replace, locate the maintenance box access panel, remove the old box, and insert a new one. This process is generally straightforward.

Maintenance Box Replacement Video:

Video 2: A demonstration of how to replace the maintenance box in an Epson printer. The video shows the location of the maintenance box, how to remove the old one, and how to install a new replacement, highlighting the simplicity of the process.

6. TROUBLESHOOTING

6.1 Paper Jams

If a paper jam occurs, the printer's LCD will display an error message. Follow the on-screen instructions or consult the full user manual for detailed steps on how to clear the jam from various access points.

6.2 Error Messages

The printer's LCD provides clear error messages. Refer to the instruction manual or Epson's support website for explanations and solutions to specific error codes.

7. SPECIFICATIONS

Feature	Specification
Brand	Epson
Connectivity Technology	Wi-Fi, Ethernet, USB
Printing Technology	Inkjet
Special Feature	Auto-Duplex

Color	Black
Model Name	WF-7210
Printer Output	Color
Maximum Print Speed (Color)	10 ppm
Max Printspeed Monochrome	18 ppm
Item Weight	32.8 Pounds
Resolution	4800 x 2400 dpi
Display Type	LCD
Maximum Media Size	13 x 19 inch
Maximum Sheet Capacity	500
Number of Trays	2

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Epson WorkForce WF-7210 printer comes with a **1-year limited warranty** in the U.S. and Canada. This warranty covers defects in materials and workmanship under normal use.

Important: The Epson printing system is specifically designed to be used with genuine Epson cartridges. Use of non-genuine ink could cause damage not covered under the printer's limited warranty. Epson periodically provides firmware updates to address issues of security, performance, minor bug fixes, and to ensure the printer functions as designed. This printer was designed to work only with genuine Epson ink cartridges, and some updates may affect the functionality of third-party ink. Non-Epson branded or altered Epson cartridges that functioned prior to a firmware update may not continue to function.

8.2 Technical Support

For technical assistance, troubleshooting, or warranty claims, please visit the official Epson support website or contact their customer service. Refer to the documentation included with your printer for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question