

[Manuals.plus](#) /

› [Magic Sing](#) /

› Magic Sing Spanish 13 (LT8) Karaoke Song Chip Instruction Manual for ET23KH, ET25K, ET25KN, ET19KV, ET18K, ET9K, ED9000, ED8000, ED7000, ED6000, ED11000, LEADSINGER LS2100, LS2700, LS3700

Magic Sing SPANISH 13 (LT8)

Magic Sing Spanish 13 (LT8) Karaoke Song Chip Instruction Manual

Model: SPANISH 13 (LT8)

INTRODUCTION

This manual provides essential instructions for the installation, operation, and maintenance of your Magic Sing Spanish 13 (LT8) Karaoke Song Chip. This chip contains 178 Spanish songs and is designed for use with compatible Magic Sing and Leadsinger karaoke systems. Please read this manual thoroughly before use to ensure proper functionality and to maximize your karaoke experience.

Compatible Systems: ET23KH, ET25K, ET25KN, ET19KV, ET18K, ET9K, ED9000, ED8000, ED7000, ED6000, ED11000, LEADSINGER LS2100, LS2700, LS3700.

PRODUCT OVERVIEW



This image displays the packaging for the Magic Sing Spanish 13 (LT8) Karaoke Song Chip, highlighting its model number LT-8, the inclusion of 178 songs, and its designation as 'SPANISH 13'.

The Magic Sing Spanish 13 (LT8) Song Chip is a compact memory module pre-loaded with a selection of 178 Spanish karaoke songs. It is designed for easy insertion into compatible Magic Sing and Leadsinger karaoke microphones or systems, expanding

your song library instantly.

SETUP AND INSTALLATION

1. **Power Off System:** Before installing or removing the song chip, ensure your Magic Sing or Leadsinger karaoke system/microphone is completely powered off and unplugged from its power source.
2. **Locate Chip Slot:** Identify the song chip slot on your karaoke microphone or system. Refer to your primary karaoke system's manual for the exact location if unsure. Typically, this slot is covered by a small panel or rubber stopper.
3. **Insert Song Chip:** Gently insert the Spanish 13 (LT8) song chip into the designated slot. Ensure the chip is oriented correctly, usually with the gold contacts facing inwards or downwards, depending on your system's design. Do not force the chip; it should slide in smoothly.
4. **Secure Chip:** Once fully inserted, ensure the chip is seated firmly. If there's a cover or stopper, replace it to protect the chip.
5. **Power On System:** Reconnect your karaoke system to its power source and turn it on. The system should now recognize the new song chip.

Note: Improper insertion or removal while the system is powered on may damage the song chip or the karaoke system.

OPERATING INSTRUCTIONS

After successful installation, the songs from the Spanish 13 (LT8) chip will be integrated into your karaoke system's song library. The method for accessing these songs depends on your specific karaoke system model.

- **Song Selection:** Use your karaoke system's remote control or on-screen menu to navigate the song list. The new Spanish songs will typically appear alongside your existing song collection.
- **Searching for Songs:** Most Magic Sing and Leadsinger systems allow you to search for songs by title, artist, or song number. Refer to your main system's manual for detailed search functions.
- **Song List:** A physical song list is included with the chip. Use this list to quickly find song numbers for direct entry into your karaoke system.
- **Playing Songs:** Select your desired song and press the 'Play' or 'Start' button on your remote or system.

MAINTENANCE AND CARE

- **Handling:** Always handle the song chip by its edges. Avoid touching the gold contacts to prevent damage from oils or dirt.
- **Storage:** Store the song chip in a cool, dry place, away from direct sunlight, extreme temperatures, and magnetic fields. Keep it in its original packaging or a protective case when not in use.
- **Cleaning:** If the gold contacts appear dirty, gently wipe them with a soft, lint-free cloth slightly dampened with isopropyl alcohol. Ensure the chip is completely dry before re-inserting.
- **Avoid Liquids:** Keep the song chip away from water and other liquids.
- **Physical Damage:** Do not bend, drop, or apply excessive force to the song chip.

TROUBLESHOOTING

If you encounter issues with your Magic Sing Spanish 13 (LT8) Song Chip, please refer to the following common solutions:

1. **Chip Not Recognized / Songs Not Appearing:**
 - Ensure the karaoke system is powered off before inserting the chip.
 - Verify the chip is fully and correctly inserted into the slot. Remove and re-insert it carefully.
 - Confirm your karaoke system model is listed as compatible with the Spanish 13 (LT8) chip.

- Check the gold contacts on the chip for any visible dirt or damage. Clean if necessary (refer to Maintenance section).
- Restart your karaoke system after re-inserting the chip.

2. Songs Play Incorrectly / Scrambled Text:

- This may indicate a data corruption issue or a defective chip.
- Try re-inserting the chip as described above.
- Ensure your karaoke system's firmware is up to date, if applicable (consult your system's manual).
- If the problem persists, the chip may be defective. Contact customer support.

3. System Freezes When Selecting Songs from Chip:

- This could be due to an improperly seated chip or a compatibility conflict.
- Power off the system, remove the chip, and re-insert it firmly.
- Verify compatibility with your specific karaoke system model.
- If the issue continues, contact customer support.

If these steps do not resolve the issue, please contact Magic Sing customer support for further assistance.

SPECIFICATIONS

Model Name	Spanish 13 (LT8)
Brand	Magic Sing
Number of Songs	178
Compatible Devices	Magic Sing and Leadsinger Karaoke Systems (ET23KH, ET25K, ET25KN, ET19KV, ET18K, ET9K, ED9000, ED8000, ED7000, ED6000, ED11000, LEADSINGER LS2100, LS2700, LS3700)
Item Weight	1.58 ounces
Package Dimensions	8 x 5 x 0.8 inches
ASIN	B077NWKHDZ
Included Components	Song lists

WARRANTY AND SUPPORT

Specific warranty information for the Magic Sing Spanish 13 (LT8) Song Chip is not provided in this document. For warranty details, technical support, or to report a defective product, please contact Magic Sing directly through their official website or the retailer where the product was purchased.

Manufacturer: Magic Sing

Website: www.magickaraoke.com