

[Manuals.plus](#) /

› [XP-Pen](#) /

› XPPen Deco 01 V3 Drawing Tablet User Manual

XP-Pen Deco 01 V3

XPPen Deco 01 V3 Drawing Tablet User Manual

Model: Deco 01 V3

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your XPPen Deco 01 V3 Drawing Tablet. Please read this manual thoroughly to ensure proper use and to maximize your experience with the device.



Image 1.1: The XPPen Deco 01 V3 Drawing Tablet with its battery-free stylus.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Deco 01 V3 Drawing Tablet
- 1 x Battery-Free Stylus
- 10 x Replacement Nibs
- 1 x Stylus Stand
- 1 x Anti-fouling Drawing Glove
- 1 x Protective Film
- 1 x USB-C to USB-A Cable
- 1 x USB to USB-C Adapter
- 1 x Quick Guide

Variety Possibilities



Design



Education



Paint



Sketch



Edit photos

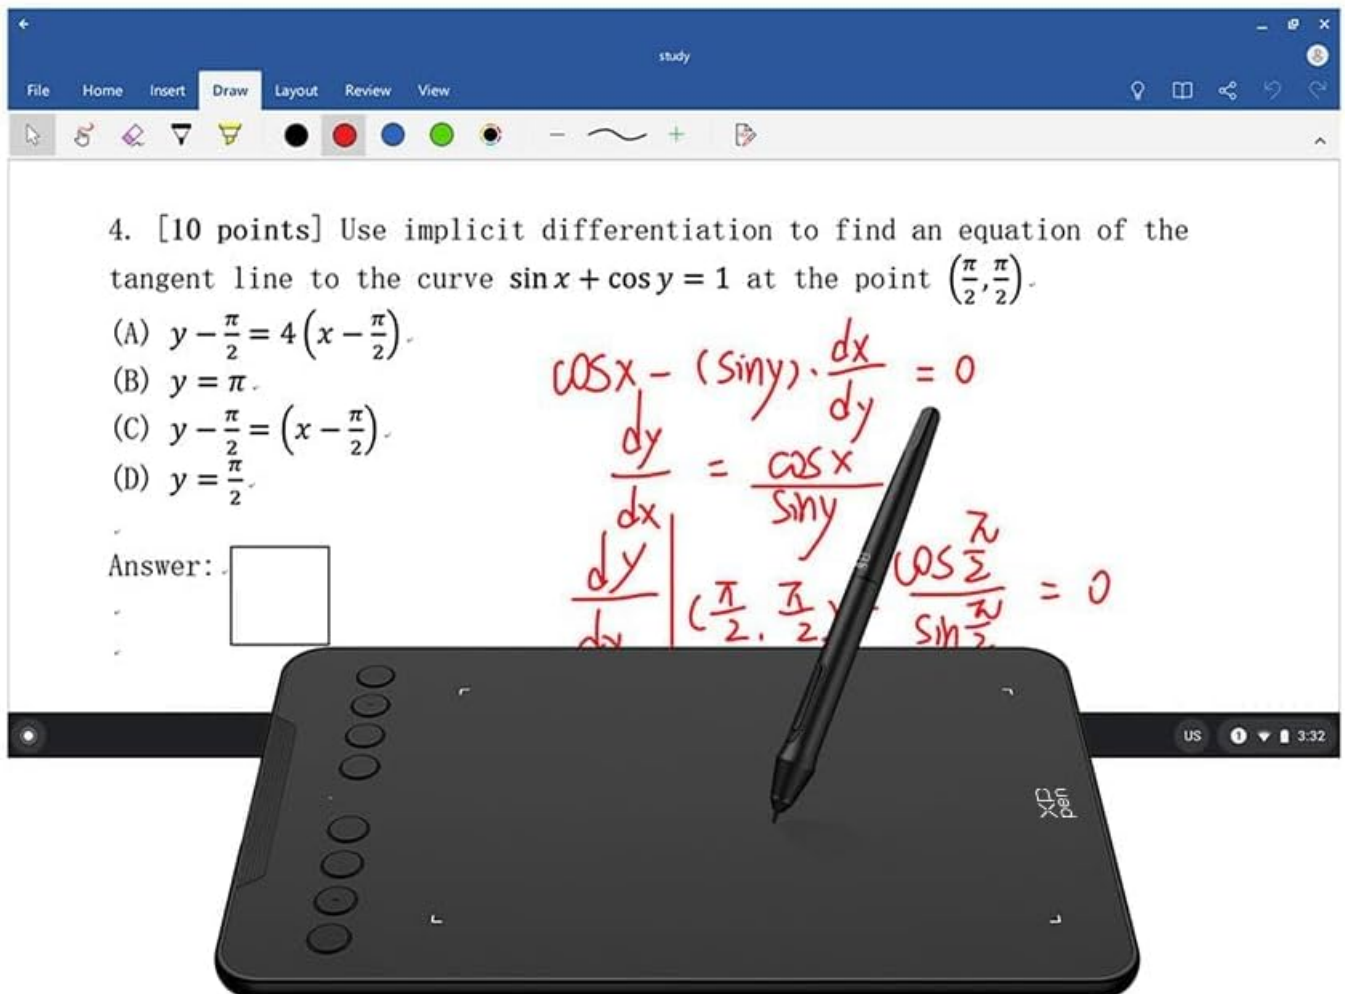 


Image 2.1: All components included in the XPPen Deco 01 V3 package.

3. PRODUCT OVERVIEW

3.1 Tablet Features

- **Active Area:** 10 x 6.25 inches (254 x 159 mm)
- **Thickness:** 8 mm
- **Shortcut Keys:** 8 customizable express keys for efficient workflow.
- **Indicator Lights:** Adjustable brightness lights at the ends of the drawing area for visibility in various lighting conditions.
- **Connectivity:** USB-C to USB-C, with included adapters for broader compatibility.

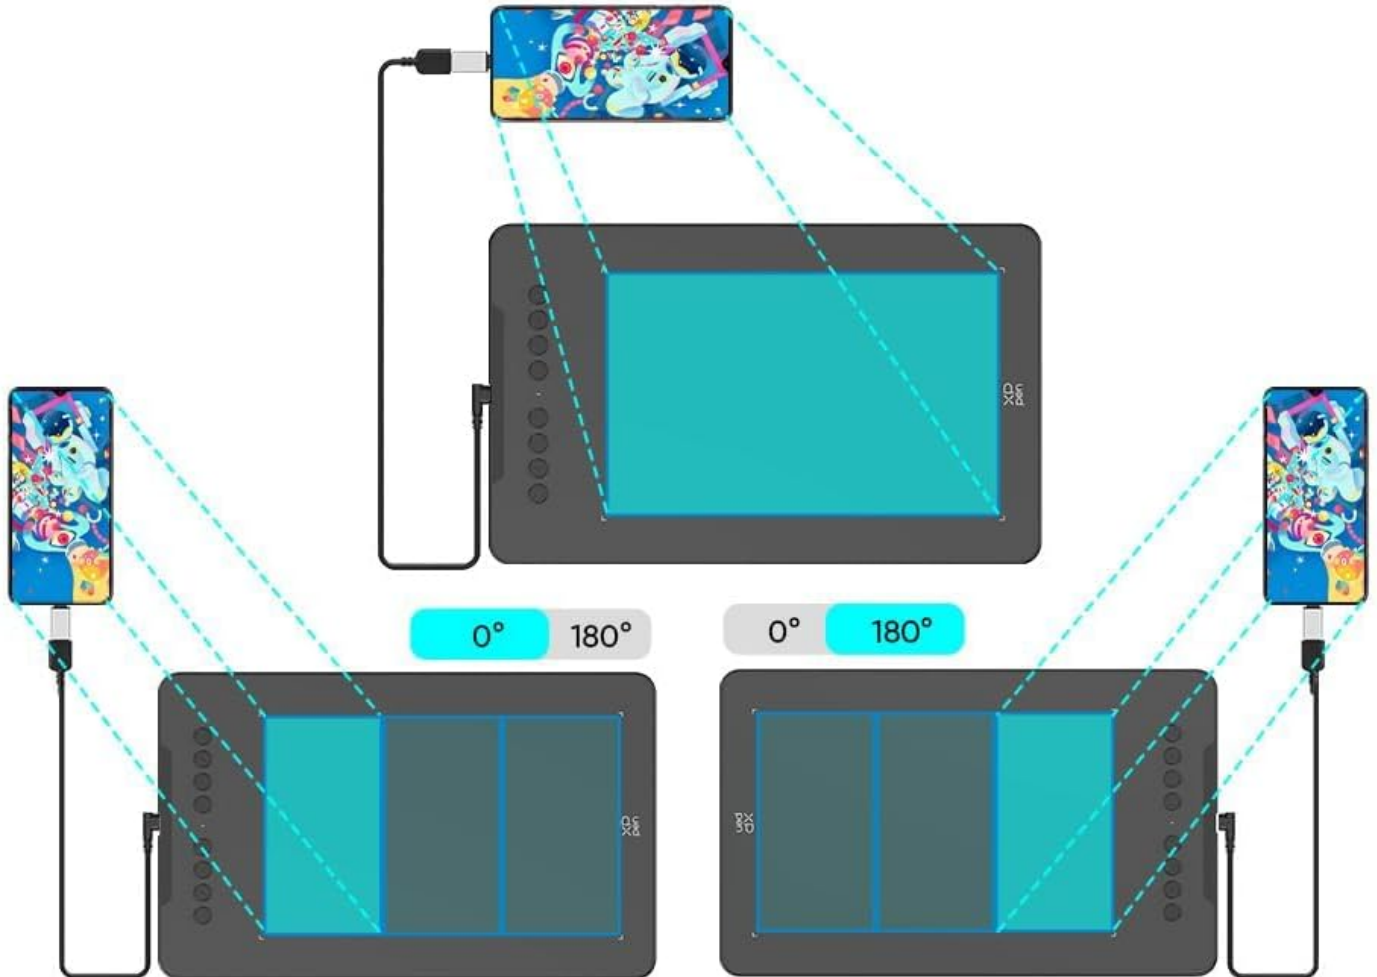 


Image 3.1: Physical dimensions of the Deco 01 V3 tablet.

Connection

New compatibility, new potential.

*Work in vertical screen model (Android Phone) only.



Make sure your Android device supports OTG function.


Image 3.2: The 8 customizable shortcut keys on the tablet.

3.2 Stylus Features

- **Pressure Sensitivity:** 16,384 levels for precise control over line thickness and opacity.
- **Tilt Support:** Up to 60 degrees for natural shading and brush effects.
- **Battery-Free:** Operates without a battery, eliminating the need for charging.

A Free and Articulate Stylus Pen

 The stylus has been upgraded to 16,384 levels of pressure sensitivity, supports up to 60 degrees of tilt brush effect.

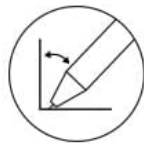

60°



16384 levels



Battery-free



Image 3.3: Key features of the XPPen Deco 01 V3 stylus.

4. SETUP

4.1 Driver Installation

1. Before connecting the tablet, visit the official XPPen website to download the latest driver for your operating system.
2. Close all drawing software and antivirus programs before installation.
3. Follow the on-screen instructions to complete the driver installation.
4. Restart your computer after installation if prompted.

4.2 Connecting the Tablet

- **For Computers (Windows/macOS/Linux/Chrome OS):** Connect the tablet to your computer using the provided USB-C to USB-A cable. If your computer only has USB-C ports, use the included USB to USB-C adapter.
- **For Android Devices:** Connect the tablet to your Android device (version 10.0 or later) using the USB-C to USB-C cable or the USB-C to USB-A cable with the appropriate adapter. Ensure your Android device supports OTG (On-The-Go) functionality.

 
Tailored for USB-C Connectivity

The Deco 1 V3 enables USB-C to USB-C connectivity (with the provided adapter), enabling you to link the tablet to different computing devices as required.

 


Image 4.1: The tablet supports USB-C to USB-C connectivity.

Accessories

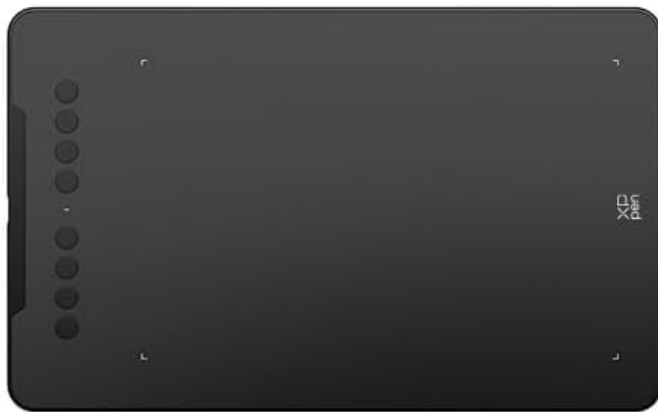

1 x Drawing Tablet

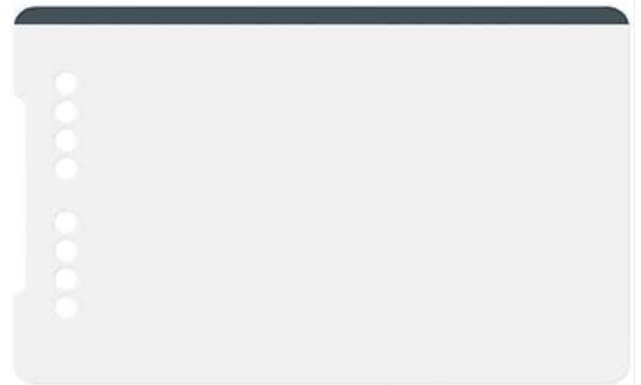

1 x Protective Film



1 x Stylus Stand



 
1 x Battery-Free Stylus



8 x Replacement Nibs



1 x Anti-fouling
Drawing Glove

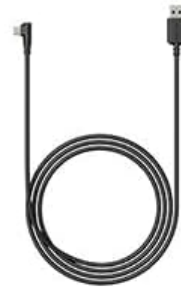

1 x USB Cable



1 x Quick Guide



1 x USB to
USB-C Adapter

Image 4.2: Connecting the tablet to an Android device. Note that it works in vertical screen mode only for Android phones.

5. OPERATION

5.1 Using the Stylus

The battery-free stylus functions like a traditional pen. Its 16,384 pressure levels allow for varying line thickness and opacity based on the pressure applied. The 60-degree tilt support enables natural shading effects, mimicking traditional art tools.

5.2 Customizing Shortcut Keys

The 8 express keys on the tablet can be customized through the XPPen driver software. This allows you to assign frequently used functions (e.g., undo, zoom, brush size) to these keys for a more efficient workflow.

5.3 Software and Operating System Compatibility

The Deco 01 V3 is compatible with a wide range of operating systems and creative software:

- **Operating Systems:** Windows 7 (or later), Android 10.0 (or later), macOS 10.13 (or later), Chrome OS 88 (or later), and Linux.
- **Compatible Software:** Photoshop, Illustrator, SAI, Painter, Clip Studio Paint, GIMP, Krita, MediBang Paint, FireAlpaca,

You can now use Chrome OS on your XP-PEN Deco 01 V3, allowing you to write, draw, and so much more on your Chromebook.



Image 5.1: The tablet supports various operating systems and creative applications.



Round Shortcut Keys with Blind Spot Design

5080LPI Provides Faster Recognition and High Precision

Image 5.2: The Deco 01 V3 can be used with Chromebooks.



Image 5.3: The tablet's portability allows for use with Android devices on the go.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the tablet surface. Avoid abrasive cleaners or solvents.
- **Nib Replacement:** The stylus nibs will wear down over time. Replace them using the included nib remover tool and spare nibs when necessary.
- **Storage:** Store the tablet and stylus in a dry, cool place away from direct sunlight and extreme temperatures.
- **Protective Film:** The included protective film helps guard the tablet surface from scratches. Ensure it is applied correctly.

7. TROUBLESHOOTING

- **No Pen Input:** Ensure the tablet is properly connected and the driver is installed correctly. Try restarting your computer.
- **Inaccurate Cursor:** Re-calibrate the working area in the XPPen driver settings.
- **Pressure Sensitivity Not Working:** Verify the driver is installed and updated. Check settings within your drawing software.

- **Tablet Disconnects Randomly:** Check the USB cable for damage and ensure it is securely connected. Try a different USB port or cable.
- **Android Device Not Recognizing Tablet:** Confirm your Android device supports OTG function. Ensure the XPPen Tools Android application is installed for proper mapping.

8. SPECIFICATIONS

Feature	Specification
Model Number	Deco 01 V2 (Note: Product title refers to V3, indicating an updated version of the Deco 01 series)
Product Dimensions	13.82 x 8.54 x 0.31 inches (351 x 217 x 8 mm)
Active Area	10 x 6.25 inches (254 x 159 mm)
Item Weight	2.2 pounds
Pressure Sensitivity	16,384 Levels
Tilt Support	60 degrees
Shortcut Keys	8 customizable
Connectivity Technology	USB (USB-C to USB-A, USB to USB-C Adapter included)
Operating System Compatibility	Windows 7 (or later), Android 10.0 (or later), macOS 10.13 (or later), Chrome OS 88 (or later), Linux

9. WARRANTY AND SUPPORT

XPPen provides a **1-Year Protection Plan** for all its products, including the Deco 01 V3 Drawing Tablet. Additionally, customers receive **Lifetime XPPen Service**.

For detailed terms and conditions regarding support, returns, and refunds, please refer to the official XPPen website or contact XPPen customer service directly. You can reach out via Amazon Message for any product-related inquiries.



Image 9.1: XP-Pen company logo.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question