Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > RCA /
- > RCA ELERCAJPS2180D Amplified Speaker User Manual

RCA ELERCAJPS2180D

RCA ELERCAJPS2180D Amplified Speaker User Manual

Model: ELERCAJPS2180D

1. Introduction

Thank you for purchasing the RCA ELERCAJPS2180D Amplified Speaker. This manual provides essential information for the safe and efficient operation of your speaker. Please read these instructions thoroughly before using the product and retain them for future reference.

2. SAFETY INSTRUCTIONS

- Power Source: Connect the speaker only to the specified power supply as indicated on the unit.
- Ventilation: Ensure adequate ventilation around the speaker. Do not block any ventilation openings.
- Water and Moisture: Do not expose the speaker to rain, moisture, or any liquids. Keep it away from water sources.
- **Heat:** Do not place the speaker near heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- Cleaning: Unplug the speaker from the power outlet before cleaning. Use a dry cloth for cleaning.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- Placement: Place the speaker on a stable, flat surface to prevent it from falling.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items listed below are present and in good condition:

- RCA ELERCAJPS2180D Amplified Speaker Unit
- Power Cable
- User Manual
- Remote Control (if included with your model)

4. PRODUCT OVERVIEW

The RCA ELERCAJPS2180D is a powerful amplified speaker featuring a 15-inch woofer, offering 180W RMS output. It supports multiple audio sources including Bluetooth, USB, SD card, and FM radio. The unit is designed for versatile use, compatible with smartphones, tablets, MP3 players, laptops, and more.



Figure 4.1: Front view of the RCA ELERCAJPS2180D Amplified Speaker. This image shows the speaker's front panel, including the 15-inch woofer with integrated LED lighting, the RCA brand logo, and the overall robust enclosure design. The speaker is mounted on a stand.



Figure 4.2: Rear control panel of the RCA ELERCAJPS2180D Amplified Speaker. This image displays the various input and output ports, control knobs for volume and equalization, a digital display, and the power input connection. Handles and wheels for portability are also visible.

5. SETUP

- 1. **Unpacking:** Carefully remove the speaker from its packaging.
- 2. **Placement:** Position the speaker on a stable, flat surface or a compatible speaker stand. Ensure there is sufficient space around the unit for proper ventilation.
- 3. **Power Connection:** Connect the provided power cable to the AC IN port on the rear panel of the speaker, then plug the other end into a standard electrical outlet.
- 4. **Power On:** Press the POWER switch on the rear panel to turn on the speaker. The display will illuminate.

6. OPERATING INSTRUCTIONS

6.1. Bluetooth Connection

- 1. Turn on the speaker.
- 2. Press the MODE button on the control panel or remote until "BLUETOOTH" or "BT" appears on the display. The speaker will enter pairing mode, indicated by a flashing Bluetooth icon or sound.
- 3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
- 4. Select "ELERCAJPS2180D" from the list of devices.
- 5. Once paired, the speaker will confirm the connection, and the Bluetooth indicator will stop flashing. You can now play audio from your device through the speaker.

6.2. USB/SD Playback

- 1. Insert a USB flash drive or SD card into the corresponding port on the control panel.
- 2. Press the MODE button until "USB" or "SD" appears on the display. The speaker will automatically

- begin playing audio files from the inserted media.
- 3. Use the PLAY/PAUSE, NEXT, and PREVIOUS buttons on the control panel or remote to manage playback.

6.3. FM Radio

- 1. Press the MODE button until "FM" appears on the display.
- 2. Press and hold the PLAY/PAUSE button to initiate an automatic scan for FM stations. The speaker will save all found stations.
- 3. Use the NEXT and PREVIOUS buttons to navigate through the saved FM stations.

6.4. Microphone and Instrument Input

- 1. Connect your microphone or instrument to the MIC IN or LINE IN ports on the rear panel.
- 2. Adjust the individual volume knobs for MIC VOL and MASTER VOL to achieve the desired sound level.
- 3. Use the EQ controls (Bass, Treble) to fine-tune the audio output.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Power Cord:** Regularly inspect the power cord for any damage. If damaged, have it replaced by qualified personnel.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power switch off; Outlet not working.	Ensure power cable is securely connected; Turn power switch ON; Test outlet with another device.
No sound	Volume too low; Incorrect input mode selected; Device not connected properly.	Increase master volume and source volume; Select correct input mode (Bluetooth, USB, FM); Reconnect audio source.
Bluetooth not pairing	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in Bluetooth pairing mode; Move device closer to speaker; Turn off other Bluetooth devices.
USB/SD not playing	Incorrect file format; Media not inserted correctly; Corrupted media.	Ensure audio files are in a supported format (e.g., MP3); Reinsert USB/SD card; Try a different USB/SD card.

9. SPECIFICATIONS

Model Name	ELERCAJPS2180D		
Speaker Type	Woofer		
Woofer Diameter	15 Inches		
Max Speaker Output Power	180 Watts		
Connectivity Technology	Bluetooth, RCA, USB		
Wireless Communication Technology	Bluetooth		
Compatible Devices	Smartphone, Tablet, MP3 Player, Laptop, Projector, Television, Game Console, Desktop Computer, Karaoke Player		
Power Source	Corded Electric		
Control Method	Application (likely refers to Bluetooth control via device)		
Product Dimensions	50 x 60 x 70 cm; 20.88 kg		
Average Battery Life	5 Hours		
Mounting Type	Floor Mount		

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official RCA website. For technical support, troubleshooting assistance, or service inquiries, please contact RCA customer support through their official channels.

You can visit the RCA brand store for more information: RCA Official Store

© 2023 RCA. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - ELERCAJPS2180D

