

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DEWENWILS](#) /
- › [DEWENWILS Outdoor Remote Control Outlet Instruction Manual](#)

## DEWENWILS HORS13B

# DEWENWILS Outdoor Remote Control Outlet

Model: HORS13B

## INTRODUCTION

---

Thank you for choosing the DEWENWILS Outdoor Remote Control Outlet. This device is designed to provide convenient wireless control over your outdoor and indoor electrical appliances, such as string lights, fountain pumps, and holiday decorations. Please read this manual thoroughly before installation and operation to ensure safe and optimal performance.

## SAFETY INFORMATION

---

- **Risk of Electric Shock:** Do not immerse the unit in water. Ensure the outlet covers are securely twisted to protect from rain, snow, and dust.
- **Outdoor Use:** This product is designed for outdoor use but should be installed vertically at least 2 feet above the ground to prevent water accumulation.
- **Power Rating:** Do not exceed the maximum load capacity of 125 Volts, 15 Amps, 1875 Watts (Resistive), 1000 Watts (Tungsten), or 1/2 HP. Overloading can cause overheating and fire.
- **Grounding:** Always plug the unit into a grounded outlet.
- **Children and Pets:** Keep the unit and remote out of reach of children and pets.
- **Damage:** Do not use if the cord or unit is damaged.

## PACKAGE CONTENTS

---

- 1 x DEWENWILS Outdoor Remote Control Outlet (Model HORS13B)
- 1 x Wireless Remote Control
- 1 x CR2032 Battery (pre-installed in remote)
- 1 x Instruction Manual (this document)

## PRODUCT OVERVIEW AND FEATURES

---



*This image displays the DEWENWILS Outdoor Remote Control Outlet, a black, weather-resistant power strip with three grounded outlets, connected to a short power cord with a flat plug. Alongside it is the compact black remote control with 'ON' and 'OFF' buttons and an attached key ring.*

# GREAT THREE AND ONE

Control 3 Devices with 1 Remote at the same time



*An outdoor scene at dusk showing the DEWENWILS remote control outlet mounted on a wall, powering string lights, a spotlight, and illuminated deer decorations. A hand holds the remote, demonstrating its ability to control three devices simultaneously.*



FLAT PLUG



SAFETY OUTLET COVER



INDICATOR



MOUNTING HOLE

*A composite image highlighting key features of the DEWENWILS outlet. It shows a flat plug design, yellow safety covers over the outlets, a red indicator light on the unit, and a mounting hole for secure installation.*

# WATERPROOF

\*Do not immerse in water

\* Please use the outlet vertically at least 2ft above the ground.

*This image illustrates the waterproof design of the DEWENWILS outlet, shown installed vertically on a brick wall during rain, with water droplets visible. The background shows outdoor string lights, emphasizing its suitability for outdoor use. A note advises against immersion and recommends installation at least 2 feet above ground.*

# 100 FT RANGE

Strong RF signal works through walls/  
doors/windows without interference



*A person inside a house is shown using the remote control to operate the outdoor outlet, which is visible outside. This demonstrates the 100-foot RF signal range, indicating that the remote works effectively through walls, doors, and windows without interference.*



**FOR BOTH OUTDOOR  
AND INDOOR SCENES**

SIMPLIFY YOUR LIFE



*A collage of images showcasing various indoor and outdoor applications for the DEWENWILS remote control outlet, including string lights, a fountain, a sprinkler, and holiday decorations. Icons representing different user groups (elderly, disabled, pregnant) suggest ease of use.*

6" SJTW 14/3C  
Heavy Gauge Cord



CR2032 Battery



Attached Key Ring

*An image detailing the physical dimensions of the DEWENWILS outlet (4.25" x 4.13") and highlighting its components: a 6-inch SJTW 14/3C heavy gauge cord, the CR2032 battery for the remote, and the attached key ring on the remote.*

## SETUP

1. **Unpack:** Carefully remove the outdoor remote control outlet and remote from its packaging.
2. **Battery Check:** The remote control comes with a pre-installed CR2032 battery. No initial battery installation is required.
3. **Placement:** Choose a suitable location for the outdoor outlet. For outdoor use, ensure it is installed vertically and at least 2 feet above the ground to protect it from standing water.
4. **Plug In:** Plug the outdoor remote control outlet into a grounded 125V electrical receptacle.
5. **Connect Appliances:** Plug your desired outdoor or indoor appliances into the three grounded outlets on the DEWENWILS unit. Ensure the total wattage does not exceed 1875W.
6. **Test:** Use the remote control to test the functionality of the connected appliances.

## OPERATING INSTRUCTIONS

---

The DEWENWILS Outdoor Remote Control Outlet is designed for simple operation using the included wireless remote.

- **Turning ON:** Press the 'ON' button on the remote control to activate the connected appliances. The indicator light on the outlet unit will illuminate.
- **Turning OFF:** Press the 'OFF' button on the remote control to deactivate the connected appliances. The indicator light on the outlet unit will turn off.
- **Range:** The remote control operates effectively up to 100 feet in open areas and can transmit signals through walls, doors, and windows due to its strong RF signal.

## MAINTENANCE

---

- **Cleaning:** Disconnect the unit from the power source before cleaning. Wipe the unit with a dry, soft cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, store the unit in a cool, dry place away from direct sunlight and moisture.
- **Battery Replacement:** The remote control uses one CR2032 battery. If the remote's range decreases or it stops responding, replace the battery. To replace, open the battery compartment on the back of the remote, remove the old battery, and insert a new CR2032 battery with the positive (+) side facing up.

## TROUBLESHOOTING

---

| Problem  | Possible Cause  | Solution   |
|--|---|--|
| Outlet not responding to remote.                         | Battery in remote is dead or low.                       | Replace the CR2032 battery in the remote control.  |
| Outlet not responding to remote.                         | Unit is unplugged or power outage.                      | Ensure the outlet unit is securely plugged into a live electrical receptacle. Check your home's circuit breaker.                         |
| Connected appliance does not turn on.                    | Appliance is not properly plugged into the outlet unit. | Ensure the appliance's plug is fully inserted into one of the three outlets on the DEWENWILS unit.                                       |
| Connected appliance does not turn on.                    | Appliance itself is faulty or turned off.               | Test the appliance by plugging it directly into a standard wall outlet. Ensure the appliance's own power switch is in the 'ON' position. |
| Remote range is reduced.                                 | Interference or obstacles.                              | Move closer to the outlet unit or remove large metallic objects that may be blocking the signal.   |
| Indicator light on outlet is off, but remote is pressed. | Unit is overloaded.                                     | Unplug some appliances. Ensure total wattage does not exceed 1875W.  |

## SPECIFICATIONS

---

| Specification | Value |
|---------------|-------|
|---------------|-------|

| Specification        | Value   |
|----------------------|---|
| Model Number         | HORS13B                                       |
| Voltage              | 125 Volts                                     |
| Amperage             | 15 Amps                                       |
| Wattage              | 1875 Watts (Resistive), 1000 Watts (Tungsten) |
| Horsepower           | 0.5 HP  |
| Number of Outlets    | 3 Grounded Outlets                            |
| Cord Length          | 6 inches (SJTW 14/3C Heavy Gauge)             |
| Remote Control Range | Up to 100 feet (in open areas)                |
| Remote Battery Type  | CR2032 (included)                             |
| Material             | PPO (Weatherproof Shell)                      |
| Certifications       | UL Listed, FCC Approved                       |
| Product Dimensions   | 7.01"D x 2.01"W x 5"H                         |
| Item Weight          | 0.282 ounces                                  |
| UPC                  | 611901251899                                  |


## WARRANTY AND SUPPORT

DEWENWILS products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact information provided with your purchase or visit the official DEWENWILS website. Please retain your proof of purchase for any warranty claims.

© 2023 DEWENWILS. All rights reserved.

### Related Documents - HORS13B

|   |  |
|---|--|
|  | <p><a href="#">Dewenwils Foot Switch Extension Cord Instruction Manual</a></p> <p>Instruction manual for the Dewenwils Foot Switch Extension Cord, including specifications, usage instructions, and warranty information.</p> |
|---|--|

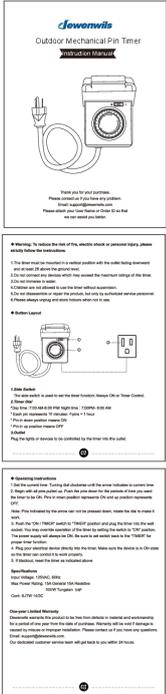

### [Dewenwils Outdoor Mechanical Pin Timer Instruction Manual](#)

User manual for the Dewenwils Outdoor Mechanical Pin Timer, providing setup instructions, operating guidelines, specifications, and warranty information for safe and effective use.



### [Dewenwils SMART Wi-Fi Plug Instruction Manual](#)

Instruction manual for the Dewenwils SMART Wi-Fi Plug, covering product layout, specifications, software installation, device registration, connection process, integration with Amazon Alexa and Google Home, and multi-functional timer settings.



### [Dewenwils Outdoor Yard Stake Outlet HOYS13A Instruction Manual](#)

Instruction manual for the Dewenwils Outdoor Yard Stake Outlet HOYS13A, including specifications, cautions, installation instructions, and warranty information.



### [Dewenwils Indoor Digital Timer Switch Instruction Manual](#)

Comprehensive instruction manual for the Dewenwils Indoor Digital Timer Switch, detailing installation, time setting, programming ON/OFF schedules, countdown features, random settings, DST, power backup, specifications, warnings, and warranty information.



### [DEWENWILS 006 Remote Control System Instruction Manual](#)

Instruction manual for the DEWENWILS 006 remote control system, detailing operating instructions, programming, troubleshooting, specifications, FCC/ISED compliance, and warranty information.