

GJS Gourmet EPC-S600

GJS Gourmet Replacement Silicone Gasket for SECURA EPC-S600 Electric Pressure Cooker

Instruction Manual

[Introduction](#)[Installation](#)[Usage](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the installation, usage, and maintenance of your GJS Gourmet Replacement Silicone Gasket, designed for the SECURA 6-IN-1 Electric Pressure Cooker Model EPC-S600. This gasket is a crucial component for maintaining the pressure and safety of your appliance.

2. INSTALLATION

Proper installation of the silicone gasket is essential for the safe and effective operation of your pressure cooker. Always ensure the pressure cooker is unplugged and completely cooled before attempting installation or removal.

2.1 Removing the Old Gasket

1. Open the pressure cooker lid.
2. Locate the existing silicone gasket, which is typically seated in a groove on the underside of the lid.
3. Gently pull the old gasket out of its groove. It may be slightly stretched or stiff.

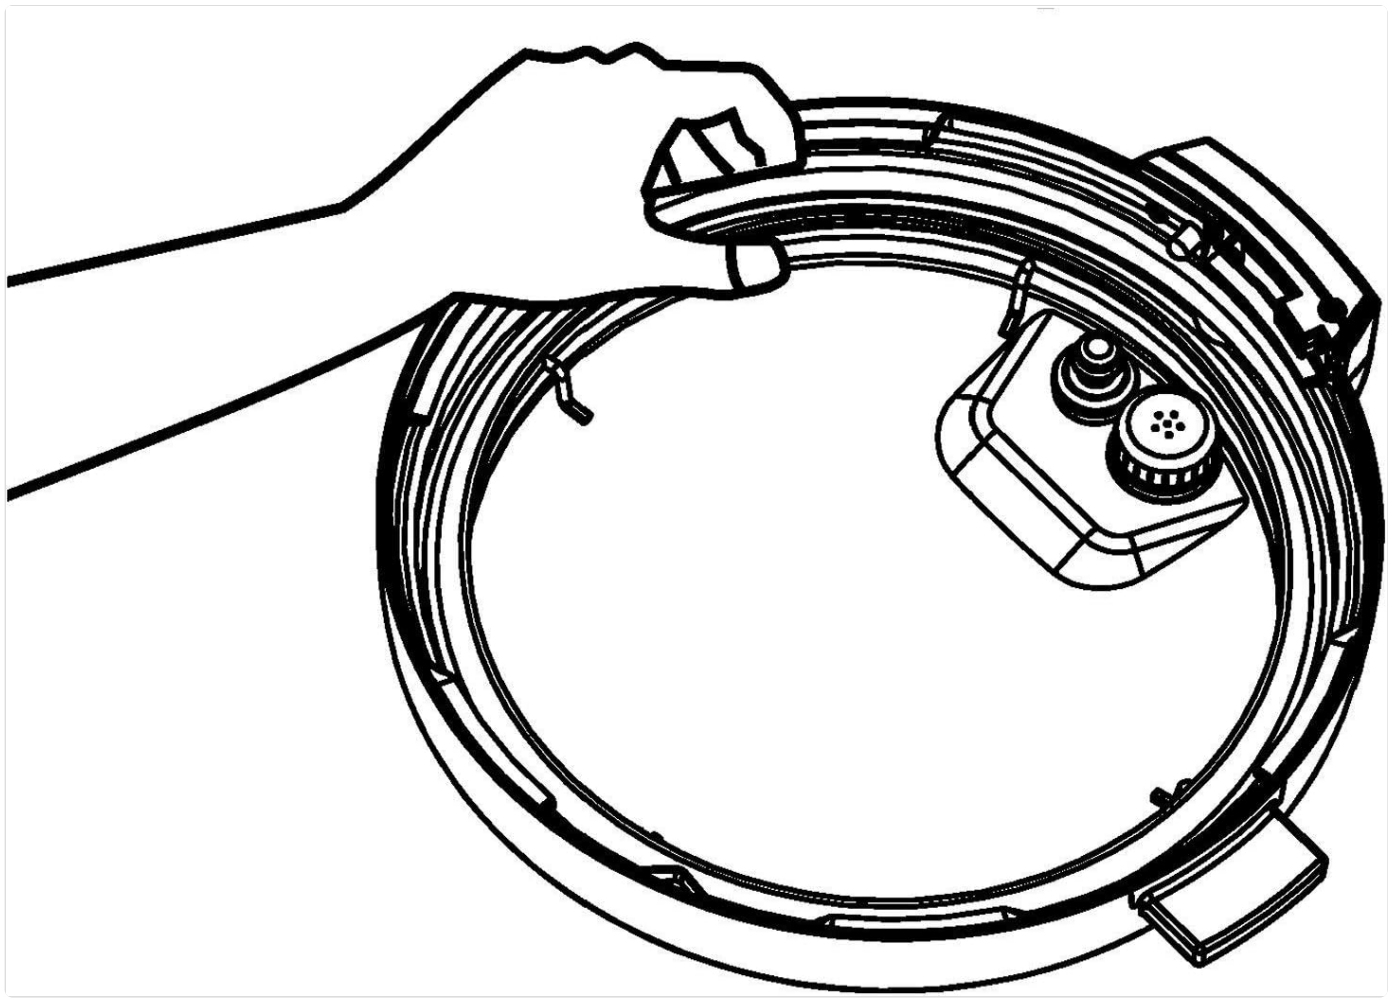


Figure 1: Illustration of a hand handling the pressure cooker lid, demonstrating the area where the gasket is installed or removed.

2.2 Installing the New Gasket

1. Ensure the new GJS Gourmet silicone gasket is clean and free of any debris.
2. Align the new gasket with the groove on the underside of the pressure cooker lid.
3. Carefully press the gasket into the groove, working your way around the entire circumference. Ensure it is seated evenly and securely without any twists or kinks.
4. Once installed, gently tug on various points of the gasket to confirm it is firmly in place.

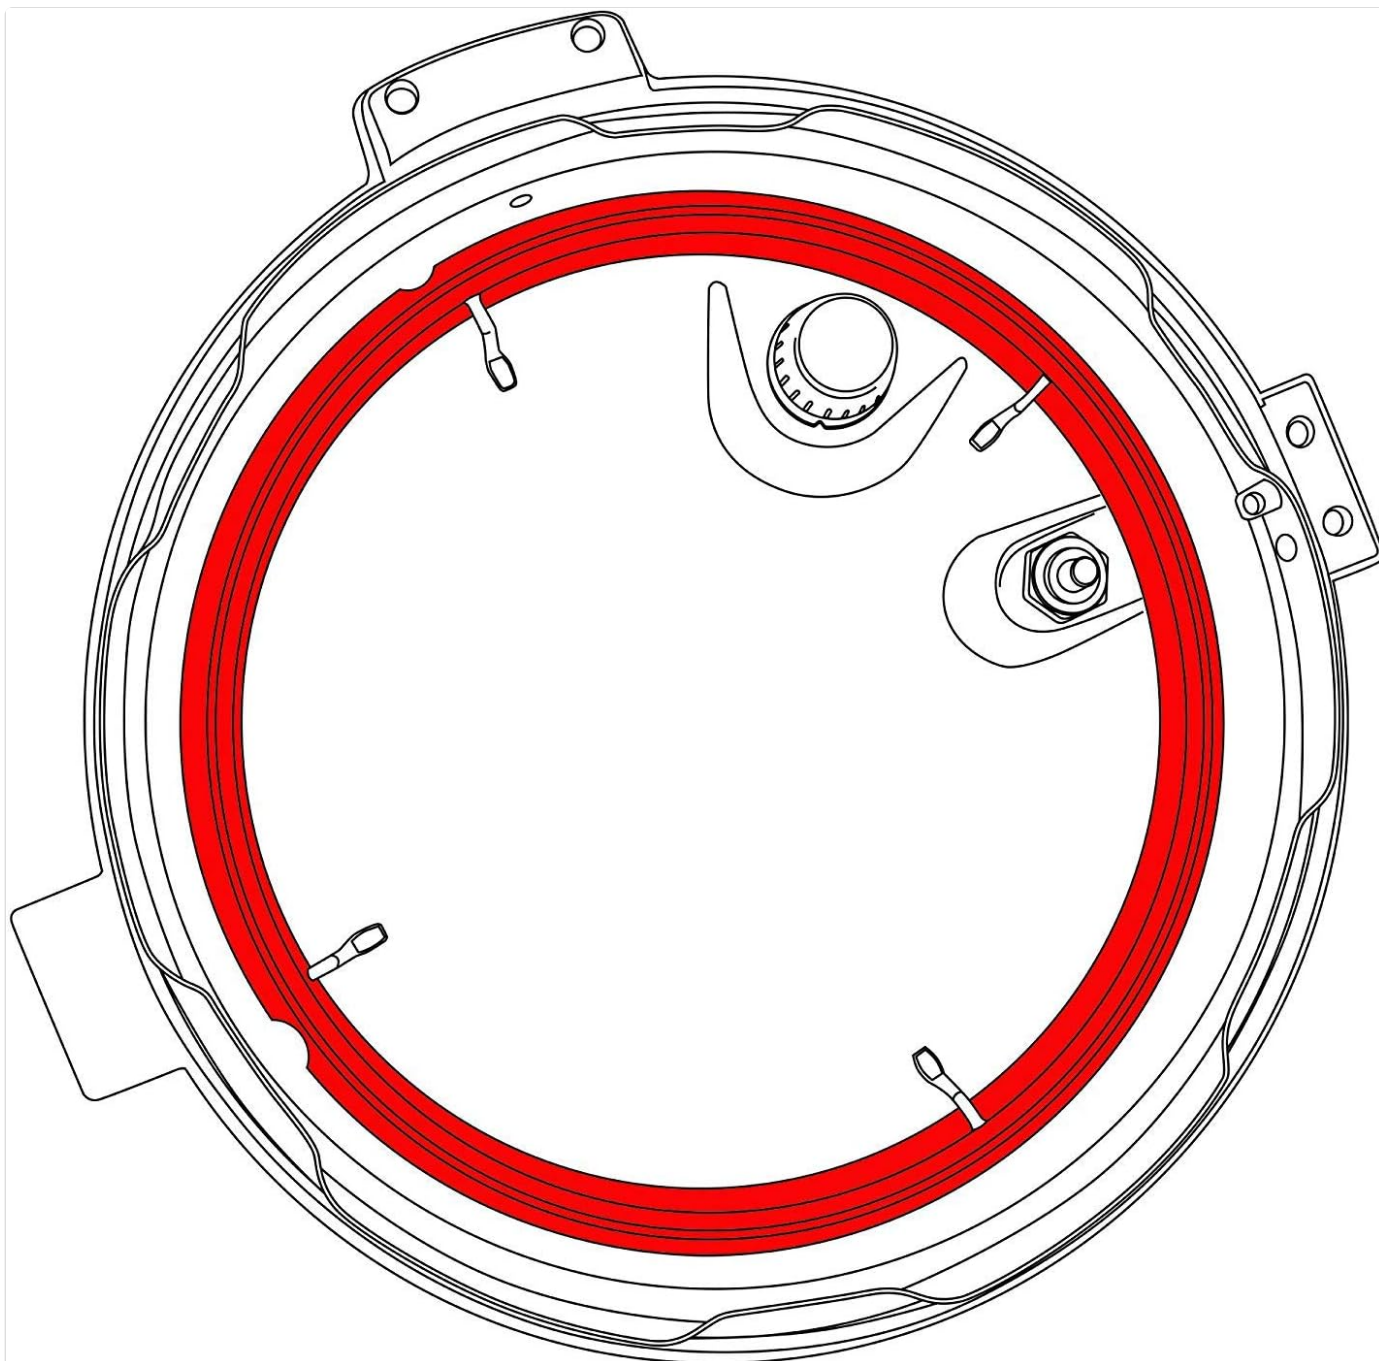


Figure 2: A view of the pressure cooker lid with the red silicone gasket correctly installed in its designated groove.

3. USAGE

After installing the new gasket, always perform a water test before cooking food. This ensures the gasket is properly sealed and the pressure cooker is functioning correctly.

1. Add 2-3 cups of water to the inner pot.
2. Close the lid securely, ensuring it is locked into place.
3. Set the steam release handle to the "Sealing" position.
4. Select a low-pressure cooking program (e.g., "Steam" for 5 minutes).
5. Observe for any steam leakage around the lid during the pressure building phase. A small amount of steam may escape from the float valve until it rises, which is normal.
6. If significant steam leaks from around the lid, depressurize, open the lid, and re-seat the gasket. Repeat the water test.

4. MAINTENANCE

Regular maintenance of your silicone gasket will prolong its lifespan and ensure safe operation of your pressure cooker.

- **Cleaning:** The gasket should be removed and washed after each use, especially after cooking strong-smelling foods. It is dishwasher safe.
- **Inspection:** Regularly inspect the gasket for signs of wear, cracks, hardening, or deformation. A worn gasket can lead to steam leakage and unsafe operation.
- **Replacement:** It is recommended to replace the silicone gasket every 18-24 months, or sooner if any signs of wear or deformation are noticed. Having a spare gasket is advisable.
- **Storage:** Store the gasket flat and away from direct sunlight or extreme temperatures when not in use for extended periods.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Steam leaking from around the lid	Gasket not seated correctly, gasket is dirty, gasket is worn/damaged.	Ensure gasket is properly seated. Clean the gasket and lid rim. Replace the gasket if worn or damaged.
Lid difficult to close or open	Gasket is twisted or improperly installed.	Remove and re-install the gasket, ensuring it is flat and untwisted in the groove.
Food odors persist in gasket	Gasket has absorbed food odors.	Wash thoroughly with soap and water, or run through the dishwasher. For stubborn odors, soak in white vinegar or baking soda solution. Consider having separate gaskets for savory and sweet dishes.

6. SPECIFICATIONS

- **Product Name:** GJS Gourmet Replacement Silicone Gasket
- **Compatibility:** SECURA 6-IN-1 Electric Pressure Cooker Model EPC-S600
- **Material:** Food-Grade Silicone
- **Color:** Clear
- **Capacity:** Designed for 6-Liter pressure cookers
- **Dishwasher Safe:** Yes
- **Item Weight:** Approximately 0.06 Kilograms
- **UPC:** 752830294813

7. WARRANTY & SUPPORT

7.1 Warranty Information

This GJS Gourmet replacement silicone gasket is designed for durability and performance. Specific warranty details for this accessory may vary. Please refer to the original purchase documentation or contact GJS Gourmet customer support for detailed warranty information.

7.2 Customer Support

For any questions, concerns, or assistance regarding your GJS Gourmet replacement gasket, please contact GJS Gourmet customer support. You can typically find contact information on the product packaging or the official GJS Gourmet website.

Note: This gasket is a replacement part for the SECURA 6-IN-1 Electric Pressure Cooker Model EPC-S600. For issues related to the pressure cooker itself, please refer to the SECURA product manual or contact SECURA customer support.

© 2023 GJS Gourmet. All rights reserved.
GJS Gourmet is a registered trademark.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question