

GLEM GX960CVIX

GLEM GX960CVIX 104L 5-Burner Mixed Cooker Instruction Manual

MODEL: GX960CVIX

1. Introduction

Thank you for choosing the GLEM GX960CVIX Mixed Cooker. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your appliance. Please read these instructions carefully before using the cooker and keep them for future reference.

2. Safety Information

Your safety and the safety of others are paramount. Please observe all safety warnings and precautions outlined in this manual.

- **Installation:** Installation must be carried out by a qualified technician in accordance with local regulations and standards for gas and electrical connections.
- **Gas Safety:** Ensure proper ventilation when using the gas hob. In case of a gas leak, immediately shut off the gas supply, open windows, and do not operate any electrical switches.
- **Electrical Safety:** Ensure the appliance is correctly earthed. Do not use adapters or extension cords. Disconnect from power before cleaning or maintenance.
- **Children:** Keep children away from the appliance during operation and cooling. The oven door and surfaces can become very hot.
- **Hot Surfaces:** Always use oven mitts when handling hot cookware or oven racks.
- **Cleaning:** Always allow the appliance to cool down before cleaning. Use non-abrasive cleaners.

3. Product Overview

The GLEM GX960CVIX is a mixed cooker featuring a gas hob with 5 burners and a 104-liter electric multifunction oven. It is designed for versatile cooking needs.



Figure 1: Front view of the GLEM GX960CVIX mixed cooker, showing the 5-burner gas hob, rotary control knobs, and electric oven with a glass door.

Key Components:

- **Gas Hob:** Equipped with 5 gas burners of varying sizes for different cooking requirements. Features electronic ignition and gas safety devices.
- **Control Panel:** Rotary knobs for controlling the gas burners and electric oven functions and temperature.
- **Electric Oven:** A spacious 104-liter capacity oven with multifunction fan-assisted cooking modes. Features catalytic cleaning.
- **Storage Compartment:** A drawer located at the bottom, suitable for storing oven accessories.

4. Setup and Installation

Proper installation is crucial for the safe and efficient operation of your cooker. It must be performed by a qualified professional.

4.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the cooker for any damage. If damage is found, do not install or operate the appliance and contact your retailer.
- The cooker weighs approximately 64 kg. Ensure adequate support and assistance when moving it.

4.2 Electrical Connection

- The appliance requires a 230 Volt electrical supply.

- Ensure the electrical installation meets local safety standards and is properly earthed.
- The connection should be made via an all-pole disconnection switch with a contact separation of at least 3mm.

4.3 Gas Connection

- The gas connection must comply with local gas safety regulations.
- Use only approved flexible or rigid gas pipes.
- After connection, check for gas leaks using a soapy water solution; never use an open flame.

5. Operating the Gas Hob

The gas hob features 5 burners with electronic ignition and integrated gas safety devices.

5.1 Ignition

- Place a suitable pan on the desired burner grate.
- Push and turn the corresponding control knob counter-clockwise to the maximum flame setting.
- Hold the knob in for a few seconds until the flame ignites and stabilizes. Release the knob. If the flame goes out, repeat the process.
- Adjust the flame size by turning the knob between the maximum and minimum settings.

5.2 Gas Safety

Each burner is equipped with a flame failure device that automatically cuts off the gas supply if the flame accidentally extinguishes.

6. Operating the Electric Oven

The 104-liter electric oven offers various cooking functions for diverse culinary needs.

6.1 Oven Functions

- **Multifunction Fan Assisted:** This mode uses a fan to circulate hot air evenly throughout the oven, ideal for baking multiple dishes simultaneously or for roasting.
- **Temperature Control:** Use the oven temperature control knob to select the desired cooking temperature.
- **Preheating:** For best results, preheat the oven to the desired temperature before placing food inside.

6.2 Energy Efficiency

The GLEM GX960CVIX oven has an energy efficiency rating of B, indicating its performance in energy consumption.

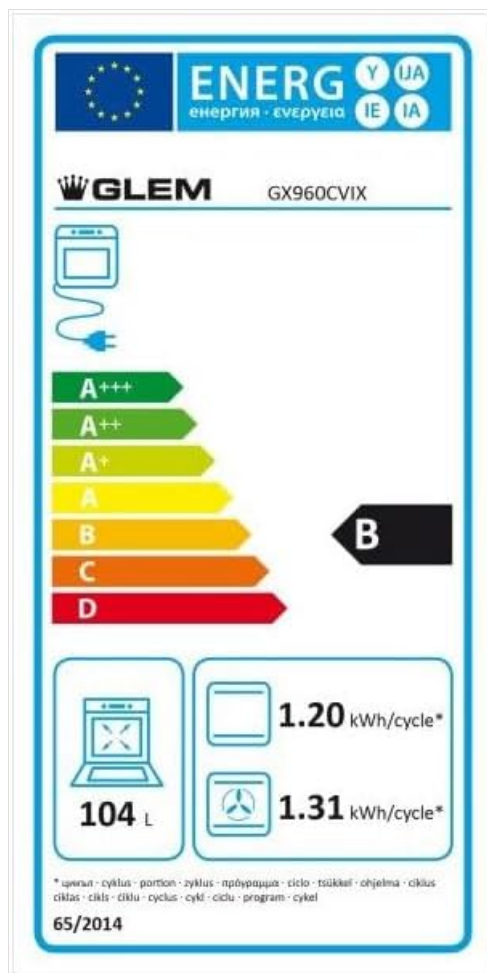


Figure 2: Energy label for the GLEM GX960CVIX, showing an energy efficiency class B and a capacity of 104 liters.

7. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooker.

7.1 Oven Cleaning (Catalytic)

- The oven features catalytic liners that absorb grease and food residues during normal cooking at high temperatures.
- For stubborn stains, run the oven at its maximum temperature for approximately 30 minutes after cooking.
- Wipe the cooled oven interior with a soft, damp cloth. Do not use abrasive cleaners or scourers on catalytic panels.

7.2 Hob and Exterior Cleaning

- Ensure the hob is cool before cleaning.
- Remove burner caps and pan supports (cast iron material). Wash them in warm soapy water, rinse, and dry thoroughly.
- Wipe the stainless steel hob surface and exterior with a soft cloth and a mild detergent. Avoid abrasive cleaners that can scratch the surface.
- Clean the glass oven door with a glass cleaner.

8. Troubleshooting

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Gas burner does not ignite	No gas supply; Ignition electrode dirty; Knob not held long enough	Check gas supply; Clean electrode; Hold knob for 3-5 seconds after ignition
Oven not heating	No electrical supply; Incorrect function/temperature selected	Check power connection/circuit breaker; Verify oven settings
Uneven cooking in oven	Oven not preheated; Overloaded oven; Incorrect rack position	Preheat oven fully; Avoid overcrowding; Use recommended rack positions

9. Specifications

Detailed technical specifications for the GLEM GX960CVIX cooker.

Feature	Specification
Brand	GLEM
Model Number	GX960CVIX (Manufacturer Reference: 8052745127810)
Oven Type	Electric
Oven Capacity	104 Liters
Oven Cleaning Mode	Catalytic
Oven Cooking Mode	Multifunction Fan Assisted
Energy Label	Class B
Hob Type	Gas (5 burners)
Hob Ignition	Electronic
Gas Safety	Flame failure device on hob
Controls	Rotary Knobs
Material (Hob Grates)	Cast Iron
Voltage	230 Volts
Weight	64 Kilograms

10. Warranty and Support

Your GLEM GX960CVIX cooker is covered by a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions, including the duration and coverage details.

For technical assistance, spare parts, or service requests, please contact your retailer or the authorized GLEM service center in your region. Ensure you have your model number (GX960CVIX) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question