

## KRUPS EA811840

# KRUPS Arabica EA8118 Full Automatic Espresso Machine User Manual

Model: EA811840

## 1. INTRODUCTION

---

The KRUPS Arabica EA8118 is a full automatic espresso machine designed to deliver high-quality coffee and espresso beverages. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.

Key features of your KRUPS Arabica EA8118 include:

- Elegant and compact design
- Icon display with dial knob control for intuitive operation
- Adjustable temperature and grind control for personalized beverages
- Quattro Force system optimizing grinding, tamping, percolation, and drainage
- Automatic maintenance programs for easy care

## 2. SAFETY INSTRUCTIONS

---

To prevent injury or damage to the appliance, always observe the following safety precautions:

- Ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged. Contact authorized service personnel for repair.
- Avoid contact with hot surfaces, especially the coffee outlet and steam nozzle, during and after operation.
- Only use cold, fresh water in the water tank.
- Never open the brewing unit during operation.
- Unplug the appliance before cleaning and when not in use.

### 3. SETUP AND FIRST USE

#### 3.1 Unpacking

Carefully remove all packaging materials and ensure all components are present. Place the machine on a stable, flat, heat-resistant surface, away from water sources and heat.

#### 3.2 Filling the Water Tank

1. Remove the water tank from the back of the machine.
2. Fill the tank with fresh, cold water up to the 'MAX' level indicator.
3. Replace the water tank securely.

#### 3.3 Filling the Bean Hopper

1. Open the lid of the bean hopper located on top of the machine.
2. Pour fresh coffee beans into the hopper. Do not use ground coffee, instant coffee, or caramelized beans.
3. Close the lid securely.



Image: Bean hopper with grinding control. Adjust the grinding fineness using the dial inside the hopper.

### 3.4 Initial Rinse Cycle

Before first use, or if the machine has been unused for a long period, perform an initial rinse cycle to clean the internal system.

1. Place a container under the coffee outlets.
2. Follow the on-screen prompts or refer to the specific instructions in your full manual for initiating the rinse cycle.
3. The machine will dispense hot water. Discard the water after the cycle is complete.

## 4. OPERATING THE MACHINE

---

### 4.1 Making Espresso or Coffee

1. Ensure the water tank is filled and the bean hopper contains coffee beans.
2. Place one or two cups under the coffee outlets.
3. Press the desired coffee button (e.g., Espresso, Coffee).
4. The machine will automatically grind the beans, brew, and dispense your coffee.

# ADVANCED TECHNOLOGY



Image: Coffee dispensing into a cup. The machine automatically brews your selected beverage.

## 4.2 Adjusting Coffee Settings

The KRUPS Arabica EA8118 allows customization of your coffee:

- **Grind Fineness:** Use the dial inside the bean hopper to adjust the grind. A finer grind results in stronger coffee, a coarser grind for milder coffee. Adjust only when the grinder is running.
- **Coffee Strength:** Use the dedicated button on the control panel to select your preferred coffee strength (e.g., mild, medium, strong).
- **Volume:** Press and hold the coffee button until the desired volume is reached, then release. The machine will save this setting for future use (Memo mode).

# EXTRA-LARGE LCD DISPLAY



Image: Control panel with LCD display. Use the buttons and display to customize your coffee settings.

## 4.3 Using the Steam Nozzle

The steam nozzle can be used to froth milk for cappuccinos and lattes, or to dispense hot water.

1. Place a container with milk (for frothing) or an empty cup (for hot water) under the steam nozzle.
2. Press the steam button on the control panel.
3. For frothing milk, immerse the nozzle just below the surface of the milk and move the container gently.
4. Press the steam button again to stop.
5. Always clean the steam nozzle immediately after use to prevent milk residue from drying.

# STEAM NOZZLE



Image: Steam nozzle in use. The nozzle can be used for frothing milk or dispensing hot water.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your KRUPS Arabica EA8118.

### 5.1 Daily Cleaning

- **Drip Tray:** Empty and rinse the drip tray daily or when the float indicator rises.
- **Coffee Grounds Container:** Empty the coffee grounds container when prompted by the machine or at least once a day. Rinse with warm water.
- **Steam Nozzle:** Wipe the steam nozzle with a damp cloth immediately after each use. Use the cleaning needle (if provided) to clear any blockages.

### 5.2 Descaling

The machine will indicate when descaling is required. Follow the on-screen instructions or refer to the full manual for the specific descaling procedure. Use only KRUPS descaling solution.

### 5.3 Cleaning Program

The KRUPS Arabica EA8118 features automatic cleaning programs. The machine will prompt you when a cleaning cycle is necessary. Follow the instructions on the display and use KRUPS cleaning tablets.

## 6. TROUBLESHOOTING

---

If you encounter issues with your machine, consult the following table for common problems and solutions.

Problem	Possible Cause	Solution
No coffee dispensed	Water tank empty; coffee beans empty; brewing unit blocked.	Fill water tank; fill bean hopper; perform a cleaning cycle.
Coffee is too weak	Grind too coarse; insufficient coffee strength selected.	Adjust grind to finer setting; select higher coffee strength.
Machine leaks water	Water tank not properly inserted; drip tray full.	Ensure water tank is correctly seated; empty and reinsert drip tray.
Error message on display	Specific internal issue.	Refer to the full instruction manual for specific error codes or contact customer support.

If the problem persists after attempting these solutions, please contact KRUPS customer support.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	KRUPS
Model	EA811840
Manufacturer	Groupe SEB
Voltage	230 Volts
Wattage	1450 watts
Capacity	1.7 Liters (water tank)
Material	Plastic
Product Dimensions	33 x 24.5 x 36.5 cm
Item Weight	7 Kilograms
Human Interface Input	Buttons
Special Features	Timer

# COMPACT DESIGN



Image: Product dimensions for the KRUPS Arabica EA8118.

## 8. WARRANTY AND SUPPORT

Your KRUPS Arabica EA8118 espresso machine is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or service, please contact KRUPS customer support. Contact information can typically be found on the KRUPS official website or in the documentation provided with your appliance.