

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [John Timberland](#) /

› [John Timberland Galt Outdoor Wall Light Fixture 33H87 Instruction Manual](#)

John Timberland 33H87

John Timberland Galt Outdoor Wall Light Fixture Instruction Manual

MODEL: 33H87

Brand: John Timberland

Introduction

This manual provides comprehensive instructions for the safe and efficient installation, operation, and maintenance of your John Timberland Galt Outdoor Wall Light Fixture. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The John Timberland Galt Outdoor Wall Light Fixture features an oil-rubbed bronze finish, seedy glass, and integrated motion sensor with dusk-to-dawn functionality. It is designed for outdoor use in wet locations, making it suitable for porches, patios, garages, and other exterior areas.

Safety Information

- Always disconnect power at the main circuit breaker before installation or servicing.
- Consult a qualified electrician if you are not familiar with electrical wiring.
- Ensure all wiring connections are secure and comply with local electrical codes.
- Do not exceed the maximum wattage specified for the bulb.
- This fixture is rated for wet locations. Ensure all seals and gaskets are properly seated during installation to prevent water intrusion.

Package Contents

Verify that all parts are present before beginning installation:

- Light Fixture Assembly (with integrated motion sensor)
- Mounting Hardware (screws, wire nuts, mounting plate)
- Seedy Glass Shade
- Instruction Manual

Note: Bulb is not included. This fixture requires one maximum 60-watt standard-medium base dimmable A19 bulb (incandescent or LED).

Setup and Installation

Professional installation is recommended for optimal safety and performance.

1. **Prepare for Installation:** Turn off power at the circuit breaker. Ensure the mounting surface is clean, dry, and structurally sound.
2. **Mounting Plate Installation:** Attach the mounting plate to the electrical junction box using the provided screws. Ensure the plate is level and secure.
3. **Wiring Connections:** Connect the fixture's wires to your household wiring according to local electrical codes. Typically, connect black to black (live), white to white (neutral), and green/bare copper to green/bare copper (ground). Secure connections with wire nuts.
4. **Fixture Mounting:** Carefully align the fixture with the mounting plate and secure it with the provided screws. Ensure no wires are pinched.
5. **Bulb Installation:** Insert one maximum 60-watt standard-medium base (E26) dimmable A19 bulb (incandescent or LED) into the socket. Do not overtighten.
6. **Glass Shade Installation:** Secure the seedy glass shade to the fixture according to the design. Ensure it is properly seated to maintain the wet location rating.

Extends 9"

7 1/2"



Figure 1: Product dimensions. The fixture is 11 1/4" high x 7 1/2" wide, extends 9" from the wall. The backplate is 4 1/2" high x 1 1/4" deep. The glass is 7" high x 3 3/4" deep.



Figure 2: The Galt fixture installed on an exterior wall, demonstrating its appearance and scale.

Operation

This fixture features both a motion sensor and dusk-to-dawn functionality for automated lighting control.

- **Dusk-to-Dawn Mode:** The light will automatically turn on at dusk at 25% brightness.
- **Motion Sensor Activation:** When motion is detected within its range, the light will increase to full brightness. The sensor has a 220-degree angle and a 10-40 foot range.
- **Manual Override:** A manual override feature allows the light to remain at full brightness for an 8-hour timeframe, bypassing the sensor control. Refer to the detailed wiring diagram for specific override instructions (typically involves a quick flip of the light switch).

Your browser does not support the video tag.

Video: Outdoor Security Lighting Guide. This video provides general information on outdoor security lighting, including motion sensors and dusk-to-dawn features, which are relevant to this product's operation.

Your browser does not support the video tag.

Video: Wet vs. Damp Outdoor Lighting Guide. This video explains the differences between wet and damp rated lighting, confirming the suitability of this fixture for direct exposure to weather.

Maintenance

- **Cleaning:** Clean the fixture regularly with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or glass.
- **Bulb Replacement:** Ensure power is off before replacing the bulb. Allow the bulb to cool completely. Unscrew the old bulb and replace it with a new maximum 60-watt standard-medium base (E26) dimmable A19 bulb.
- **Inspection:** Periodically inspect the fixture for any signs of wear, damage, or loose connections. Address any issues promptly.



Figure 3: Close-up view of the light fixture with an LED bulb installed, illustrating the bulb type and placement.

Troubleshooting

Problem	Possible Cause	Solution
Light does not turn on	No power; faulty bulb; incorrect sensor settings	Check circuit breaker; replace bulb; adjust sensor sensitivity/mode.
Light stays on continuously	Sensor detecting constant motion; ambient light too low; manual override active	Adjust sensor sensitivity/placement; check surrounding light conditions; deactivate manual override.
Light flickers	Loose wiring; incompatible bulb; power fluctuations	Check wiring connections; ensure bulb is dimmable and compatible; consult electrician.
Motion sensor range is too short/long	Sensor sensitivity setting; obstruction	Adjust sensor sensitivity dial; clear any obstructions in the sensor's field of view.

Specifications

- **Model Number:** 33H87
- **Dimensions:** 11 1/4" H x 7 1/2" W; Extends 9" from wall
- **Backplate:** 4 1/2" H x 1 1/4" D
- **Glass:** 7" H x 3 3/4" D, Seedy Glass
- **Weight:** 2 lbs
- **Bulb Requirement:** One maximum 60-watt standard-medium base (E26) dimmable A19 bulb (incandescent or LED). Bulb not included.
- **Finish:** Oil-Rubbed Bronze Steel Frame
- **Location Rating:** Wet Location Rated (full exposure to rain and weather)
- **Motion Sensor:** 220-degree angle, 10-40 foot range
- **Dusk-to-Dawn:** Turns on at dusk to 25% brightness, full bright on motion detection
- **Manual Override:** 8-hour timeframe
- **Voltage:** 120 Volts

Warranty

This John Timberland Galt Outdoor Wall Light Fixture is covered by a limited 1-year warranty. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty information provided at the time of purchase or contact customer support.

Support

For technical assistance, replacement parts, or further inquiries regarding your John Timberland Galt Outdoor Wall Light Fixture, please contact the retailer where the product was purchased or visit the official John Timberland website for customer service contact information.