



**Manuals.plus /**

› **Spectrum TV /**

› Spectrum RC 122 Universal Remote Control Instruction Manual

## **Spectrum TV RC 122**

# **Spectrum RC 122 Universal Remote Control Instruction Manual**

Model: RC 122

## **INTRODUCTION**

---

This manual provides instructions for the setup, operation, and maintenance of your Spectrum RC 122 Universal Remote Control. This remote is designed for compatibility with Time Warner, Brighthouse, and Charter cable boxes, offering a streamlined control experience for your entertainment system.

## **PRODUCT OVERVIEW**

---

The Spectrum RC 122 remote control features a comprehensive button layout for managing your cable box and television functions. Familiarize yourself with the remote's design and button placement for optimal use.



**Figure 1:** Front view of the Spectrum RC 122 Universal Remote Control. This image displays the remote's ergonomic design and the arrangement of its various control buttons, including power, channel, volume, navigation, and numeric keys, along with the Spectrum logo at the bottom.



**Figure 2:** Back view of the Spectrum RC 122 Universal Remote Control. This image shows the rear of the remote, including the battery compartment cover and printed instructions for programming the remote to a television.

# SETUP

---

## 1. Battery Installation

The remote requires two AA batteries for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

## 2. Initial Programming (for TV Control)

To program the remote to control your television, follow these steps:

1. Turn on your television.
2. Press and hold the **SETUP** button until the **TV** button lights up.
3. Press the **TV** button once.
4. Point the remote at the TV and press the **POWER** button repeatedly until the TV turns off.
5. Press the **SETUP** button once to save the code.
6. Verify functionality by turning the TV back on and testing volume control.

*Note: This remote is pre-programmed to operate Spectrum, Time Warner, Brighthouse, and Charter cable boxes without additional setup. The programming steps above are specifically for controlling your television.*

# OPERATING INSTRUCTIONS

---

## Basic Functions

- **POWER:** Turns the cable box and/or TV on or off.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the channel up or down.
- **MUTE:** Silences the audio output.
- **GUIDE:** Displays the program guide.
- **MENU:** Accesses the cable box's main menu.
- **Navigation (Arrow) Buttons & SELECT/OK:** Used to navigate menus and confirm selections.
- **Numeric Keypad (0-9):** Directly enters channel numbers.

## Advanced Functions

- **FAV:** Accesses favorite channels list.
- **LIST:** Displays recorded programs or a list of channels.
- **LIVE:** Returns to live television from a menu or recorded program.
- **REC:** Initiates recording of the current program (if DVR functionality is available).
- **REW/PLAY/FF/PAUSE:** Controls playback of recorded or on-demand content.
- **VIDEO SOURCE:** Switches video input sources on the TV (if programmed).
- **LIGHT:** Activates backlight for buttons (if available).

# MAINTENANCE

---

## Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.

## Battery Replacement

Replace batteries when the remote's response becomes sluggish or if the indicator light does not illuminate. Refer to the "Battery Installation" section under Setup for detailed instructions. Always use new AA batteries and dispose of old batteries responsibly.

## TROUBLESHOOTING

---

- **Remote not responding:**

- Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary.
- Ensure there are no obstructions between the remote and the cable box/TV.
- Point the remote directly at the device you are trying to control.

- **Buttons require hard pressing:**

- This can indicate low battery power. Replace the batteries.
- Dirt or debris under the buttons can also cause this. Try cleaning the remote.

- **Remote not controlling TV:**

- Ensure the remote has been programmed correctly for your TV. Repeat the "Initial Programming" steps.
- Verify that the TV is turned on and functioning independently.

- **Remote not controlling cable box:**

- The remote is typically pre-programmed for compatible cable boxes. If issues persist, ensure the cable box is powered on and check its own connections.

## SPECIFICATIONS

---

|  |   |
|--|---|
| <b>Model Number</b>                    | RC 122 (Item Model Number: 613825236358)        |
| <b>Brand</b>                           | Spectrum TV                                     |
| <b>Compatible Devices</b>              | Set Top Box (Time Warner, BrightHouse, Charter) |
| <b>Connectivity Technology</b>         | Infrared  |
| <b>Special Feature</b>                 | Universal                                       |
| <b>Max Number of Supported Devices</b> | 1 (Cable Box + TV control via programming)      |
| <b>Batteries Required</b>              | 2 AA batteries                                  |
| <b>Item Weight</b>                     | 6 ounces  |
| <b>Manufacturer</b>                    | Spectrum Time Warner                            |
| <b>Date First Available</b>            | January 20, 2018                                |

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage, technical support, or service inquiries, please refer to the documentation provided with your purchase or contact Spectrum customer service directly. Specific warranty terms may vary.

