

RCA W101SA23T1

RCA Cambio 10.1" Windows Tablet User Manual

Model: W101SA23T1 | Brand: RCA

1. INTRODUCTION

The RCA Cambio 10.1" Windows tablet with detachable keyboard is a versatile device designed for productivity and entertainment. Powered by an Intel 1.44 GHz quad-core processor and preloaded with Windows 10, it offers a user-friendly interface for various tasks.

This manual provides essential information on setting up, operating, maintaining, and troubleshooting your RCA Cambio tablet.



Figure 1.1: RCA Cambio 10.1" Windows Tablet with Detachable Keyboard.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- RCA Cambio 10.1" Windows Tablet
- Detachable Keyboard
- AC Adapter

3. INITIAL SETUP

3.1 Charging the Tablet

Before first use, fully charge your RCA Cambio tablet. Connect the included AC adapter to the tablet's charging port and plug it into a power outlet. The charging indicator light will illuminate.

3.2 Attaching the Keyboard

Align the tablet with the magnetic connector on the detachable keyboard. Gently push the tablet down until it securely clicks into place. The keyboard will automatically connect to the tablet.

3.3 Powering On and Initial Windows Setup

Press and hold the power button located on the side of the tablet until the screen turns on. Follow the on-screen prompts to complete the initial Windows 10 setup, including language selection, network connection, and user account creation.

4. OPERATING YOUR RCA CAMBIO

4.1 Using the Touchscreen

The 10.1-inch IPS display supports multi-touch gestures. Use taps, swipes, and pinches to navigate Windows 10 and interact with applications.

4.2 Keyboard and Trackpad

The detachable keyboard provides a traditional typing experience. The integrated trackpad allows for precise cursor control. Standard Windows keyboard shortcuts are supported.

4.3 Connectivity

- **Wi-Fi:** Connect to wireless networks using the built-in 802.11N Wi-Fi. Access network settings via the Windows Action Center or Settings app.
- **Bluetooth:** Pair with Bluetooth-enabled devices such as headphones, speakers, or mice. Enable Bluetooth in Windows Settings and search for devices.
- **USB Ports:** The tablet features 1 x micro USB 2.0 and 1 x USB 2.0 port for connecting peripherals like USB drives or external mice.
- **Micro HDMI:** Connect to an external display or TV using the micro HDMI port for presentations or extended viewing.

4.4 Cameras

The RCA Cambio is equipped with a front 2MP camera and a rear 2MP camera. Use the built-in Camera app in Windows 10 for photos, videos, and video conferencing.

4.5 Microsoft Office Mobile Apps

Create and edit documents, spreadsheets, and presentations using pre-installed Microsoft Office Mobile apps such as Word Mobile, PowerPoint Mobile, and Excel Mobile. OneNote is also available for note-taking.

5. MAINTENANCE AND CARE

5.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and exterior of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid harsh chemicals or abrasive materials.

5.2 Battery Care

To maximize battery life, avoid exposing the tablet to extreme temperatures. It is recommended to fully discharge and recharge the battery periodically. Unplug the AC adapter once the battery is fully charged to prevent overcharging.

5.3 Software Updates

Regularly check for and install Windows updates to ensure your system has the latest security patches and performance improvements. Go to *Settings > Update & Security > Windows Update*.

6. TROUBLESHOOTING

Problem	Possible Solution
Tablet does not power on.	Ensure the tablet is charged. Connect the AC adapter and wait a few minutes before attempting to power on again. If unresponsive, perform a hard reset by holding the power button for 10-15 seconds.
Keyboard is not responding.	Ensure the keyboard is securely attached to the tablet's magnetic connector. Detach and reattach the keyboard. Restart the tablet if the issue persists.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in Windows settings. Restart your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance.	Close unnecessary applications. Check for and install Windows updates. Run a disk cleanup to free up storage space. Consider reducing the number of startup programs.

7. SPECIFICATIONS

Feature	Detail
Operating System	Windows 10 Home
Processor	Intel Atom Z8350 Quad-Core 1.44 GHz (up to 1.92GHz)
Memory (RAM)	2 GB
Storage	32GB eMMC Flash Memory (MicroSD Card Slot supports up to 128GB)
Display	10.1-inch Touchscreen, 1280x800-pixel resolution, IPS display
Graphics	Intel HD Integrated Graphics
Cameras	Front 2MP, Rear 2MP
Wi-Fi	802.11N
Bluetooth	Bluetooth 4.0
USB Ports	1 x micro USB 2.0, 1 x USB 2.0
Video Ports	1 x micro HDMI
Audio	Combo Mic and Headphones Audio Jack, Mono Speaker
Keyboard	Detachable Keyboard Included
Battery Life	Up to 6 hours (depends on usage)

Feature	Detail
Dimensions (LxWxH)	10.20 x 6.50 x 1.15 inches
Weight	2.1 lb

8. WARRANTY AND SUPPORT

For detailed warranty information and technical support, please refer to the warranty card included with your product or visit the official RCA support website. Keep your proof of purchase for warranty claims.

Online Support: www.rca.com/support

© 2024 RCA. All rights reserved.

Documents - RCA – W101SA23T1

no relevant documents