Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Hunter /
- > Hunter Fan 42-inch Ceiling Fan Model CC5C22C19 Instruction Manual

Hunter CC5C22C19

Hunter Fan 42-inch Ceiling Fan Model CC5C22C19 Instruction Manual

For Models: CC5C22C19 (Brushed Nickel)

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Hunter 42-inch Ceiling Fan with Bowl Light Kit, Model CC5C22C19. This fan is designed for small rooms and features a traditional style with a brushed nickel finish and reversible blades. It includes a three-speed WhisperWind motor for quiet and powerful performance, along with dimmable, energy-efficient LED bulbs.

SAFETY INFORMATION

Read all instructions carefully before beginning installation. Failure to follow these instructions could result in electric shock, fire, or personal injury.

- Ensure the power is turned off at the circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- The mounting structure must be capable of supporting the fan's weight (approximately 25 pounds).
- Do not operate the fan with damaged blades or housing.
- Keep hands, tools, and other objects away from the fan blades when in operation.
- This fan is for indoor use only.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

- · Motor Housing Assembly
- 5 Fan Blades (Reversible: Brazilian Cherry / Harvest Mahogany)
- 5 Blade Brackets

- · Light Kit Assembly with Painted Cased White Glass Bowl
- 2 x 6.5W Dimmable LED Bulbs
- · Canopy and Mounting Bracket
- 3-inch Downrod
- · 2-inch Downrod
- Hardware Pack (screws, washers, wire nuts)
- Pull Chains



Figure 1: Overview of the Hunter 42-inch Ceiling Fan with Light Kit.

SETUP AND INSTALLATION

1. Mounting the Fan

The Hunter fan features an Installer's Choice three-position mounting system, allowing for standard, low, or angled mounting. Choose the appropriate downrod (3-inch or 2-inch) based on your ceiling height and desired blade clearance.

- 1. Turn off power at the circuit breaker.
- 2. Secure the mounting bracket to the ceiling junction box. Ensure the junction box is securely fastened to the building structure and can support the fan's weight.
- 3. Assemble the downrod to the motor housing, feeding the electrical wires through the downrod.
- 4. Carefully lift the fan assembly and hang it from the mounting bracket using the provided hook or ball-and-socket system.



Figure 2: Detail of the fan's motor housing and canopy connection point.

2. Wiring Connections

Follow all local and national electrical codes. If you are unsure about wiring, consult a qualified electrician.

- 1. Connect the fan's electrical wires to the household wiring using the provided wire nuts. Typically, this involves connecting the black fan wire to the black household wire (hot), the white fan wire to the white household wire (neutral), and the green/bare copper fan wire to the green/bare copper household wire (ground).
- 2. Carefully tuck all wires into the junction box.

3. Attaching Blades and Light Kit

- 1. Attach each fan blade to a blade bracket using the provided screws. Ensure they are securely fastened.
- 2. Attach the blade brackets to the motor housing.
- 3. Connect the light kit wiring to the fan motor wiring as per the instructions.
- 4. Install the two 6.5W LED bulbs into the light kit sockets.
- 5. Secure the painted cased white glass bowl to the light kit assembly.



Figure 3: Close-up view of a blade arm and the light kit attachment point.



Figure 4: Detail of the painted cased white glass bowl.

OPERATING INSTRUCTIONS

Your Hunter ceiling fan is operated using two pull chains.

- Fan Speed Control: One pull chain controls the fan speed. Pull the chain repeatedly to cycle through high, medium, low, and off settings.
- Light Control: The other pull chain controls the light. Pull the chain to turn the light on or off. The included LED bulbs are dimmable, which may require a compatible wall dimmer switch (not included) for dimming functionality, or the pull chain may offer multiple brightness levels depending on the specific light kit design.
- Reversible Motor: A slide switch on the motor housing allows you to reverse the direction of the fan blades. In warm weather, operate the fan counter-clockwise to create a downdraft for a cooling effect. In cool weather, operate the fan clockwise at a low speed to create an updraft, circulating warm air near the ceiling without creating a direct draft.

MAINTENANCE

- Cleaning: Clean the fan's exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- Blade Care: Periodically check blade screws for tightness. Loose blades can cause wobbling and noise.
- **Light Bulbs:** Replace LED bulbs only with bulbs of the same type and wattage (6.5W dimmable LED). Ensure power is off before replacing bulbs.
- Annual Check: Annually inspect all connections and mounting hardware to ensure they remain secure.

TROUBLESHOOTING

If you experience issues with your fan, consult the following table before contacting support.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Motor malfunction.	Check circuit breaker and wall switch. Verify all wire connections are secure. If problem persists, consult an electrician.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws. Ensure blades are balanced (balancing kit may be needed). Verify mounting bracket is securely installed.
Light does not work	Loose bulb; Faulty bulb; Loose wire connection to light kit.	Ensure bulbs are screwed in tightly. Replace bulbs if necessary. Check light kit wiring connections.
Noisy operation	Loose screws; Motor hum; Blades hitting an obstruction.	Check and tighten all screws. Ensure no wires are rubbing against the motor housing. Verify blades are not hitting anything.

SPECIFICATIONS

Feature	Detail
Model Number	CC5C22C19
Brand	Hunter
Product Dimensions	42"D x 42"W x 17.77"H
Item Weight	25 pounds
Color/Finish	Brushed Nickel
Number of Blades	5
Blade Length	16 Inches
Air Flow Capacity	2972 Cubic Feet Per Minute
Speed Settings	3
Wattage	62.5 watts

Feature	Detail
Voltage	120 Volts
Switch Type	Pull Chain
Light Kit	Integrated, includes 2 x 6.5W Dimmable LED bulbs
Mounting System	Installer's Choice (Standard, Low, Angled)
Indoor/Outdoor Usage	Indoor Use Only
UPC	840304132065

WARRANTY AND SUPPORT

This Hunter Fan product comes with a 90-day limited warranty. For warranty claims or technical support, please contact Hunter Fan Company customer service. Keep your proof of purchase for warranty validation. For further assistance, visit the official Hunter Fan website or contact their customer support directly.

© 2025 Hunter Fan Company. All rights reserved.

Related Documents - CC5C22C19



Hunter Fonthill Ceiling Fan Installation Manual & Guide

Comprehensive installation, operation, and troubleshooting guide for the Hunter Fonthill ceiling fan (Model 52901, 52903, 52904). Includes safety warnings, parts list, and warranty information.



Hunter Betsy Ceiling Fan Installation Manual

Comprehensive installation manual for the Hunter Betsy ceiling fan (Models 52764, 52765), providing step-by-step instructions, safety warnings, troubleshooting tips, and warranty information.



Hunter Bristlecone Ceiling Fan Installation Manual (Models 51805, 53247)

Comprehensive installation manual for the Hunter Bristlecone ceiling fan, covering models 51805 (Noble Bronze) and 53247 (Brushed Nickel). This guide provides step-by-step instructions for assembly, wiring, and mounting, along with safety warnings, troubleshooting tips, and warranty information.



Hunter Bennett Collection Ceiling Fan Installation Manual

Comprehensive installation guide for the Hunter Bennett Collection ceiling fan (Models 50420, 50421), covering setup, wiring, troubleshooting, and warranty information.



Hunter Kerrison 19542/19543 8-Light Foyer Lantern Pendant Installation Guide

Comprehensive installation guide for the Hunter Kerrison 8-Light Foyer Lantern Pendant (Models 19542, 19543), covering preparation, assembly, wiring, finishing, and cleaning. Includes safety warnings and required tools.



Hunter Fonthill Ceiling Fan Installation Manual

Installation and operation guide for the Hunter Fonthill ceiling fan (models 52901, 52903, 52904). Includes safety warnings, parts list, step-by-step instructions, troubleshooting, and warranty information.