

INSIGNIA B077SNBPFH

Insignia TV Stand Instruction Manual

Model: B077SNBPFH

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 42.5 kilograms (93.7 lbs) for the entire stand. Distribute weight evenly across shelves.
- **Pinch Points:** Use caution when adjusting the shelves to avoid pinch points.
- **Stability:** Always ensure the TV stand is stable and level before placing a television or any components on it.
- **Placement:** Place the stand on a flat, stable surface. Avoid placing it in high-traffic areas where it could be easily bumped.
- **Children:** Keep children away from the stand during assembly. Do not allow children to climb on or play with the stand.

PRODUCT OVERVIEW

The Insignia TV Stand (Model B077SNBPFH) is designed to support most televisions up to 48 inches. It features a durable alloy steel frame and safety-tempered glass shelves, providing a secure and organized space for your entertainment components. The open frame design facilitates easy cable management.



Figure 1: Insignia TV Stand with a television and various media devices on its shelves, showcasing its design and capacity.

SETUP AND ASSEMBLY

This Insignia TV stand is designed for freestanding installation and **does not require assembly**. It comes pre-assembled for your convenience.

Unpacking and Inspection

1. Carefully remove the TV stand from its packaging.
2. Inspect all components for any signs of damage. If any parts are damaged or missing, do not proceed with setup. Contact customer support immediately.
3. Ensure all packing materials are removed before placement.

Placement

1. Choose a flat, level, and stable surface for the TV stand.
2. Ensure there is adequate space around the stand for ventilation of electronic devices and easy access to cables.
3. Verify that the chosen location can support the combined weight of the stand, your television, and all components.



Figure 2: Detail of the top shelf and frame connection, highlighting the sturdy construction.

OPERATING INSTRUCTIONS

Placing Your Television

1. Carefully lift your television and center it on the top surface of the TV stand.
2. Ensure the television's base is fully supported by the stand's top surface.
3. Do not place a television larger than 48 inches or exceeding the stand's weight capacity (42.5 kg / 93.7 lbs).

Arranging Components

The stand features two safety-tempered glass shelves for organizing your media devices, such as DVD players, gaming consoles, soundbars, and cable boxes.

- Distribute the weight of your components evenly across the shelves.
- Ensure adequate airflow around electronic devices to prevent overheating.

Cable Management

The open frame design and integrated cable management holes (as shown in Figure 3) allow for neat routing of power cords and signal cables.

1. Route cables through the designated holes at the back of the stand.
2. Use cable ties or wraps (not included) to bundle cables together for a tidy appearance and to prevent tangling.
3. Ensure cables are not pinched or strained.



Figure 3: View of the stand's shelves and the circular cutouts designed for cable routing.

MAINTENANCE

Cleaning

- **Glass Shelves:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray cleaner onto the cloth, not directly onto the glass, to avoid streaks and potential damage to other materials.
- **Frame and Wood Surfaces:** Wipe with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Dry immediately with a clean cloth.
- Avoid using harsh chemicals, abrasive cleaners, or scouring pads, as these can damage the finish.

Regular Checks

- Periodically check the stand for stability. Ensure it remains level and all connections are secure.
- Inspect glass shelves for any chips or cracks. If damage is found, discontinue use and contact customer support.

TROUBLESHOOTING

This section addresses common issues you might encounter with your TV stand.

Stand is Unstable/Wobbly

- **Check Surface:** Ensure the stand is placed on a completely flat and level surface. Uneven flooring can cause instability.
- **Weight Distribution:** Verify that the weight of your television and components is evenly distributed. Overloading one side can affect stability.
- **Inspect Frame:** Check the alloy steel frame for any signs of bending or damage.

Glass Shelf Damage

- If a glass shelf is chipped, cracked, or broken, discontinue use immediately to prevent injury.
- Contact Insignia customer support for replacement options. Do not attempt to repair damaged glass.

yourself.

Cables are Tangled/Messy

- Utilize the cable management holes at the back of the stand.
- Bundle cables together using cable ties or Velcro straps to keep them organized and out of sight.

SPECIFICATIONS

Brand	INSIGNIA
Model Number	B077SNBPFH
Color	Espresso/Gray
Recommended TV Size	Up to 48 inches
Weight Limit	42.5 Kilograms (93.7 lbs)
Material	Alloy Steel (Frame), Tempered Glass (Shelves)
Number of Shelves	2
Installation Type	Freestanding
Assembly Required	No
UPC	600603212314

WARRANTY INFORMATION

Specific warranty details for the Insignia TV Stand (Model B077SNBPFH) are typically provided with the product packaging or can be found on the official Insignia website. Please refer to these resources for the most accurate and up-to-date warranty terms and conditions.

Generally, warranties cover manufacturing defects under normal use. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with your Insignia TV stand, or need to report a damaged part, please contact Insignia customer support.

- **Online Support:** Visit the official Insignia website for FAQs, support documents, and contact options.
- **Retailer Support:** For purchase-related inquiries, you may also contact the retailer from whom you purchased the product.

