

[Manuals.plus](#) /

› [LKPower](#) /

› LKPower AC/DC Adapter for Black & Decker SZ360OR/SZ360 Cordless Rechargeable Scissors - User Manual

LKPower 171103009

LKPower AC/DC Adapter User Manual

For Black & Decker SZ360OR/SZ360 6V Cordless Rechargeable Scissors

INTRODUCTION

Thank you for choosing the LKPower AC/DC Adapter. This adapter is designed to provide reliable power for your Black & Decker SZ360OR and SZ360 6V Cordless Rechargeable Scissors. Please read this manual carefully before use to ensure proper operation and to prevent damage to the product or your device. Keep this manual for future reference.

SAFETY INFORMATION

- Ensure the adapter's voltage and current specifications match your device's requirements before connecting.
- Do not expose the adapter to water, rain, or excessive moisture.
- Avoid using the adapter in extremely hot or cold environments.
- Do not disassemble, modify, or attempt to repair the adapter. Refer servicing to qualified personnel.
- Keep the adapter away from children.
- Unplug the adapter from the power outlet when not in use for extended periods.
- This adapter features over-voltage and over-heat protection to safeguard your device.

PRODUCT OVERVIEW

The LKPower AC/DC Adapter converts standard AC wall power into the DC power required by your compatible device. It is a replacement power supply designed for specific Black & Decker 6V cordless rechargeable scissors models.



Image 1: The LKPower AC/DC Adapter, showing the main unit and coiled output cable with barrel connector.



Image 2: Front and side views of the adapter, highlighting its compact design and electrical prongs.

What's Included:

- 1 x LKPower AC/DC Adapter

SETUP

1. **Verify Compatibility:** Ensure your device is a Black & Decker SZ360OR or SZ360 6V Cordless Rechargeable Scissor.
2. **Inspect Adapter:** Before first use, visually inspect the adapter and cable for any signs of damage. Do not use if damaged.
3. **Connect to Device:** Insert the barrel connector of the adapter's output cable firmly into the charging port of your Black & Decker scissors.
4. **Connect to Power Outlet:** Plug the adapter's prongs into a standard AC 100-240V wall power outlet.



Image 3: The LKPower AC/DC Adapter connected to a power strip, ready for use.

OPERATING INSTRUCTIONS

Once properly connected, the adapter will begin to supply power to your Black & Decker scissors. This allows you to either operate the scissors directly from an electrical outlet or charge their internal battery.

- **Charging:** When connected, the adapter will charge the battery of your cordless scissors. Refer to your scissors' manual for specific charging indicators (e.g., LED lights).
- **Direct Power:** You can use the scissors while they are plugged into the adapter and a power outlet. This is useful if the battery is depleted or for extended use.
- **Disconnection:** To disconnect, first unplug the adapter from the wall outlet, then gently remove the barrel connector from your scissors.

MAINTENANCE

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Wipe the exterior with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.

- **Inspection:** Periodically check the cable and connector for any signs of wear or damage. Replace the adapter if any damage is observed.

TROUBLESHOOTING

Adapter Not Providing Power/Charging:

- **Check Connections:** Ensure the adapter is securely plugged into both the wall outlet and your Black & Decker scissors.
- **Verify Outlet:** Test the wall outlet with another device to confirm it is functioning correctly.
- **Confirm Compatibility:** Double-check that your device model (Black & Decker SZ360OR or SZ360) is compatible with this adapter. Incorrect voltage or connector type will prevent operation.
- **Inspect for Damage:** Look for any visible damage to the adapter's cable or connector. If damaged, discontinue use and replace the adapter.
- **Overload Protection:** If the adapter has been subjected to an overload or overheating, it may temporarily shut down. Disconnect it, allow it to cool, and then reconnect.

If the issue persists after performing these checks, contact customer support.

SPECIFICATIONS

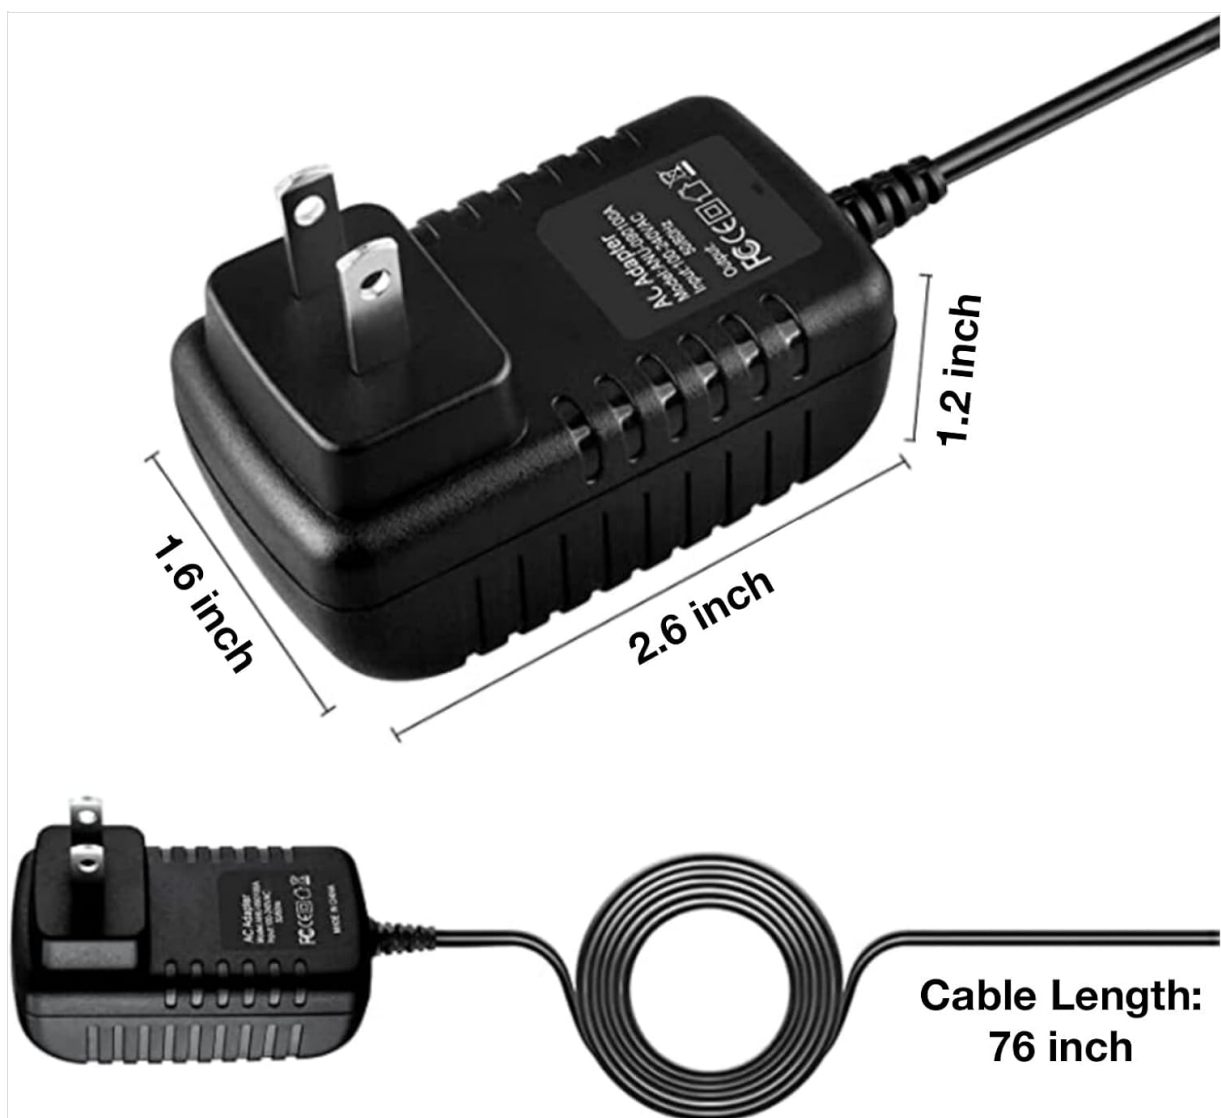


Image 4: Diagram showing the dimensions of the adapter and its cable length.

Feature	Detail
Model Number	171103009
Brand	LKPower
Input Voltage	AC 100-240V, 50/60Hz
Output Amperage	1 Amps
Wattage	12 Watts
Connector Type	Barrel Connector
Compatible Devices	Black & Decker SZ360OR/SZ360 6V Cordless Rechargeable Scissors
Item Weight	3.94 ounces
Package Dimensions	5.63 x 2.56 x 2.52 inches
Special Feature	Travel-friendly design, Over Voltage Protection, Over Heat Protection

WARRANTY INFORMATION

This LKPower product is covered by a limited manufacturer's warranty. The terms and duration of the warranty may vary. Please retain your proof of purchase for warranty claims. For specific details regarding your warranty, refer to the documentation provided with your purchase or contact the manufacturer directly.

CUSTOMER SUPPORT

If you have any questions, require technical assistance, or encounter issues not covered in this manual, please contact your retailer or visit the LKPower official website for support resources. When contacting support, please have your product model number (171103009) and purchase information ready.