

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GUESS](#) /

› [GUESS Women's Stainless Steel + Stain Resistant Silicone Watch User Manual](#)

### GUESS U1053L2

# GUESS Women's Stainless Steel + Stain Resistant Silicone Watch User Manual

Model: U1053L2

## INTRODUCTION

Welcome to the user manual for your new GUESS Women's Stainless Steel + Stain Resistant Silicone Watch. This timepiece combines elegant design with practical multi-function features, including day, date, and 24-hour indicators. To ensure optimal performance and longevity, please read this manual carefully before using your watch.



Figure 1: Front view of the GUESS Women's Stainless Steel + Stain Resistant Silicone Watch in White/Silver Tone/White.

## PRODUCT FEATURES

Your GUESS watch is designed with both aesthetics and functionality in mind. Key features include:

- **WHITE MULTI-FUNCTION DIAL:** Provides clear display of time and additional functions.
- **Features: Day plus Date Functions:** Sub-dials indicate the current day of the week and date.
- **38.5 MM CASE SIZE with DURABLE MINERAL CRYSTAL:** Protects the watch face from scratches and impacts.
- **POLISHED STAINLESS STEEL WITH ROSE GOLD-TONE TOP RING:** Offers a sophisticated and durable casing.
- **COMFORTABLE WHITE STAIN RESISTANT SILICONE STRAP WITH SILVER-TONE BUCKLE CLOSURE:** Ensures comfort and durability for daily wear.



Figure 2: A collection of GUESS watches showcasing various designs and color options.

## SETUP

### Unboxing

Upon receiving your watch, carefully open the packaging. Ensure all components are present, including the watch and this instruction manual. Inspect the watch for any visible damage.



Figure 3: The standard packaging box for your GUESS watch.

## Initial Setup: Setting Time and Date

- Pull the Crown:** Gently pull the crown (the knob on the side of the watch) out to position 2. This is typically the outermost position.
- Set the Time:** Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time. Ensure you account for AM/PM if your watch has a 24-hour indicator or date function that changes at midnight.
- Set the Date/Day:** Push the crown in slightly to position 1 (the middle position). Rotate the crown to adjust the date and day sub-dials. Some watches may require rotating the crown in one direction for the date and the other for the day. Refer to the specific markings on your watch's dial.
- Push the Crown Back:** Once the time, date, and day are set, push the crown fully back into position 0 (the normal operating position) to start the watch movement.

## OPERATING INSTRUCTIONS

### Wearing Your Watch

Adjust the silicone strap to fit comfortably around your wrist. The buckle closure ensures a secure fit. Avoid wearing the watch too tightly, which can restrict circulation, or too loosely, which can cause it to move excessively.



Figure 4: The GUESS watch worn on a wrist, demonstrating fit.

### Understanding Multi-Function Dials

Your watch features sub-dials for day and date. The day sub-dial typically displays the day of the week (e.g., M, T, W) and the date sub-dial displays the numerical date (1-31). These functions are automatically updated by the watch's movement once set correctly.

Your browser does not support the video tag.

Video 1: A 360-degree view of the GUESS Women's Stainless Steel + Stain Resistant Silicone Watch, highlighting its design and features.

## MAINTENANCE

### Cleaning Your Watch

To maintain the appearance of your watch, regularly wipe the case and crystal with a soft, lint-free cloth. For the silicone strap, you can use a mild soap and water solution, then rinse thoroughly and dry completely. Avoid harsh chemicals or abrasive materials.

### Battery Replacement

Your watch is powered by a product-specific battery (included). When the watch stops running, it indicates the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

### Water Resistance

While your watch features a durable construction, specific water resistance levels are not provided in the product details. It is generally advised to avoid prolonged exposure to water, such as swimming or showering, to prevent damage. The watch is designed for everyday wear and can withstand splashes or brief exposure to rain.

## TROUBLESHOOTING

If you encounter any issues with your watch, refer to the table below for common problems and their solutions:

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in	Replace battery (professional recommended); Push crown fully into position 0
Date/Day not changing	Incorrectly set; Not enough power reserve (if automatic)	Reset date/day as per 'Initial Setup' instructions; Ensure watch is worn regularly (if automatic)
Condensation under crystal	Exposure to extreme temperature changes or moisture	Seek professional service immediately to prevent internal damage

## SPECIFICATIONS

Detailed specifications for your GUESS Women's Stainless Steel + Stain Resistant Silicone Watch:

Specification	Detail
Model Number	U1053L2
Case Material	Stainless Steel
Strap Material	Silicone
Case Size	38.5 MM
Crystal Type	Durable Mineral Crystal
Functions	Day, Date, 24-hour
Battery	1 Product Specific battery (included)
Manufacturer	Sequel International
Item Weight	2.88 ounces

## WARRANTY INFORMATION

Your GUESS watch is covered by a manufacturer's warranty against defects in materials and workmanship. The duration and terms of the warranty may vary by region. Please retain your proof of purchase for any warranty claims. For detailed warranty information, refer to the documentation included with your watch or visit the official GUESS Watches website.

## SUPPORT

For further assistance, technical support, or service inquiries regarding your GUESS watch, please contact GUESS customer service through their official channels. You can also visit the official GUESS Watches store on Amazon for product information and updates:

[Visit the GUESS Store on Amazon](#)