

[Manuals.plus](#) /

› [Yusud](#) /

› [Yusud Butane Fuel Lighter User Manual \(Model LI11\)](#)

Yusud LI11

Yusud Butane Fuel Lighter User Manual

Model: LI11

[Introduction](#)

[Safety Information](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Warranty &](#)

[Specifications](#)

[Support](#)

1. INTRODUCTION

Thank you for choosing the Yusud Butane Fuel Lighter. This compact and reliable lighter is designed for ease of use and portability. Please read this manual thoroughly before using your lighter to ensure safe and proper operation.



Image 1.1: Yusud Butane Fuel Lighter (Gray)

2. IMPORTANT SAFETY INFORMATION

WARNING: Keep out of reach of children. Contains flammable gas under pressure.

- Do not keep the cap open when not in use, as butane gas will leak out.
- Avoid lighting the lighter for more than 10 seconds continuously to prevent overheating of the cap and flint.
- Use only high-quality butane fuel. Do not mix different types of gas fuel, as this can prevent ignition.
- After refilling, wait approximately 3 minutes before attempting to ignite the lighter to allow the gas to stabilize.
- Ensure the lighter is completely cool before refilling or performing maintenance.
- Do not expose to temperatures above 120°F (49°C) or prolonged sunlight.
- Do not puncture or incinerate the lighter.

3. LIGHTER COMPONENTS

Familiarize yourself with the key parts of your Yusud Butane Fuel Lighter:



Image 3.1: Lighter Components Overview

- **Flame Adjustable Valve:** Located at the bottom, used to control flame height.
- **Flint-Wheel Ignition:** The mechanism for sparking, located under the cap.
- **Fuel Tank:** Internal reservoir for butane fuel.
- **Protective Cap:** Covers the ignition mechanism and helps prevent gas leakage when closed.

4. INITIAL SETUP

Your Yusud Butane Fuel Lighter is shipped empty due to air mail regulations. It must be filled with butane fuel before first use.

4.1. Refilling with Butane Fuel

1. Ensure the lighter is cool and away from any ignition sources.
2. Turn the lighter upside down.
3. Use a butane gas bottle with a long nozzle. Insert the nozzle firmly into the refill valve at the bottom of the

lighter.

4. Press down firmly for 5-10 seconds. Repeat 2-3 times to ensure a full fill.
5. After refilling, wait approximately 3 minutes for the gas to stabilize and reach room temperature before attempting to ignite.

4.2. Adjusting Flame Height

The flame height can be adjusted using the dial at the bottom of the lighter.

1. Locate the flame adjustment dial on the bottom of the lighter.
2. Using a small flat-head screwdriver, turn the dial towards the '+' sign for a larger flame or towards the '-' sign for a smaller flame.
3. Test the flame after each adjustment until the desired height is achieved.

5. OPERATION

Operating your Yusud Butane Fuel Lighter is straightforward:

1. Open the protective cap. Note that gas will begin to release as soon as the cap is opened.
2. With the cap open, firmly rotate the flint-wheel with your thumb to create a spark and ignite the butane gas.
3. Once ignited, the flame will remain active as long as the cap is open.
4. To extinguish the flame, simply close the protective cap. Ensure the cap is fully closed to prevent gas leakage.



Image 5.1: Lighter in Operation

6. MAINTENANCE

6.1. Butane Refilling

Refer to section 4.1 for detailed instructions on refilling your lighter. It is recommended to deflate any remaining gas before refilling to prevent mixing of fuel types.

6.2. Flint Replacement

Over time, the flint will wear down and need replacement. The diameter of the replacement flint should be less than 2.2mm.

HOW TO REPLACE A NEW FLINT



1. Push up the flint wheel head and pull it out



2. Unscrew the screw with a slotted screwdriver.



3. After taking out the spring, pour out the used flint.



4. Replace a new flint and put back all parts.

Image 6.1: How to Replace a New Flint

1. Push up the flint wheel head and pull it out.
2. Unscrew the screw located at the bottom of the flint mechanism with a slotted screwdriver.
3. Carefully remove the spring and pour out the used flint.
4. Insert a new flint, then replace the spring and screw. Ensure all parts are securely reassembled.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--------------------------|-----------------|--|
| Lighter does not ignite. | No butane fuel. | Refill with butane fuel (see Section 4.1). |
| | Worn-out flint. | Replace the flint (see Section 6.2). |

| Problem | Possible Cause | Solution |
|-------------------------------|---|--|
| | Air trapped in fuel tank or mixed fuel. | Completely deflate the lighter before refilling with a single type of butane fuel. |
| Flame is too high or too low. | Flame adjustment setting. | Adjust the flame height using a screwdriver (see Section 4.2). |
| Gas leaks when not in use. | Cap not fully closed. | Ensure the protective cap is securely closed after each use. |

8. SPECIFICATIONS

- **Brand:** Yusud
- **Model:** LI11
- **Material:** Zinc Alloy
- **Dimensions:** Approximately 3.34 inches (L) x 0.33 inches (W)
- **Item Weight:** 1 Ounce
- **Fuel Type:** Butane
- **UPC:** 712069264728

9. WARRANTY & SUPPORT

9.1. Warranty Information

The Yusud Butane Fuel Lighter comes with a 1-year quality after-service warranty. This covers defects in materials and workmanship under normal use. For warranty claims or issues, please contact customer support.

9.2. Customer Support

If you encounter any issues or have questions regarding your Yusud Butane Fuel Lighter, please contact our customer support team. Refer to your purchase documentation for specific contact details or visit the official Yusud website.

