

Satisfyer SATPROGRAB

Satisfyer Pro+ G-Spot Rabbit Instruction Manual

Model: SATPROGRAB

INTRODUCTION

The Satisfyer Pro+ G-Spot Rabbit is an innovative sexual wellness device designed for dual stimulation, combining pressure wave technology for clitoral stimulation with powerful vibrations for G-spot pleasure. This device offers a unique experience with multiple intensity levels and programs, all within a waterproof design for versatile use.

Key features include:

- **2-in-1 Technology:** Combines non-contact pressure waves and vibration for comprehensive stimulation.
- **Diverse Programs:** Features 11 pressure wave intensities and 10 vibration programs for varied experiences.
- **Powerful Motors:** Equipped with two strong motors for intense sensations, operating in a discreet whisper mode.
- **Waterproof Design (IPX7):** Fully submersible, allowing for use in the shower or bath.
- **Rechargeable:** Convenient USB-C charging ensures quick power-ups.

PACKAGE CONTENTS

- Satisfyer Pro+ G-Spot Rabbit device
- USB-C charging cable
- Instruction manual

SETUP

Initial Charging

Before first use, fully charge your Satisfyer Pro+ G-Spot Rabbit. Connect the included USB-C charging cable to the device's charging port and plug the other end into a standard USB power adapter (not included). The charging indicator will illuminate during charging and change when fully charged. A full charge typically takes approximately 2-3 hours.



Image: USB-C charging cable icon, representing the charging method.

Cleaning Before First Use

Clean the device thoroughly with warm water and a mild, toy-friendly cleaner before its initial use. Rinse well and allow it to air dry completely.

OPERATING INSTRUCTIONS

Power On/Off

To turn the device on, press and hold the power button (often indicated by a circle or a specific symbol) for approximately 2 seconds. To turn it off, press and hold the same button again for 2 seconds.

¿POR QUÉ EL BIENESTAR SEXUAL?

Satisfyer

Igual que **las verduras de hoja verde y el protector solar**, el **placer sexual** es una parte esencial **de la salud y el bienestar general**.

En Satisfyer, nuestra misión es combinar salud **sexual e innovación tecnológica** que se integran fácilmente en tu rutina de autocuidado.

El orgasmo es para todos: para todos los cuerpos, para todas las capacidades, **sin límites**.

Image: The Satisfyer Pro+ G-Spot Rabbit, highlighting the control panel with power and intensity buttons.

Adjusting Pressure Wave Intensities

The device features a dedicated button for controlling the pressure wave function. Press this button to cycle through the 11 different intensity levels. A short press will change the intensity, while a long press may activate or deactivate the function.

Adjusting Vibration Programs

The G-spot vibrator function is controlled by a separate button. Press this button to switch between the 10 distinct vibration programs. Short presses typically change the program, and a long press may turn the vibration on or off.

Simultaneous Use

Both the pressure wave and vibration functions can be used independently or simultaneously. Experiment with different combinations of intensities and programs to find your preferred settings.

Waterproof Use

Thanks to its IPX7 waterproof rating, the device can be safely used in water, such as in the shower or bath. Ensure the charging port is completely dry before connecting the charging cable.

MAINTENANCE

Cleaning After Use

After each use, clean the device thoroughly with warm water and a mild, toy-friendly cleaner. Rinse it completely to remove any residue and allow it to air dry. Avoid using harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the silicone material.



Image: Icon representing silicone material, emphasizing the device's construction.

Storage

Store the Satisfyer Pro+ G-Spot Rabbit in a clean, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent potential damage or reactions.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Connect it to the USB-C charging cable and allow it to charge for at least 30 minutes before attempting to power it on again.
- **Weak or inconsistent performance:** A low battery can affect performance. Recharge the device. If the issue persists after a full charge, contact customer support.
- **Buttons not responding:** Ensure the device is not locked (if a lock function exists, refer to specific product documentation). Try turning the device off and on again. If unresponsive, a full recharge might resolve the issue.
- **Unusual noises:** While the device operates in whisper mode, any unusual or loud noises may indicate a malfunction. Discontinue use and contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Satisfyer Pro+ G-Spot Rabbit
Model Number	SATPROGRAB
Dimensions (L x W x H)	22.9 x 5 x 10 cm (approximately)
Weight	270 g

Material	Silicone
Water Resistance	IPX7 (Waterproof)
Battery	1 A (included)
Charging	USB-C
Pressure Wave Intensities	11
Vibration Programs	10

WARRANTY

Satisfyer offers a 15-year warranty on this product, ensuring long-term satisfaction and peace of mind. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the official Satisfyer website or contact customer support.

SUPPORT

For further assistance, product inquiries, or troubleshooting not covered in this manual, please visit the official Satisfyer website or contact their customer support team. Contact information can typically be found on the product packaging or the brand's official website.

Online Resources: www.satisfyer.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question