

[Manuals.plus](#) /

› [Soundlogic](#) /

› Soundlogic Bluetooth Earbuds User Manual

Soundlogic 2042

Soundlogic Bluetooth Earbuds

MODEL: 2042

INTRODUCTION

Thank you for purchasing the Soundlogic Bluetooth Earbuds, Model 2042. This manual provides detailed instructions on how to set up, operate, and maintain your new wireless earbuds. Please read this manual carefully before use and keep it for future reference.

Safety Information:

- Do not expose the earbuds to extreme temperatures, humidity, or liquids.
- Avoid dropping or subjecting the earbuds to strong impacts.
- Do not attempt to disassemble or modify the earbuds. This will void the warranty.
- Use only the provided charging cable or a certified equivalent.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.

PACKAGE CONTENTS

- Soundlogic Bluetooth Earbuds (Model 2042)
- USB Charging Cable
- User Manual



Image: The retail packaging for the Soundlogic Bluetooth Earbuds, Model 2042. The box shows the black earbuds with an inline remote, and a graphic of a person wearing them, highlighting features like wireless music & calls, good sound quality, and 2 hours of playback.

SETUP

Charging the Earbuds

Before first use, fully charge the earbuds. A full charge typically takes approximately 1-2 hours.

1. Locate the charging port on the inline remote control of the earbuds.
2. Connect the small end of the USB charging cable to the charging port.
3. Connect the larger end of the USB charging cable to a USB power source (e.g., computer USB port, USB wall adapter).
4. The LED indicator light will illuminate during charging and turn off or change color when fully charged. Refer to the specific LED behavior in the operating section.

Pairing with a Bluetooth Device

To use your Soundlogic Bluetooth Earbuds, you must first pair them with your Bluetooth-enabled device (e.g., smartphone, tablet).

1. Ensure the earbuds are fully charged and turned off.
2. Press and hold the Multi-function Button (usually the center button on the inline remote) for approximately 5-7 seconds until the LED indicator light flashes red and blue alternately. This indicates the earbuds are in pairing mode.
3. On your Bluetooth device, go to the Bluetooth settings and ensure Bluetooth is enabled.
4. Search for available devices. You should see "Soundlogic Earbuds" or "Model 2042" appear in the list.
5. Select the earbuds from the list to connect. If prompted for a password, enter "0000" (four zeros).
6. Once successfully paired, the LED indicator light will stop flashing and may turn solid blue or off, depending on the model. A voice prompt may also confirm the connection.

7. The earbuds will automatically attempt to reconnect to the last paired device when turned on, if the device's Bluetooth is active and within range.

OPERATING INSTRUCTIONS

Button Functions (Inline Remote)

- **Multi-function Button (MFB):**
 - Press and hold (3-5 seconds): Power ON/OFF
 - Press and hold (5-7 seconds from OFF): Enter Pairing Mode
 - Single press: Play/Pause music, Answer/End call
 - Double press: Redial last number
 - Press and hold (during incoming call): Reject call
- **Volume Up (+) Button:**
 - Single press: Increase volume
 - Press and hold: Next track
- **Volume Down (-) Button:**
 - Single press: Decrease volume
 - Press and hold: Previous track

Music Playback

- **Play/Pause:** Press the MFB once.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.
- **Volume Control:** Press the Volume Up (+) or Volume Down (-) buttons to adjust volume.

Phone Calls

- **Answer Call:** Press the MFB once when a call comes in.
- **End Call:** Press the MFB once during a call.
- **Reject Call:** Press and hold the MFB for 2 seconds during an incoming call.
- **Redial Last Number:** Double-press the MFB when not on a call.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Storage:** When not in use, store the earbuds in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the earbuds regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds won't turn on.	Low battery.	Charge the earbuds fully.
Cannot pair with device.	Earbuds not in pairing mode; Bluetooth off on device; device too far.	Ensure earbuds are in pairing mode (flashing red/blue). Turn on Bluetooth on your device. Move device closer to earbuds (within 10 meters). Forget previous pairings on device and try again.
No sound or low volume.	Volume too low on earbuds or device; not connected; wrong audio output selected.	Increase volume on both earbuds and device. Ensure earbuds are connected. Check audio output settings on your device.
Intermittent connection.	Interference; device too far; low battery.	Move closer to the device. Avoid obstacles. Charge earbuds. Avoid strong Wi-Fi signals or other Bluetooth devices.

SPECIFICATIONS

Feature	Detail
Model Number	2042
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	<i>(Not specified in input)</i>
Form Factor	In-Ear
Color	Black
Material	Artificial Leather
Usage	Music
Battery Life	Approximately 2 hours of playback
Charging Time	Approx. 1-2 hours
Wireless Range	Up to 10 meters (33 feet) in open space

WARRANTY AND SUPPORT

Soundlogic products are designed for reliability and performance. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Soundlogic website. Keep your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or general inquiries, please contact Soundlogic customer service through the contact information provided on the product packaging or the official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question