

ACHP32V156AAMZ2017113030

# Generic AC Adapter for HP Photosmart 8750GP C5390 Printer

Instruction Manual

## INTRODUCTION

---

This manual provides essential instructions for the safe and efficient use of your Generic AC Adapter. This power supply is designed to provide reliable power to compatible HP Photosmart 8750GP and C5390 printers. Please read this manual thoroughly before installation and operation to ensure proper functionality and to prevent damage to the adapter or your device.

## SAFETY INFORMATION

---

- Read all instructions carefully before using the product.
- Do not expose the AC adapter to water, moisture, or high humidity.
- Use the adapter only with devices for which it is specified. Using it with incompatible devices may cause damage.
- Ensure the power outlet voltage matches the adapter's input voltage (240 Volts).
- Avoid placing the adapter in areas with poor ventilation, as this can lead to overheating.
- Do not attempt to open, modify, or repair the adapter. Refer servicing to qualified personnel.
- Keep out of reach of children.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- One (1) AC Adapter
- One (1) Power Cord



An image showing the Generic AC Adapter and its accompanying power cord, ready for connection.

## SETUP

---

Follow these steps to connect your AC adapter to your printer:

1. **Connect the Power Cord:** Take the provided power cord and firmly insert its connector into the AC adapter's input port.
2. **Plug into Outlet:** Insert the other end of the power cord into a standard, functional electrical wall outlet.
3. **Connect to Printer:** Locate the power input port on your HP Photosmart 8750GP or C5390 printer. Carefully insert the adapter's output plug into this port. Ensure a snug and secure connection.

Once all connections are made, your printer should receive power. Confirm that the printer's power indicator light (if available) illuminates.

## OPERATING INSTRUCTIONS

---

After successful setup, the AC adapter continuously supplies power to your connected HP Photosmart printer. No further operational steps are required for the adapter itself.

- Ensure the printer is turned on using its own power button, if applicable.
- Always disconnect the adapter from the wall outlet when not in use for extended periods or during electrical storms.

## MAINTENANCE

---

Proper maintenance ensures the longevity and safe operation of your AC adapter:

- **Cleaning:** Use a soft, dry cloth to wipe the adapter and power cord. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cable Inspection:** Periodically inspect the power cord and adapter cables for any signs of damage, such as fraying, cuts, or exposed wires. If damage is found, discontinue use immediately and replace the adapter.
- **Ventilation:** Ensure the adapter is not covered or placed in an enclosed space during operation to allow for adequate heat dissipation.

## TROUBLESHOOTING

If you encounter issues with your AC adapter, refer to the following common problems and solutions:

- **No Power to Printer:**
  - Ensure the power cord is securely connected to both the adapter and the wall outlet.
  - Verify that the adapter's output plug is fully inserted into the printer's power port.
  - Test the wall outlet with another device to confirm it is functional.
  - Confirm that the AC adapter is compatible with your specific HP Photosmart printer model (8750GP or C5390).
- **Intermittent Power:**
  - Check all connections for looseness.
  - Inspect the power cord and adapter cables for any visible damage. Replace if damaged.
  - Avoid bending or crimping the power cord excessively.
- **Adapter is Hot:**
  - It is normal for the adapter to feel warm during operation. However, if it becomes excessively hot, disconnect it immediately.
  - Ensure the adapter has adequate ventilation and is not covered.
  - Verify that the printer's power requirements do not exceed the adapter's specifications.

If troubleshooting steps do not resolve the issue, contact customer support for further assistance.

## SPECIFICATIONS

|                           |                                        |
|---------------------------|----------------------------------------|
| Brand                     | Generic                                |
| Manufacturer              | Globalsaving                           |
| Model Number              | ACHP32V156AAMZ2017113030               |
| Compatible Devices        | Printers (HP Photosmart 8750GP, C5390) |
| Input Voltage             | 240 Volts                              |
| Power Source              | Corded Electric                        |
| Main Power Connector Type | 2 Pin                                  |
| Mounting Type             | Wall Mount                             |
| UPC                       | 604286391557                           |

## WARRANTY AND SUPPORT

This product is sold by Globalsaving. For specific warranty information, return policies, or technical support, please refer to the documentation provided at the time of purchase or contact the retailer directly. Keep your purchase receipt as proof of purchase.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question