

MEDION MD 18043

MEDION MD 18043 3-in-1 Microwave Oven User Manual

Model: MD 18043

Safety					
Instructions	Setup	Operation	Maintenance	Troubleshooting	Specifications

INTRODUCTION

This user manual provides important information for the safe and efficient operation of your MEDION MD 18043 3-in-1 Microwave Oven. This appliance combines microwave, grill, and hot air convection functions, offering versatile cooking options. Please read this manual thoroughly before using the appliance and keep it for future reference.

Package Contents:

- 1 x MEDION MD 18043 3-in-1 Microwave Oven (Black)
- 1 x Glass Turntable (Ø 270 mm)
- 1 x Stainless Steel Grill Rack
- 1 x Instruction Manual and Warranty Documents

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) Door (bent), (2) Hinges and latches (broken or loosened), (3) Door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.

- Only use utensils suitable for microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Liquids heated in the microwave can boil over unexpectedly. Exercise caution when removing containers.
- The contents of feeding bottles and baby food jars should be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

SETUP AND INSTALLATION

Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a broken door. Do not install if the oven is damaged. Contact your dealer or service center.

Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the oven.
- Ensure adequate ventilation. Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides. Do not block any ventilation openings.
- Do not place the oven near heat sources or in damp environments.
- The appliance is designed for countertop use only. Do not build it into a cabinet.

Electrical Connection

Ensure the voltage indicated on the rating label matches your household power supply. The appliance must be properly grounded. Do not use extension cords or adapters.

Turntable Installation

1. Place the turntable ring on the oven cavity floor.
2. Place the glass turntable on top of the turntable ring, ensuring it sits securely in the center support.



Image 1: Front view of the MEDION MD 18043 3-in-1 Microwave Oven, showing the black exterior, silver handle, and digital display.

OPERATING INSTRUCTIONS

Control Panel Overview



Image 2: Close-up of the control panel, featuring a digital display, various function buttons, and a rotary knob for time/weight adjustment.

The control panel features a digital display, function buttons for Microwave, Grill, Hot Air, Combination modes, Defrost, and Auto Programs, along with a rotary knob for setting time and weight, and Start/Pause buttons.

Setting the Clock

Upon first power-up or after a power outage, the display will show "0:00".

1. Press the "Clock" button once.
2. Turn the rotary knob to set the hour (0-23).
3. Press the "Clock" button again.
4. Turn the rotary knob to set the minutes (0-59).
5. Press the "Clock" button to confirm.

Microwave Cooking

This mode uses microwave energy to cook food. It offers 11 power levels and a maximum power of 900W.

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door.
3. Press the "Microwave" button repeatedly to select the desired power level (P100, P90, P80... P10).
4. Turn the rotary knob to set the cooking time (up to 95 minutes).
5. Press the "Start" button to begin cooking.

Grill Cooking

The grill function is ideal for browning and crisping food, with a power of 1000W.

1. Place food on the stainless steel grill rack.
2. Close the oven door.
3. Press the "Grill" button.
4. Turn the rotary knob to set the cooking time.
5. Press the "Start" button to begin cooking.

Hot Air Convection Cooking

This mode uses hot air (1950W, 10 stages) for even cooking, similar to a conventional oven.

1. Place food in an oven-safe dish on the glass turntable or grill rack.
2. Close the oven door.
3. Press the "Hot Air" button repeatedly to select the desired temperature (e.g., 110°C to 200°C).
4. Turn the rotary knob to set the cooking time.
5. Press the "Start" button to begin cooking.

Combination Cooking

The appliance offers various combination modes (Microwave + Grill, Microwave + Hot Air) for optimized cooking results.

1. Place food in a suitable container.
2. Close the oven door.
3. Press the "Combi" button repeatedly to select the desired combination mode (e.g., C-1, C-2, C-3).
4. Turn the rotary knob to set the cooking time.

5. Press the "Start" button to begin cooking.

Automatic Programs

The oven features 8 pre-set automatic programs for common food items:

- Pizza
- Potatoes
- Meat
- Fish
- Vegetables
- Drinks
- Pasta
- Popcorn
- Cake

1. Place food in the oven.
2. Close the oven door.
3. Press the "Auto Menu" button repeatedly to select the desired program.
4. Turn the rotary knob to select the weight or quantity (if applicable).
5. Press the "Start" button to begin.

Defrosting

The defrost function allows for defrosting by weight or time.

1. Place frozen food in the oven.
2. Close the oven door.
3. Press the "Defrost" button.
4. Turn the rotary knob to select the weight or time.
5. Press the "Start" button to begin defrosting.

CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior cavity after each use with a damp cloth and mild detergent.
- For stubborn stains, boil a cup of water with a few slices of lemon in the oven for 5-10 minutes to loosen food particles, then wipe clean.
- The glass turntable and turntable ring can be removed and washed in warm soapy water or a dishwasher.
- Do not use abrasive cleaners or sharp objects that could scratch the enamel surface.

Cleaning the Oven Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the control panel gently with a soft, damp cloth. Avoid excessive moisture.

Door and Door Seals

Keep the door seals and adjacent parts clean. Wipe them frequently with a damp cloth to remove any spills or splatters. Do not use harsh cleaners or scouring pads.

TROUBLESHOOTING GUIDE

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Oven does not start	<ul style="list-style-type: none">Power cord not plugged in.Door not closed properly.Incorrect operation set.	<ul style="list-style-type: none">Plug into outlet.Close the door firmly.Check settings and press "Start".
Food not cooking evenly	<ul style="list-style-type: none">Food not stirred or turned.Incorrect power level/time.Turntable not rotating.	<ul style="list-style-type: none">Stir or turn food during cooking.Adjust power and time.Check turntable installation.
Excessive steam inside oven	<ul style="list-style-type: none">High moisture content in food.	<ul style="list-style-type: none">This is normal for some foods. Wipe interior after use.
Oven light not working	<ul style="list-style-type: none">Bulb needs replacement.	<ul style="list-style-type: none">Contact qualified service personnel for bulb replacement.

TECHNICAL SPECIFICATIONS

Brand	MEDION
Model	MD 18043
Internal Model Number	50056098
Color	Black
Capacity	25 Liters
Microwave Power	900 W (11 power levels)
Grill Power	1000 W
Hot Air Convection Power	1950 W (10 stages)
Dimensions (W x D x H)	48.3 x 38.8 x 28.1 cm
Product Weight	16 kg
Installation Type	Countertop
Timer	Digital, 95 minutes
Cavity Material	Enameled

WARRANTY AND SUPPORT

Your MEDION MD 18043 3-in-1 Microwave Oven comes with a manufacturer's warranty. Please refer to the warranty documents included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact MEDION customer service. Contact information can typically be found on the MEDION website or in the warranty documentation provided with your product.

When contacting support, please have your model number (MD 18043) and serial number (if applicable) ready.

© 2023 MEDION. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question