

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION MD 15694 Digital Sewing Machine User Manual

MEDION MD 15694

MEDION MD 15694 Digital Sewing Machine User Manual

Model: MD 15694

INTRODUCTION

The MEDION MD 15694 Digital Sewing Machine is designed for both beginners and experienced users, offering a wide range of features for various sewing projects. This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your new sewing machine. Please read this manual thoroughly before using the machine to ensure proper function and longevity.



Image: Front view of the MEDION MD 15694 Digital Sewing Machine, showcasing its white body with blue accents and the digital display.

SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the machine:

- Ensure the machine is unplugged when not in use, before cleaning, or when changing parts.
- Keep fingers away from all moving parts, especially the needle and handwheel.
- Use only the accessories recommended by the manufacturer.
- Do not operate the machine if it has a damaged cord or plug, or if it is not working properly.
- Keep the work area well-lit and free of clutter.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SETUP

Unpacking and Placement

Carefully remove the sewing machine from its packaging. Place the machine on a stable, flat surface. Ensure there is adequate space around the machine for comfortable operation and fabric handling.

Power Connection

Connect the foot controller plug to the machine's power socket and then plug the power cord into a suitable electrical outlet. The LED sewing light will illuminate when the machine is powered on.

Winding the Bobbin

1. Place an empty bobbin onto the bobbin winder spindle.
2. Guide the thread from the spool pin through the thread guide and around the bobbin winding tension disc.
3. Wind the thread a few times manually around the bobbin.
4. Push the bobbin winder spindle to the right.
5. Press the foot controller to start winding. The machine will stop automatically when the bobbin is full.
6. Cut the thread and push the bobbin winder spindle back to the left.



Image: Angled view of the MEDION MD 15694 Digital Sewing Machine, showing the top spool pin and bobbin winder area.

Inserting the Bobbin

1. Open the bobbin cover plate located on the needle plate.
2. Insert the wound bobbin into the bobbin case, ensuring the thread unwinds counter-clockwise.

3. Guide the thread through the tension spring and into the thread guide slot.
4. Pull the thread gently to ensure it is properly seated.
5. Replace the bobbin cover plate.



Image: A hand demonstrating the insertion of the bobbin into the bobbin case under the needle plate.

Threading the Upper Thread

1. Raise the presser foot lever.
2. Place the thread spool on the spool pin.
3. Guide the thread through the upper thread guide.
4. Follow the numbered threading path down the front of the machine, around the tension discs, and up to the take-up lever.
5. Thread the take-up lever from right to left.
6. Guide the thread down to the needle bar thread guide.
7. Thread the needle from front to back.

OPERATING INSTRUCTIONS

Selecting Stitches

The MEDION MD 15694 offers 100 normal stitches, 100 alphabet stitches, and 69 double-needle stitches. Use the selection buttons (+ and -) to navigate through the stitch patterns displayed on the LCD screen. The machine will automatically set the recommended stitch length and width, which can be adjusted if needed.



Image: Close-up view of the digital display and control buttons on the MEDION MD 15694, showing stitch selection options.

Starting to Sew

1. Place the fabric under the presser foot.
2. Lower the presser foot lever.
3. Gently press the foot controller to start sewing. The machine will begin stitching at the selected speed.
4. Guide the fabric gently with both hands, ensuring it feeds evenly. Do not pull or push the fabric forcefully.



Image: Hands guiding fabric under the presser foot and needle of the MEDION MD 15694 Digital Sewing Machine during operation.

Automatic Buttonhole Function

The machine features a 4-step buttonhole function. Attach the buttonhole foot and select the desired buttonhole stitch. The machine will guide you through the steps to create a perfectly sized buttonhole.

LED Sewing Light

The integrated LED sewing light illuminates your work area, providing clear visibility for precise stitching. This light is automatically on when the machine is powered.



Image: The MEDION MD 15694 Digital Sewing Machine in a sewing environment, demonstrating the illumination provided by the LED sewing light.

MAINTENANCE

Cleaning the Machine

Regular cleaning ensures smooth operation and extends the life of your sewing machine. Always unplug the machine before cleaning.

- **Lint Removal:** Remove the needle plate and bobbin case. Use a small brush to remove lint and dust from the feed dogs and bobbin area.
- **Surface Cleaning:** Wipe the exterior surfaces of the machine with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

Oiling (if applicable)

Refer to the specific instructions in your included manual regarding oiling. Some modern machines are self-lubricating and do not require user oiling. If oiling is required, use only sewing machine oil and apply sparingly to designated points.

Needle Replacement

Replace the needle regularly, especially if it becomes bent, dull, or if you notice skipped stitches. Ensure the flat side of the needle faces the back of the machine when inserting.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Skipped Stitches	Incorrect needle, bent needle, improper threading.	Replace needle with correct type/size, re-thread machine correctly.
Thread Breaking	Incorrect tension, poor quality thread, needle bent or dull.	Adjust tension, use good quality thread, replace needle.
Fabric Not Feeding	Presser foot not lowered, feed dogs clogged with lint.	Lower presser foot, clean feed dogs.
Machine Not Starting	Not plugged in, foot controller not connected, power switch off.	Check power connections, ensure foot controller is securely plugged in.

SPECIFICATIONS

- **Model:** MD 15694
- **Stitch Programs:** 100 normal stitches, 100 alphabet stitches, 69 double-needle stitches
- **Buttonhole:** 4-step automatic buttonhole
- **Lighting:** Integrated LED sewing light
- **Dimensions (L x W x H):** 17.5 x 40 x 36 cm (approximate)
- **Weight:** 3.8 kg (approximate)
- **Power:** Mains powered (Batteries not required)

WHAT'S IN THE BOX

The following items are included with your MEDION MD 15694 Digital Sewing Machine:

- MEDION Digital Sewing Machine MD 15694
- Needles
- Bobbins
- Buttonhole foot
- Seam ripper (Trennmesser)
- Foot controller
- Oil bottle (empty)
- User Manual / Warranty Card



Image: Top-down view of the MEDION MD 15694 Digital Sewing Machine with the accessory compartment open, revealing included tools.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the included Warranty Card and the official MEDION website. Keep your purchase receipt as proof of purchase for warranty claims.

You can visit the official MEDION store for more information: [MEDION Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question