

[manuals.plus](#) /

› [AEG](#) /

› [AEG L6TB41269 Top-Load Washing Machine User Manual](#)

AEG L6TB41269

AEG L6TB41269 Top-Load Washing Machine User Manual

Model: L6TB41269

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your AEG L6TB41269 top-load washing machine. Please read these instructions carefully before installation, use, and maintenance. Keep this manual for future reference.

2. SAFETY INFORMATION

General Safety:

- Ensure the appliance is properly earthed.
- Do not allow children to play with the appliance.
- Keep packaging materials away from children.
- Do not install or use a damaged appliance.
- Always unplug the appliance before cleaning or maintenance.
- Do not pull the power cord to disconnect the appliance. Always grasp the plug.

Electrical Safety:

- Connect the appliance to a power supply with the correct voltage and frequency as indicated on the rating plate.
- Do not use multi-plug adapters or extension cords.

Water Safety:

- Ensure water inlet and drain hoses are correctly installed to prevent leaks.
- Do not use old hose sets; always use the new sets supplied with the appliance.

3. SETUP AND INSTALLATION

3.1 Unpacking

Remove all packaging materials, including the transport bolts, before using the appliance. Retain packaging for potential

future transport.

3.2 Location

Install the washing machine on a firm, flat, and stable surface. Ensure adequate ventilation around the appliance. Avoid direct sunlight and extreme temperatures.



Figure 1: Front view of the AEG L6TB41269 Top-Load Washing Machine.



Figure 2: The washing machine integrated into a bathroom setting, demonstrating its compact design.

3.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the drain hose is securely placed into a standpipe or over the edge of a sink, preventing siphoning.

3.4 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the outlet is easily accessible.

3.5 Leveling the Appliance

Adjust the feet of the washing machine to ensure it is perfectly level. This prevents excessive vibration and noise during operation.

3.6 First Use

Before washing laundry, run an empty wash cycle at 60°C with a small amount of detergent to clean the drum and remove any manufacturing residues.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features a program selector dial, function buttons, and an LED display for cycle information and settings.



Figure 3: Detailed view of the control panel with program dial, buttons, and LED display.

4.2 Loading Laundry

Open the top lid and press the SoftOpening button to gently open the drum cover. Load laundry evenly into the drum, ensuring not to overload. The maximum capacity is 6 kg.



Figure 4: The washing machine drum with the SoftOpening cover open, ready for loading.

4.3 Adding Detergent

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and fabric softener to the designated compartments. Refer to detergent packaging for dosage recommendations.



Figure 5: The detergent dispenser drawer, showing compartments for detergent and softener.

4.4 Program Selection

Turn the program selector dial to choose your desired wash program. The AEG L6TB41269 features **ProSense Technology**, which automatically adjusts wash time, water, and energy consumption based on load size. Available programs include:

- Cottons
- Cottons Eco
- Synthetics
- Delicates
- Wool/Silk (Woolmark Blue certified)
- Hand Wash
- Duvet
- Jeans
- Sport
- 20 min 3 kg (Quick Intensive)
- Super Eco
- Rinse Only
- Drain/Spin

The **Eco TimeSave** function allows you to combine ECO options with TimeSave for energy-efficient and shorter wash cycles.

4.5 Starting a Cycle

After selecting the program and any desired options (e.g., temperature, spin speed, delay start), press the Start/Pause button to begin the wash cycle.

4.6 Delay Start Function

Use the delay start function to postpone the start of a wash cycle by a set number of hours, allowing you to run the

machine at a more convenient time.

5. MAINTENANCE AND CARE

5.1 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.2 Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

5.3 Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot cotton wash with no laundry and a descaling agent) periodically to keep the drum clean and fresh.

5.4 Cleaning the Drain Filter

The drain filter should be cleaned regularly to prevent blockages. Refer to the diagram in the full manual for the exact location and procedure. Typically, it is located at the bottom front of the appliance.

6. TROUBLESHOOTING

If you encounter an issue, consult this section before contacting service. Many common problems can be resolved by following these steps.

- Appliance does not start:** Check if the power plug is inserted, the door is closed, and the Start/Pause button has been pressed. Ensure the water tap is open.
- Water does not drain:** Check if the drain hose is kinked or blocked. Clean the drain filter.
- Excessive vibration or noise:** Ensure the appliance is level and all transport bolts have been removed. Check if the load is unbalanced.
- Poor washing results:** Check detergent dosage, water temperature, and program selection. Avoid overloading the drum.
- Error codes on display:** Refer to the full user manual for specific error code meanings and solutions.

7. SPECIFICATIONS

Model	L6TB41269
Type	Top-Load Washing Machine
Capacity	6 kg
Maximum Spin Speed	1200 rpm
Energy Efficiency Class	A+++ (according to older EU regulations; newer labels may show 'F')
Annual Energy Consumption	150 kWh (based on 220 standard wash cycles)
Energy Consumption per 100 cycles	83 kWh
Water Consumption per cycle	43 L

Noise Level (Wash)	56 dB
Noise Level (Spin)	77 dB
Dimensions (H x W x D)	89 cm x 40 cm x 60 cm
Voltage	220-240 V
Special Features	ProSense Technology, SoftOpening Drum, Eco TimeSave

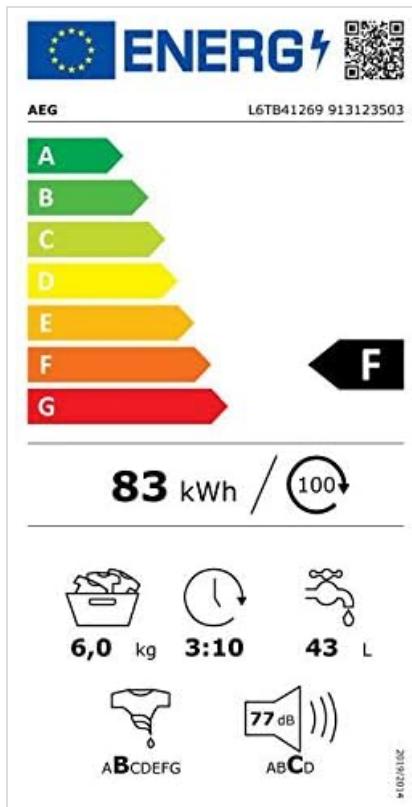


Figure 6: Energy label for the AEG L6TB41269 washing machine, showing energy consumption and other metrics under current EU regulations.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the separate warranty document provided with your appliance or contact your retailer. For technical support or service, please contact AEG customer service. Have your model number (L6TB41269) and serial number ready when contacting support.

© 2023 AEG. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - L6TB41269

 <p>USER MANUAL</p> <p>AEG</p>	<p><u>AEG L9FEA966C Washing Machine User Manual</u></p> <p>User manual for the AEG L9FEA966C washing machine, detailing installation, operation, safety, and advanced features like Wi-Fi connectivity and SoftWater Technology. Visit aeg.com for support.</p>
 <p>USER MANUAL</p> <p>AEG</p>	<p><u>AEG L6FBSPEED Washing Machine User Manual</u></p> <p>Comprehensive user manual for the AEG L6FBSPEED washing machine, covering installation, operation, safety, maintenance, and troubleshooting for optimal performance. Learn about features like ProSense technology and Soft Plus.</p>
 <p>USER MANUAL</p> <p>AEG</p>	<p><u>AEG L8FB786CBS Washing Machine User Manual</u></p> <p>Comprehensive user manual for the AEG L8FB786CBS washing machine, covering safety instructions, product description, technical data, installation, usage, care, troubleshooting, and disposal.</p>
	<p><u>AEG SKP11GW3 Stacking Kit Installation Guide</u></p> <p>This guide provides step-by-step instructions for installing the AEG SKP11GW3 stacking kit, allowing a tumble dryer to be safely placed on top of a washing machine. It details parts, assembly, and essential safety precautions, including mandatory wall securing.</p>
 <p>AEG</p> <p>LTR7E373C</p> <p>Washing Machine</p> <p>DISCLAIMER</p> <p>QR code</p>	<p><u>AEG LTR7E373C Washing Machine User Manual</u></p> <p>This user manual provides comprehensive instructions for the AEG LTR7E373C washing machine, covering safety information, installation, operation, maintenance, and troubleshooting.</p>
 <p>USER MANUAL</p> <p>AEG</p>	<p><u>AEG L6FBJ741N Washing Machine User Manual</u></p> <p>Comprehensive user manual for the AEG L6FBJ741N washing machine, covering safety instructions, product description, installation, operation, maintenance, and troubleshooting.</p>